



TEL: 877.1234567



CMYK



Solar LED String Light

Installation instructions for BHS135391711009/ YX-SL-L34-15RGBW

Better Homes
& Gardens®

 
OPERATION INSTRUCTIONS

SOLAR PANEL OPERATION

Charging Port 5V Micro USB: Open the silicone cover.

When charging: RED light indicates ON, GREEN light indicates FINISH. The light is displayed on the left side of the panel.

Modes: 8 Colors (Red, Green, Blue, White, Yellow, Cyan, Orange, Purple), Multi, Random, Strobe, Twinkle, Fade, Breathe, Flash, and Auto)

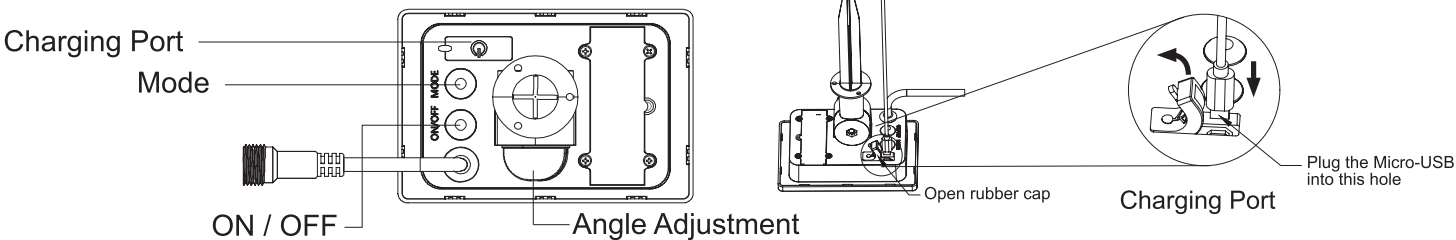

REMOTE CONTROL OPERATION



Use handheld remote control (D) for on/off control, dimming, and color temperature control. Remove plastic tab from battery door before use. See table below for button function.

To replace remote control's battery (E), follow directions on the back of remote control (D) to slide battery drawer out. Replace battery (+ side up) and slide battery drawers back in place


Turn ON			Turn OFF
Slow down	Speed up	Decrease the luminance	Increase the luminance
Red	Green	Blue	Warm White
Yellow	Cyan	Orange	Purple
Full color (the eight colors will light stably in a random way)	The eight colors will twinkle in a random way	the eight colors change in sequence (with base color)	the eight colors change in sequence(without base color)
color fading of eight colors	color dimming of eight colors in sequence	eight colors flash in sequence	Autocycle Modes

BUTTON CELL/COIN BATTERY WARNING

This Product contains a button cell/coin battery to provide power for the Handheld Remote Control.

Please read the following warning carefully:

 - Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Compatible battery type CR2025, 3V Nominal Battery Voltage.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 140 °F(60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

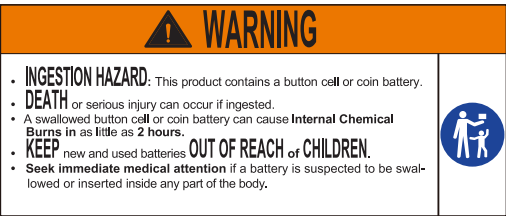

Solar LED String Light

Installation instructions for BHS135391711009/ YX-SL-L34-15RGBW

 
Better Homes
& Gardens®

CARE AND MAINTENANCE

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown and break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lamp-holders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes in order to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

Replacing the battery: Use a screwdriver to unscrew the battery cover and replace the battery, then re-assemble the unit. Use only Lithium Ion 18650 rechargeable battery type (3.7V 2200mAh).

IMPORTANT: Dispose of the battery in accordance with local, state, and federal regulations.

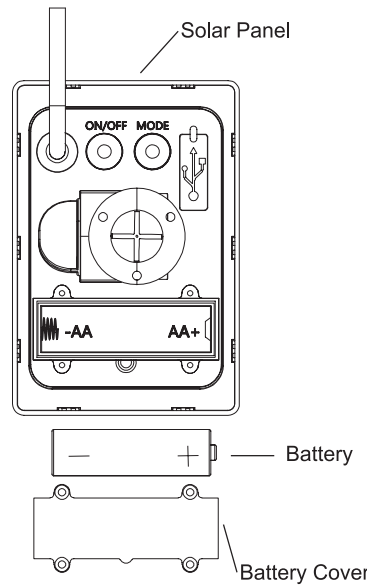

TROUBLESHOOTING

- The light does not come on at all:
 - Power off and make sure all lamps are tightly secured.
 - Ensure the string light is securely fastened to the solar panel.
- The nightly run time is shorter than normal.
 - The battery is not fully charged. Ensure the solar panel is located in an area where it can receive the maximum amount of full, direct sunlight every day. Keeping the solar panel clean is equally important to ensure the maximum charging performance.
 - The battery is reaching the end of its useful life. Replace with Lithium Ion 18650 rechargeable batteries.
- The solar light does not turn on at night.
 - The solar light is installed too close to other light sources, which may keep the solar light from turning on at night. Relocate the fixture or eliminate the other light sources.
- Micro USB is not charging the solar panel.
 - Check the USB plug for dirt or defects. Make sure the plug is properly inserted.
 - The battery may be weak or can no longer produce a charge. Replace the battery.
- Solar light is not responding to remote control.
 - Remote control battery is at the end of its life. Replace with appropriate battery type.
 - Solar light is not receiving signal from remote control. Ensure remote control is pointed at string light within appropriate signal distance.

 
If unable to fix any of the above issues, please consult a certified electrician.

90-DAY LIMITED WARRANTY: This Better Home & Garden™ brand string light carries a 90-Day Limited Warranty to the original purchaser. If, during normal use, this Better Home & Garden™ string light fails due to a defect in material and workmanship within ninety (90) days from the date of purchase, simply bring this string light with your original sales receipt back to your nearest Wal-Mart™ retail store. At its discretion, Better Home & Garden™ agrees to have the string light replaced with the same or similar Better Home & Garden™ product free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. Notwithstanding the foregoing, this limited warranty does not cover damage or failure caused by misuse or abuse including but not limited to improper installation, accident, unauthorized repair, maintenance, or modifications of the merchandise. This warranty: (1) excludes expendable parts including but not limited to light bulbs, batteries; (2) carries a 90-day finish warranty protecting finish against tarnishing, flaking, and discoloration; (3) shall be void if this rope light is not installed in the U.S.A; (4) does not cover products installed within three miles of saltwater coastline or any area prone to salt spray; and (5) does not cover any losses, labor, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state. Be careful, it is recommended that installation be done by a qualified professional; the purchaser has sole responsibility for proper installation in compliance with all state and local code requirements. Seller's employees are not qualified to advise you on the use of this Merchandise. Any oral representation(s) made will not be binding on seller or its employees. The rights under this limited warranty are to the original purchaser of the Merchandise and may not be transferred to any subsequent owner. This limited warranty is in lieu of all warranties, expressed or implied including warranties or merchantability and fitness for a particular purpose. Seller shall not be liable for any special, incidental, or consequential damages. The sole exclusive remedy against the seller will be for the replacement of any defects as provided herein, as long as the seller is willing or able to replace this product or is willing to refund the purchase price as provided above.

For questions / comments, technical assistance or repair parts –

Please call toll free at: 1-844-255-9692 (From Monday to Friday, 8am-5pm, Mountain Standard Time)

SAVE YOUR RECEIPTS. THIS WARRANTY IS VOID WITHOUT THEM.



CMYK



Solar LED String Light

Installation instructions for BHS135391711009/ YX-SL-L34-15RGBW

Better Homes
& Gardens®

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING: When using outdoor use portable lighting products, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Read and follow all instructions that are on the product or provided with the product.
- This product operates via 2200MAH Lithium 3.7V/1.5W solar panel. Do not operate with any other power supply.
- This product is not linkable. Do not connect more than one string light to the solar panel.
- Do not attempt to alter the product in any way.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not mount the string light or solar panel in or near running or standing water or near drains of any kind.
- Do not mount directly over pools, fountains, or other bodies of water. Ensure string light is mounted at least 5 feet (1.52 meters) away from the edge of any pools, fountains, or other bodies of water.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- The supply cord and string light must not be subject to push, pull, or other torsion forces.
- This is an electric product and is not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.

CAUTION: The solar panel contains lithium ion rechargeable batteries. Batteries must be recycled or disposed of properly. Do not dispose of batteries in fire. Use only Lithium Ion 18650 batteries (includes 1 rechargeable battery). Do not mix battery types.

WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN! Batteries are not a toy!

The remote control included utilizes a 3V CR2025 battery; If swallowed, it could cause severe injury or death in just 2 hours due to chemical burns and potential perforation of the esophagus. If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance. Do not dispose of batteries in fire as they may explode or leak. Please dispose of used batteries immediately and safely. Only replace with the same battery type.

- WARNING:**
- Adverse conditions of cold, extreme cold, extreme heat plus humidity and dampness may affect battery performance.
 - Do not open, short circuit, or mutilate batteries as injury may occur.
 - Batteries must be recycled or disposed of properly.
 - Always purchase the correct size and grade of battery most suitable for the intended use.
 - Clean the battery contacts and also those of the device prior to battery installation. Ensure the batteries are installed correctly with regard to polarity (+ and -).
 - Remove batteries from equipment when not in use for an extended period of time.

SAVE THESE INSTRUCTIONS

FCC Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device. This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Statement

1. This device complies with Pat 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This devicemay not cause harmful interference, and (2) This device must accept any interference received, including interference thatmay cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authorityto operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of theFCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installationThis equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with theinstructions, may cause harmful interference to radio communications. However, there is no guarantee that interference winot occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, whichcan be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one ormore of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help. "

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Solar LED String Light

Installation instructions for BHS135391711009/ YX-SL-L34-15RGBW

Better Homes
& Gardens®

⚠ WARNING: This product can expose you to chemicals including lead which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

PACKAGE CONTENTS:

 
- A: (1) 34 Foot Solar LED String Light
B: (1) Solar Panel
C: (1) Soil Mount Stake
D: (1) Handheld Remote Control
E: (1) CR2025 Button Battery

INSTALLATION INSTRUCTIONS


WARNING:

- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit power cord or wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock.
- String light sockets must be suspended so that lamps are facing downwards. DO NOT mount the light string with sockets facing upward. Lamps should hang freely with at least 3 inches of space from nearest object.
- Solar panel should be installed in an area that received direct sunlight. The solar panel will produce more hours of operation when installed in an area which is free from cover, shade, or shadowing.


1. Carefully remove all the parts from the packaging and check to ensure there are no cuts or nicks in the string light (A) nor damage to the pre-attached lamps. Ensure all bulb lenses are securely fastened.

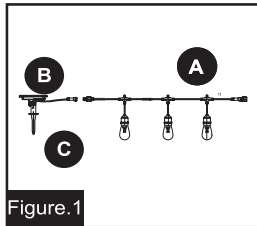

 
2. Determine the desired location of the string light (A) and the solar panel (B). Ensure the mounting location and solar panel are within reach of each other without causing strain to cables.

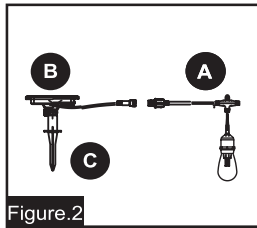

 
3. Insert the soil mount stake (C) into the solar panel (B).

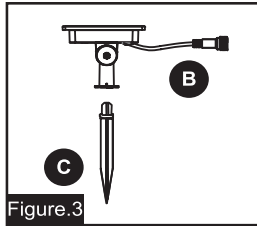

 
4. Ensure the connection between the solar panel (B) and the string light (A) is fully seated.

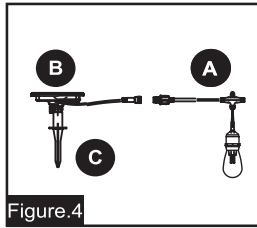

 
5. Securely attach string light (A) to a support structure using the eyelet holes at the top of each suspended socket and appropriate supporting hardware (eyebolts, brackets, etc. not included).

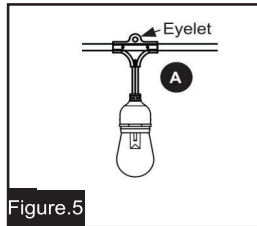

 6. Mount the solar panel (B) by gently pushing the soil mount stake (C) into the ground. Note: Do not use a hammer. If the ground is hard, use water to soften. Do not press down on the solar panel. This can damage the light. *The solar panel may additionally be mounted using the guide holes found on the post. Mounting hardware not included, please ensure to use appropriate mounting hardware for installation.

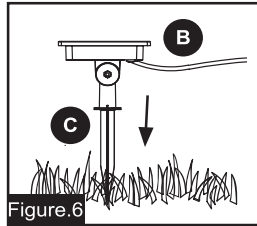

 7. Loosen the solar panel (B) knob in a counter-clockwise motion. Adjust the angle of the solar panel (B) to desired position for optimal sunlight exposure. Re-tighten the knob to secure in place.

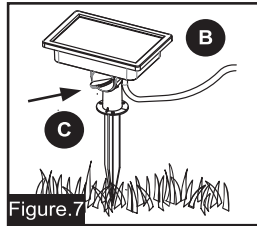

8. The solar panel (B) requires 6 hours of light for full charge. There is also a 5V Micro USB charging port on the back of the solar panel (B). The solar panel (B) will have 6-8 operating hours from a full charge.

