


EN

Instant print camera for kids

specification

It is recommended to read the instructions carefully before use and keep them properly for future use.

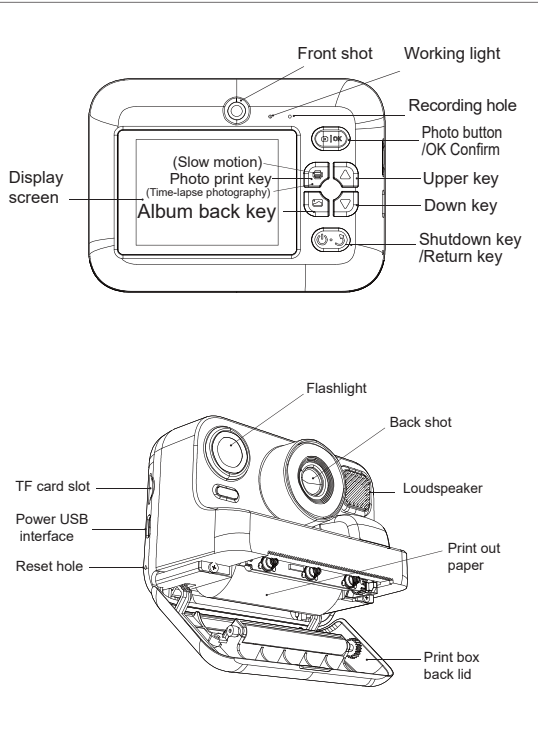

FUNCTION USAGE INTRODUCTION

【 Power/Return key 】
To power on that press and hold the power button until the blue indicator up , and press and hold the blue indicator again to turn off the power. Tap to return to the menu page or the previous screen.

Instant photo print mode
Method 1: In photo mode, press the Print button; Toggle print/no print mode. When page is displayed Print the icon, the camera will print the photo directly after taking the photo.

Method 2: Press the Print key while previewing the gallery photos Press the 【OK】 key again to print the selected photo in the gallery.

Tips:

- * Selecting the appropriate print concentration and print mode (which can be set in the menu) in different situations can improve the image effect of the lens.
- * If the camera does not print, check that the printer paper is not placed incorrectly.
- 1. Pay attention to the correct orientation of the paper.
- 2. When closing the printing paper bin door, ensure that the printing paper is exposed at least 3CM outside the bin door.

Flash mode

- * Long press the OK button to turn on/off the flash.

Photo mode

- * Press 【OK】 to take a photo. You can shoot and save video only when you insert SD card.
- * Press the "Up" button in photo mode Optionally add sticker/filter effects and sketch effects.
- * Long press the Print button to switch the selfie function
- * Press the Print button to switch to print/no print mode.
- * Press the Power/Return button to return to the menu

Musical mode

- * Press 【OK】 to pop up the music window.
- * Download music: Please insert the SD card into the camera and select Format TF card in the camera Settings. The camera will automatically build MP3 folder and download music in MP3 format to the MP3 folder.When copying audio files yourself, you need to copy them to the MP3 file directory, otherwise they cannot be played.
- * Press 【OK】 to play/interrupt music.
- * Press the Power/Return button to return to the menu

File mode

- * Press the left and right keys to view video and photos.
- * Press the 【OK】 key to start/stop playing the video.
- * Press the "Down" key to display the "Delete interface". Press the up/down key to select "Delete Current" o "Delete all", and then press the 【OK】 key to confirm to delete the photo/video.
- * Open print mode when viewing photos, then press 【OK】 to print photos.
- * Video format AVI; Photo format: JPG

Game mode

- * Press the left and right button to select the game, press 【OK】 to enter the selected game.
- * Press the Power/Return key to exit the game and return to the menu.

Settings

Press the left and right keys to select what needs to be set, select the icon and press the 【OK】 key to confirm the setting.

*Bluetooth printing:Press the settings button to select APP printing

*Color paper printing:Press the settings button to select printing paper

*Press the Power/Return button to return to the menu.

1.Please stay on this interface when using the mobile phone to connect to the printer!

2.Search for "joyprinter" in the mobile app market or scan the QR code below to download, install and use it.

*Pay attention to the direction oi the paper installation, if put it in wrong direction.it can not print with imago

Connect to a computer

Connect when there is TF card in the camera. Make sure the TF card can be read by the camera properly, and then connect the camera (on) to the computer via the USB cable. ICONS will appear on the screen to indicate that the computer has detected the TF card and is automatically installing the camera drive, and when the disk is opened on the computer, you can see that there are 3 folders inside.

Reservoir

PC camera

Video recording

OTHER FUNCTIONS

- Charge
When the power is low or automatically shut down, you need to connect the charging head to charge. The charging head needs to use the specified 5V/1000mA. Indicates that the device is fully charged.
- Reset reset In the process of using the camera, if there is a crash, card, no function of the button, can not turn off the machine and so on. You can reset the camera by inserting a paper clip into the reset hole.
- Standby
When the camera is not in use, it enters automatic standby mode and then automatically shuts down.
- USB flash drive and PC camera function
(1) The procedure when no card is inserted: Connect the USB to power on the PC camera.
(2) When there is a card, the procedure is as follows: Insert the SD card - Connect the USB power supply - SD card appears.

WARM REMINDER

- It is recommended to use a high-quality class 10 TF memory card with a maximum support of 256GB in FAT32 format.
- Do not release the USB connection and remove the micro SD card when downloading files from the camera.
- It is not recommended to use the camera while charging.
- When the camera cannot print, check whether the paper is installed correctly and the print mode is turned on.

Warning:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.