



ITEM: FBWM2601-FRA

When using your mouse, basic safety precautions should always be followed, including the following:

- Thank you for purchasing the Frappuccino Wireless Mouse, item FBWM2601-FRAP. A 2.4GHz USB receiver is included with your mouse. Please read this manual carefully **FIRST** in order to get the most out of your mouse.

- Radio Frequency: 2.4 GHz
- Power: 1 AA Battery (not Included)
- Compatibility: MAC OS and Windows PC devices
- Operating Distance: 10 meters max

- 2.4 GHz USB Receiver
- Wireless Mouse
- User's Manual With Warranty Information

In order to operate your mouse successfully, you will need to insert 1 AA battery (not included). To do so, follow the steps below.

1. Open the battery compartment located on the bottom of the mouse.
2. Insert 1 AA battery inside the battery compartment, making sure to insert it with the correct polarity (+,-) as shown on the battery compartment.
3. Once your battery is properly inserted, place the cover back onto the mouse.

For best results, always use new alkaline batteries.


- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Batteries are not to be inserted with the wrong polarity.
- Exhausted batteries are to be removed.
- The supply terminals are not to be short-circuited.

Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer of your battery for further information

©2026 Sakar International
195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com

To connect your mouse to your computer, follow the steps below:

1. Take out the USB receiver that is located inside of the battery compartment.
2. Insert the USB receiver into one of your computer's USB ports.
3. Make sure that your computer is powered on.
4. To power on, slide the power switch located on the bottom of your mouse to the ON position, and to power off, slide the power switch to the OFF position.

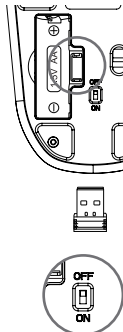

- The mouse will stop working once you pull the receiver out of the USB port or when the computer is turned off.

- You can store your mouse's USB receiver inside your mouse, making it more portable and easy to store when not in use.

If your Mouse is not working properly, please try the following:

- Make sure that both your mouse and your computer are powered on.
- Make sure the distance between the two devices is less than 10m.
- Make sure that your computer has suitable drivers for recognizing a USB mouse.
- Make sure the batteries in your mouse have been inserted correctly.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Receiver FCC ID: 2BRYN-DG

This warranty covers the original consumer purchaser only and is not transferable.
This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering modification or accident.

Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Properly completed and signed, this bill of sale, together with evidence, evidencing that the product is within the applicable warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective product(s) along with this bill of sale to the address for the nearest explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product, any products damaged by the shipping agent, or any other items not covered by warranty will be returned unrepaired.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE SPECIFICALLY DESCRIBED HEREIN, ARE MADE BY EITHER PARTY. THE SELLER HEREBY DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE, NO OTHER EXPRESS WARRANTY OR REMEDY SHALL BE GIVEN BY THE SELLER WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE SELLER. THE SELLER SHALL NOT BE LIABLE FOR INCIDENTAL, DIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO, LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF DATA OR RECORDS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE ABOVE. THE SELLER'S OBLIGATION TO THE BUYER SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE BUYER OR THE PURCHASER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured under license by Sanyo Electric Co., Ltd. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.