



USER MANUAL

OUTDOOR 6-OUTLET POWER STAKE WITH TIMER AND WIRELESS REMOTE CONTROL



BAUHN
SPORTS & TECHNOLOGY

US Model: RC0025_10667 863566 11/2026

V01/0426

MADE IN THAILAND

IMPORTED & SOLD
EXCLUSIVELY BY
BATHING, ALDI
IL 60510



1 GENERAL INFORMATION



This user manual (hereafter referred to as the "manual") is part of this product, and contains important information on assembly and use. Read this manual carefully, especially the chapter **SAFETY**, before using the product. Failure to do so may result in personal injury and/or damage to the product.

Keep this manual for future use and reference. Make sure to include this manual when passing the product on to third parties. If you require a digital copy of this manual, please contact customer service.

2 SAFETY

2.1 SIGNAL SYMBOL/WORD DEFINITIONS

The following symbols and signal words are used in this manual.



WARNING!

» This signal symbol/word designates a hazard with moderate risk that, if not avoided, may result in death or severe injury.

NOTICE!

» This signal word warns against potential damages to property.



INFO

» This symbol provides you with useful supplementary information on its operation.

2.2 SYMBOL EXPLANATION

The following symbols are used in this manual, on the product or on the packaging.



Read the manual.



Alternating current



Direct current



Keep batteries away from children.



ETL

US

Intertek

5030848

The ETL Listed Mark is proof that the product has been independently tested and meets the applicable published standard.

1

— Never operate this product if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the product to a service center for examination and repair.

SAVE THESE INSTRUCTIONS

WARNING! HEALTH HAZARDS!

There is a high health hazard if children or animals swallow the batteries.

- » **Choking hazard** – small parts. Not for children under 3 years.
- » Store the batteries so they are not accessible to children and animals. If you suspect a battery has been swallowed, seek immediate medical advice.
- » This product is not intended for use by children and contains small parts that may pose a choking hazard to children under the age of 3. Keep the product out of the reach of children and pets.
- » WARNING: Chemical Burn Hazard. Keep batteries away from children.

WARNING! RISK OF EXPLOSION!

Improper handling of batteries increases the risk of explosion.

- » Non-rechargeable batteries are not to be recharged.
- » Rechargeable batteries are to be removed from the product before being charged.
- » Different types of batteries or new and used batteries are not to be mixed.
- » Batteries are to be inserted with the correct polarity.
- » Exhausted batteries are to be removed from the product and safely disposed of.
- » If the product is to be stored unused for a long period, the batteries should be removed.
- » The supply terminals are not to be short-circuited.
- » Under abusive conditions, liquid may be ejected from the battery; avoid contact. Liquid ejected from the battery may cause irritation or burns.
- » If battery fluid comes into contact with skin or eyes, wash and rinse the affected area immediately with clean water. Consult a physician.
- » The battery must not be disassembled or thrown into a fire and it must not be short-circuited.
- » Remove the battery before disposing of the product.

2.4 ADDITIONAL SAFETY INSTRUCTIONS

NOTICE! RISK OF DAMAGE!

Improper handling of the product may result in damage to the product.

- » Never expose the product to high temperatures (heaters etc.).
- » Never attempt to clean the product by immersing it in water and do not use a steam cleaner to clean it. Otherwise, you could damage the product.
- » Stop using the product if its plastic parts exhibit cracks or breaks or are deformed. Only replace damaged parts with corresponding original spare parts.

2.5 INTENDED USE

- The product is exclusively designed for controlling the on/off of outdoor devices plugged into the product, such as outdoor lighting. This product is only intended for private household use and not for commercial use.
- Only use the product as described in this manual. Any other use is considered improper and may result in damage to property or persons.
- The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

4



WARNING!

INGESTION HAZARD: This product contains a button cell or coin battery.

IMPORTANT INSTRUCTIONS



WARNING


- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The product contains a coin battery (CR2032, 3 V ---).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 95°F (35°C) rating or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Always completely secure the battery compartment.
- If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

2

3 PRODUCT OVERVIEW

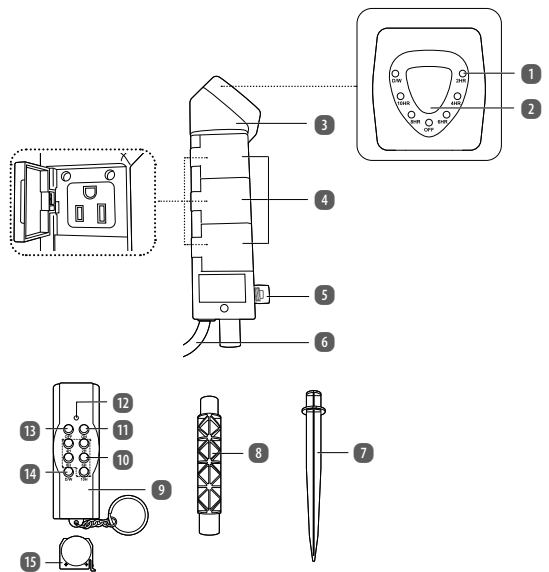

- | | |
|---|---------------------------------------|
| 1 LED lights (Power, Dusk/Dawn, 2HR, 4HR, 6HR, 8HR, 10HR) | 9 Remote control |
| 2 Control button | 10 Hours button (2H, 4H, 6H, 8H, 10H) |
| 3 Main unit | 11 ON button |
| 4 Power outlet with hinged cover, 6x | 12 LED light |
| 5 Main power button | 13 OFF button |
| 6 Electrical cord | 14 Dusk/Dawn button |
| 7 Lower stake | 15 Battery tray |
| 8 Upper stake | 16 Stake adaptor |

5

2.3 GENERAL SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- THIS PRODUCT IS A “GROUNDED” DEVICE. The male plug contains a ground pin and is only intended for use with a three-pronged grounded outlet.
- Do not modify, splice or repair the product.
- Fully insert the plugs.
- The product is for adult use only. Do not allow children to use or play with the product.
- Do not exceed the electrical load ratings.
- Fully extend the electrical cord before using.
- Do not use the product as a permanent source of power.
- Do not immerse the product into water or other liquids.
- Do not allow the product to be subjected to extreme heat or cold.
- Do not use the product if damage is found.
- CAUTION: Risk of Fire! Not for permanent installation. Use only with outdoor equipment such as Christmas trees or other seasonal decorative-lighting products having a total of 13 ampere maximum. Do not install or use this product for more than a 90-day period.
- If using Christmas trees or decorative-lighting products that are not marked with an ampere rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with midjet (push-in) lamps to this product.
- The product must be plugged into a GFCI-protected receptacle.
- If using the product for an extended period of time (greater than 90 days), please consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area that power is needed. Please contact a licensed electrician for proper installation of permanent wiring.
- After completion of installation, the connector shall be maintained a minimum of 6 inches above ground.
- Keep children under close supervision when using the timer around them.
- Never reach to retrieve an electrical device if it has fallen into water.

3

4 FIRST USE

4.1 CHECKING THE PRODUCT AND PACKAGE CONTENTS

NOTICE! RISK OF DAMAGE!

If you are not cautious when opening the packaging with a sharp knife or other pointed object, you may quickly damage the product.
» For this reason, be careful when opening it.

1. Take the product out of the packaging.
2. Check to make sure that all parts are included (see chapter **PRODUCT OVERVIEW**).
3. Check whether the product or the individual parts are damaged. If this is the case, do not use the product.

4.2 BASIC CLEANING

1. Remove the packaging material.
2. Clean all parts of the product before first use as described in the chapter **CLEANING AND MAINTENANCE**.

5 INSTALLATION

1. Turn the threaded head of the lower stake **7** into the lower end of the upper stake **8**. For a lower height, insert the stake adaptor **16** into the lower stake.
2. Turn the threaded head of the upper stake or stake adaptor into the lower end of the main unit **3**.
3. Insert the main unit far enough into the ground (lawn, flower bed) with the assembled stake. Do not use any force (e.g. hammer blows) to insert the product. This will damage the product.
4. Fully extend the electrical cord **6** and insert the plug into a GFCI-protected receptacle.
5. Open the hinged covers of the power outlets **4** and insert the plugs of your outdoor devices into the power outlets.
6. Before using the remote control **9** for the first time, remove the plastic battery tab from the battery compartment of the remote control to activate the pre-installed battery.

6 OPERATION

6.1 MAIN POWER

- Press the main power button **5** to turn the main power on.
- Press the main power button to turn the main power off.

6.2 OPERATE WITH REMOTE CONTROL

1 INFO

» The distance between the remote control **9** and the product must be within 100 feet (30.4 m). The LED light **12** of the remote control will blink once when a button is pressed.

6.2.1 SWITCHING ON OR OFF

- Press the ON button **11** to switch the product on. The “Power” LED light **1** will light up. When switched on, the product will provide continual power to all power outlets **4** until another operating mode is selected.
- Press the OFF button **13** to switch the product off. The “Power” LED light will turn off.

6

6.2.2

TIMER MODE

–

Press one of the hours buttons **10** (2H, 4H, 6H, 8H, Or 10H) to activate the product. The product will activate for the selected hours. The selected “hour” LED lights **1** will light up.

6.2.3

DUSK/DAWN MODE

–

Press the dusk/dawn button **14** once. The “dusk/dawn” LED light **1** will light up and the product will activate between dusk and dawn.

–

Press the dusk/dawn button and then one of the hours buttons **10** (2H, 4H, 6H, 8H, or 10H). The product will activate after sensing dusk for the specific hours you have selected. The “dusk/dawn” and the selected “hour” LED lights will light up.

6.2.4

INTERFERENCE

•

Interference from external light sources will not interfere with an active timer program.

•

In the dusk/dawn mode, interference from external light sources will deactivate the product if the interference lasts for more than 15 minutes. The product will only activate when darkness is restored.

6.3

OPERATE WITH CONTROL BUTTON

–

Press the control button **2** repeatedly to switch on or off the product, select a timer setting or a dusk/dawn setting. Refer to the LED lights **1** for the current selection while pressing the control button. See chapter **OPERATE WITH REMOTE CONTROL** for details of each setting.

6.4

OVERLOAD PROTECTION

–

The product has a reset function for overload protection. If the power turns off unexpectedly, unplug all devices, reset the main power button **5** and reconnect the devices.

7

REPLACING THE BATTERY


1

INFO

»

If the remote control is not responsive or not working, the battery power level may be low or empty. Replace the inserted battery (Type: CR2032, 3 V) as follows:

A

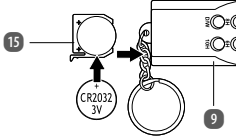

1.

Turn the remote control **6** over.

2.

Push the tab on the battery tray **15** while pulling the battery tray out from the remote control (see Fig. A).

3.

Take the inserted battery out of the battery tray and dispose of it in accordance with applicable regulations (see chapter **DISPOSAL**).

4.

Place a new battery of the same type into the battery tray. Make sure the polarity is correct (see Fig. A).

5.

Slide the battery tray back onto the remote control so that it locks into place (see Fig. A). You have successfully replaced the battery.

7

8

CLEANING AND MAINTENANCE

8.1

CLEANING

⚠

WARNING! RISK OF ELECTRIC SHOCK!

The improper use of the product can lead to an electric shock.

» Always disconnect the product from the power supply before cleaning.

» Never dismantle the product to clean it.

NOTICE! RISK OF SHORT CIRCUIT!

Water or other liquids that have penetrated the housing may cause a short circuit.

» Make sure that no water or any other liquids get into the housing.

» Never immerse the product in water or other liquids while cleaning or operating it.

» Do not hold the product under running water.

NOTICE! RISK OF DAMAGE!

Improper handling of the product may result in damage to the product.

» Do not use any abrasive, aggressive cleaners or hard brushes to clean the product. They could damage the surfaces.

1.

Disconnect the product from the power source and unplug all connected devices before cleaning.

2.

Wipe down the housing and the remote control **9** using a slightly moist cloth.

3.

Before continued use or storage, rub all parts dry with a clean cloth.

8.2

STORAGE

All parts must be completely dry before being stored.

– To avoid battery leakage, remove the battery from the remote control **9** and keep the battery away from children and pets before storage.

– Always store the product in a dry area.

– Protect the product from direct sunlight.

– Store the product so that it is not accessible to children.

9

TECHNICAL DATA

Product model:

RC0025_10667

Remote control model:

RCOR25_10667

Power input:

125 V~

Power output:

13 A / 125 V / 1,625 W

Electrical rating:

13 A / 125 V / 1,625 W / 60 Hz

Power cord:

6 ft (1.8 m) AWG 16/3 SJTW

Frequency:

433.92MHz

Battery:

1 × CR2032, 3 V

Product code:

863566

8

10

FCC STATEMENT

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

•

Reorient or relocate the receiving antenna.

•

Increase the separation between the equipment and receiver.

•

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

•

Consult the dealer or an experienced radio/TV technician for help.

Responsible party

ALDI

BATAVIA, IL 60510

www.aldi.us

RECEIVER MODEL: RC0025_10667

TRANSMITTER MODEL: RCOR25_10667

FCC ID: 2BRYR-DR2097RA

11

DISPOSAL

11.1

DISPOSING OF THE PACKAGING

–

Sort the packaging before you dispose of it. Dispose of paperboard and cardboard with the recycled paper service and wrappings with the appropriate collection service.

11.2

DISPOSING OF THE PRODUCT

–

Dispose of the product in accordance with the applicable laws and regulations for your country.

–

Please ensure your recycling information applies to local regulations and the EPA recommendations (www.epa.gov).

Batteries and rechargeable batteries may not be disposed of with household waste!

As the end user you are required by law to bring all batteries and rechargeable batteries, regardless whether they contain harmful substances* or not, to a collection point run by the city, county, or state, or to a retailer, so that they can be disposed of in an environmentally friendly manner.

*labeled with: Cd = cadmium, Hg = mercury, Pb = lead

The battery must be removed for separate disposal.

Company Name:

Deer Electric Appliance Co.,LTD

Address:

119 Moo 5 Soi 12, Highway 36, Makhankoo, Nikompattana Rayong 21180, Thailand

9

10

10

11

12

13

14