 



Meet Your Robot Kit

Know Your Robot Buttons


Getting Started – Setup

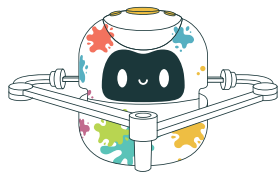

 AI Drawing Robot x1

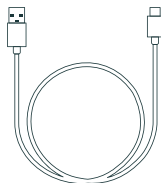




Type-C Charging Cable x1

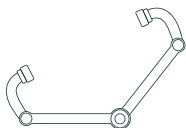 

Mechanical Arm x1




   Drawing Pens x2

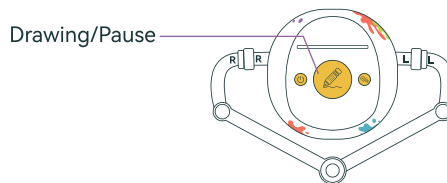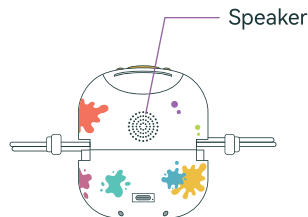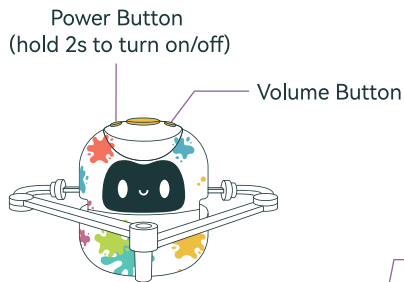


Step 1: Assemble the Arm

 Insert the mechanical arm firmly into the robot's side sockets.

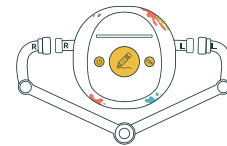


Step 2: Choose a Flat Surface

 Place the robot on a clean, flat table for better stability.

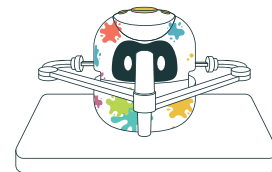

Step 3: Insert and Adjust

 
1. Open the robot's cap.
2. Insert the pen straight into the holder.
3. Tighten the cap clockwise to secure the pen.
4. Press any button to complete installation.

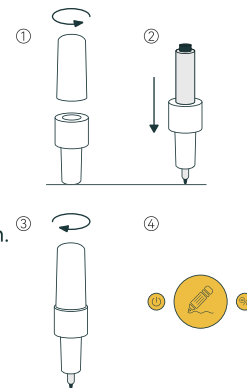

Tip:

If the pen skips or doesn't touch paper well, lower it by 1–2mm.

 Network Configuration

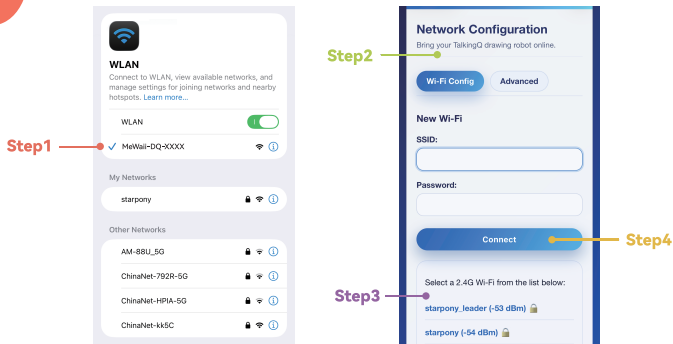

Step 1: Switch on the robot for the first time. On your mobile phone, open Wi-Fi settings, find "MeWai-DQ-XXXX", and connect to it (See Figure 1).

Step 2: After a successful connection, wait 1-3s. A network setup page will pop up automatically (See Figure 2).

Step 3: Select your Wi-Fi network from the list on the pop-up page (Only supports 2.4GHz Wi-Fi).

Step 4: Input the correct password and tap "Connect" to finalize the setup.

 
Let's Start Drawing!

1. Click the top button to initiate voice dialogue.
2. Clearly state your command to the robot (e.g., "Please draw an apple").
3. The robot starts drawing.

Reminder:

Avoid touching or moving the robot while it's drawing.

Charging Your Robot

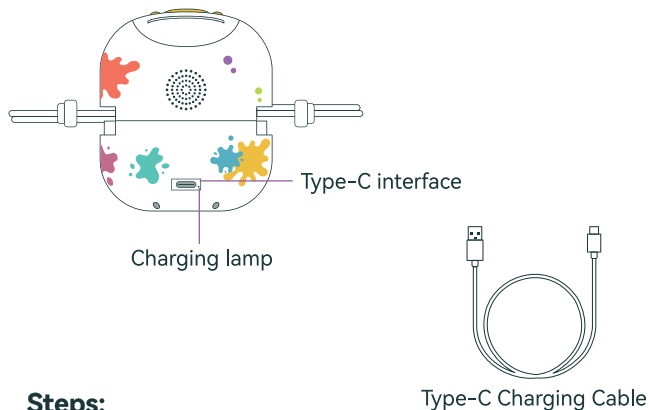

Steps:

- Plug in the TYPE-C cable.
- Charging lamp will turn red (fully charged = green).

⚠ Warnings:

- Do not draw while charging.
- Avoid using damaged cables or power supplies.

⚠ Avertissements :

- Ne pas utiliser pendant la charge.
- Évitez d'utiliser des câbles ou des adaptateurs secteur (blocs d'alimentation) endommagés.

Troubleshooting

Common Issues & Fixes:

Issue	Solution
No sound	Check volume, restart
Robot not moving	Ensure card is inserted, check pen holder
Drawing is off	Ensure robot is on flat surface, adjust pen depth
Unable to charge	Ensure the power cord is plugged in and the charging cable works
Command unrecognized	check network connection or if the robot is preparing to draw

Robot Specifications

Name	Drawing Robot
Weight	450g
Size	11*11*13cm
Battery	1500mAh
Charging	DC5V-1A

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.