

Jexuiop



USER'S MANUAL

 


NETFLIX




Content

SETUP WIZARD

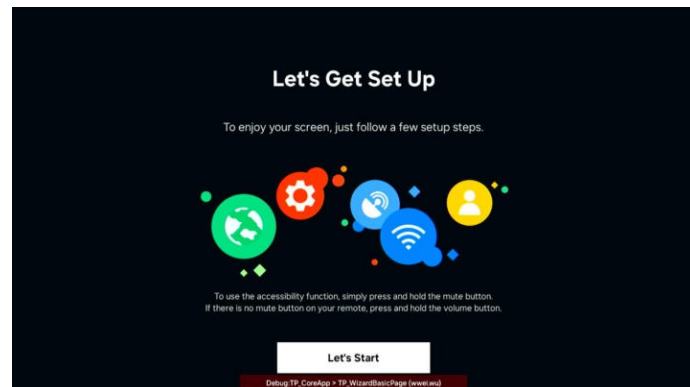


HOME PAGE

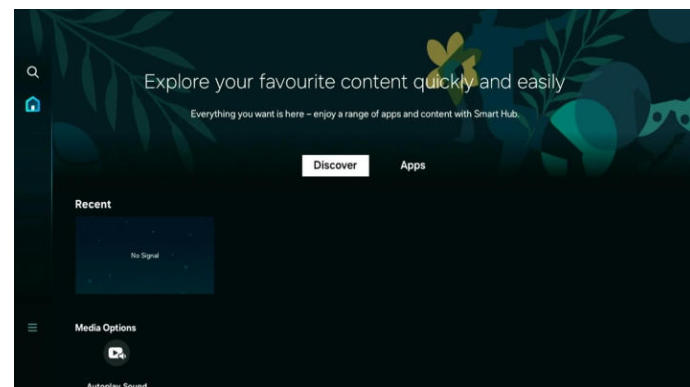 


TV SETTING

 Picture
Sound
Connection
Broadcasting
General&Privacy
Support

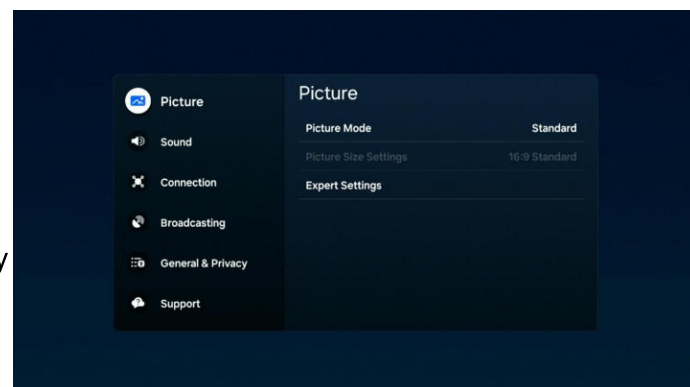


Setup Wizard

 
The system setting will appear when you open the TV on the first time. Please set according to the on-screen guide. Press **OK** button to start the setup.

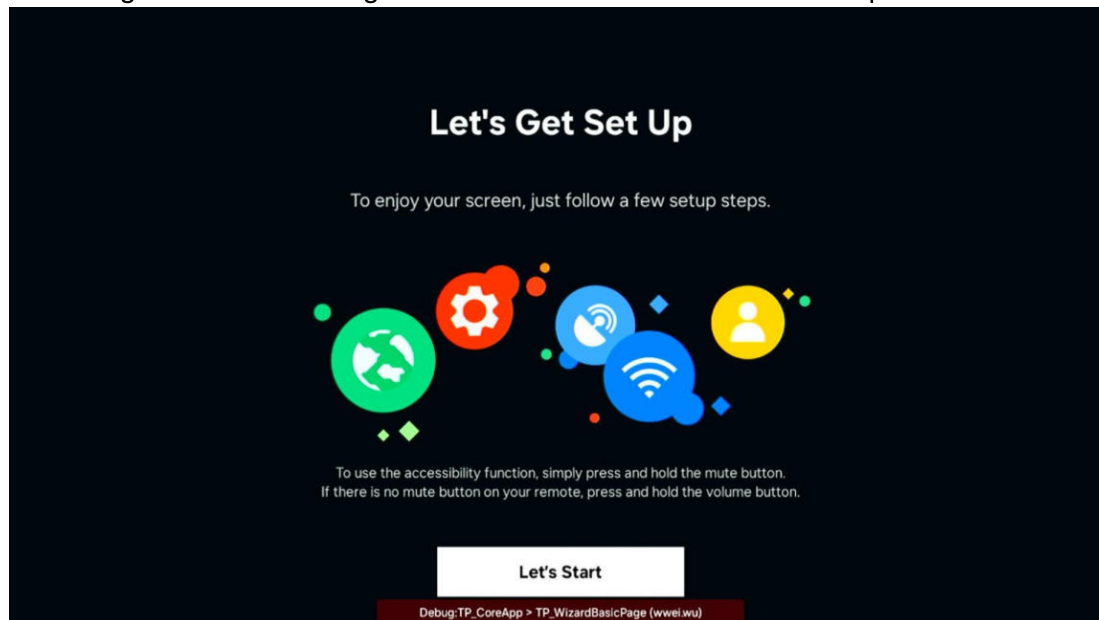

 
Press **▼/▲** button to select your country or region, press **OK** button to confirm and proceed to the next step.

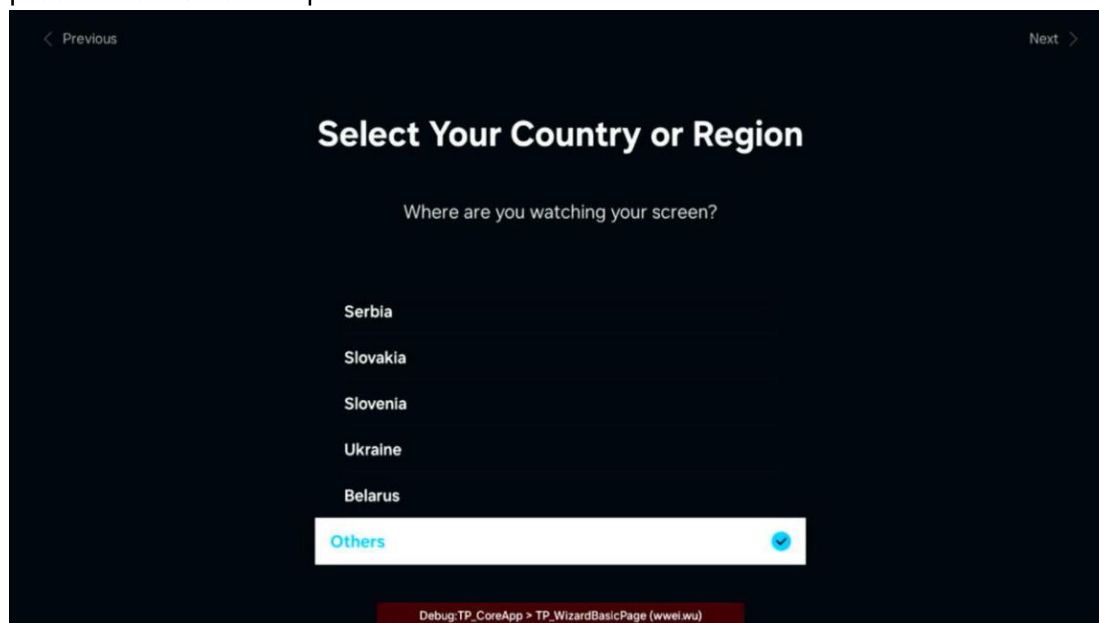


 Press ◀/▶ button to setup and choose to connect your devices to the screen then start setup.

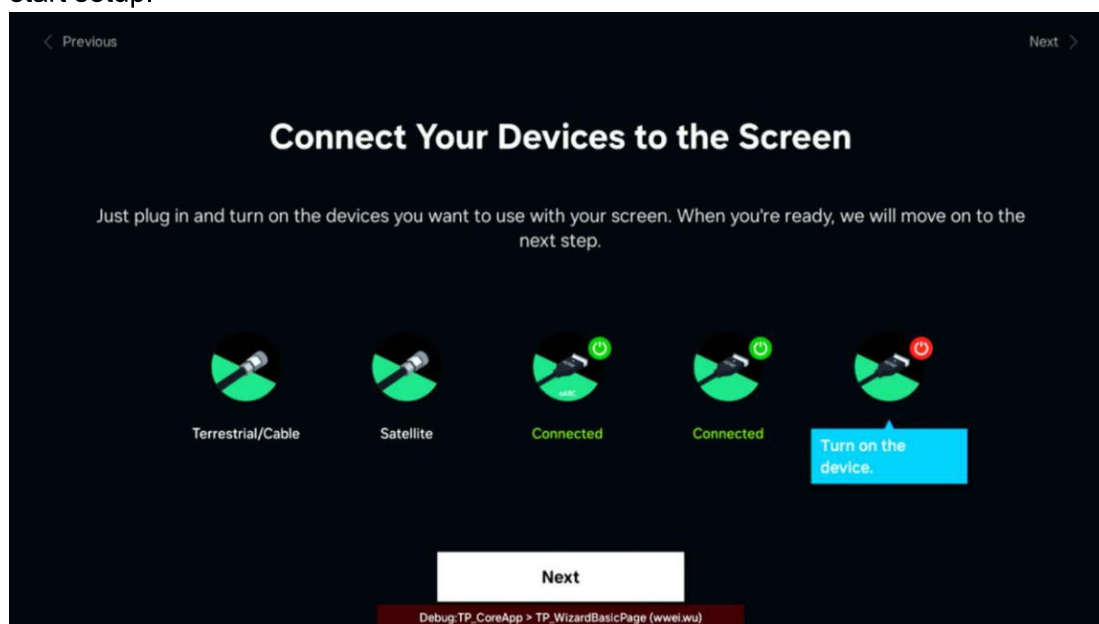


  Press ◀/▶ button to select the signal setup page. Select the connected aerial that you want to use to get channels, and select each item and choose the correct setting. Then select Next to search for channels.

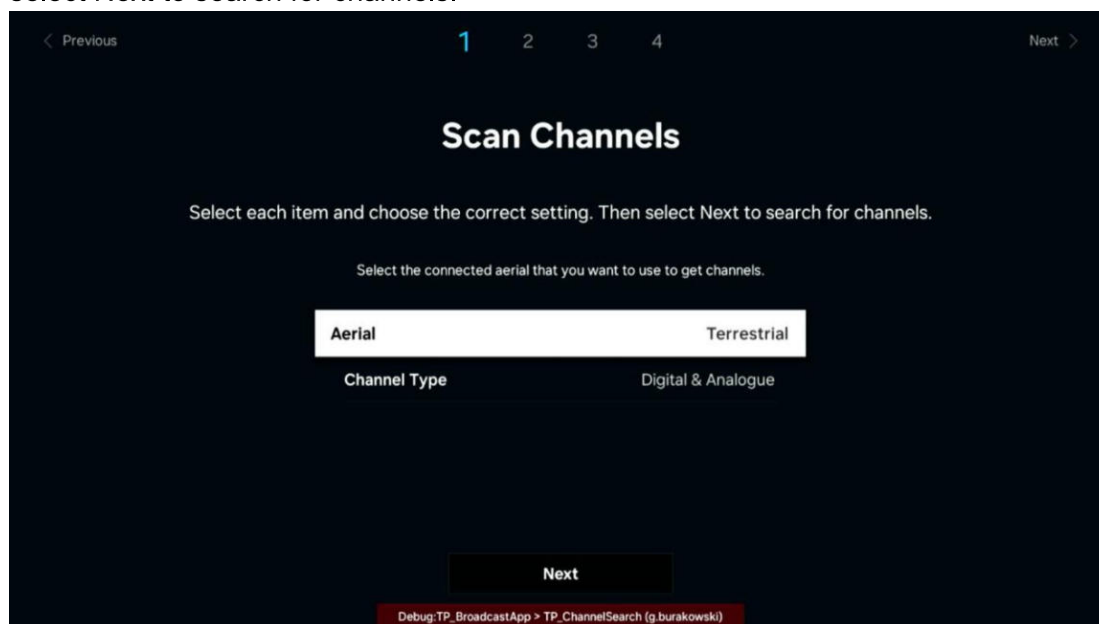

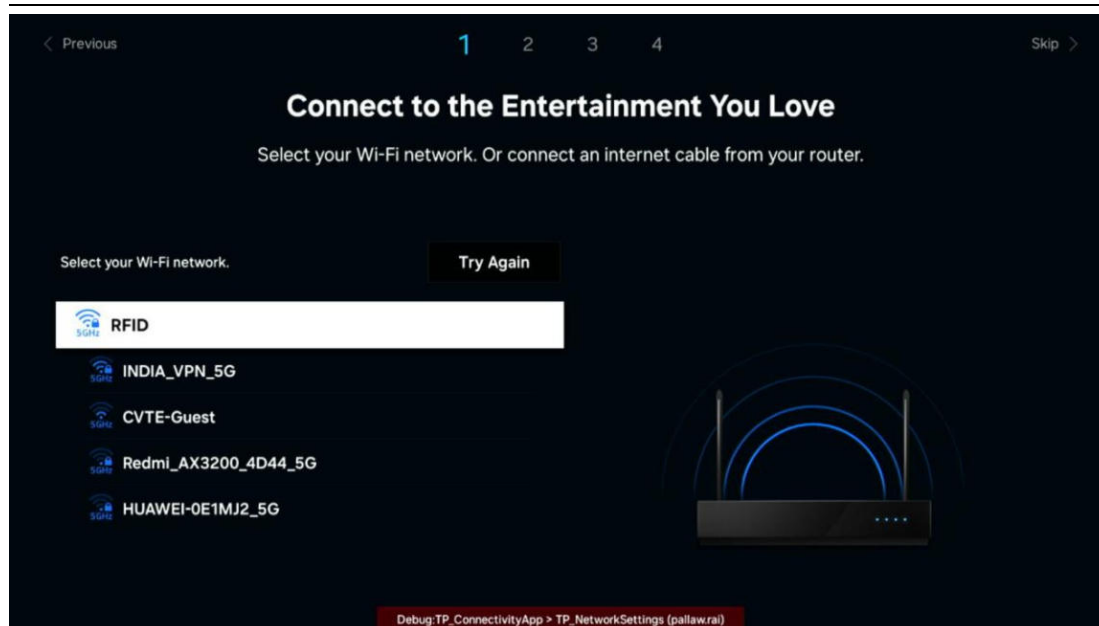

 Press ◀/▶ button to select Network and press **OK** button to turn to next page.

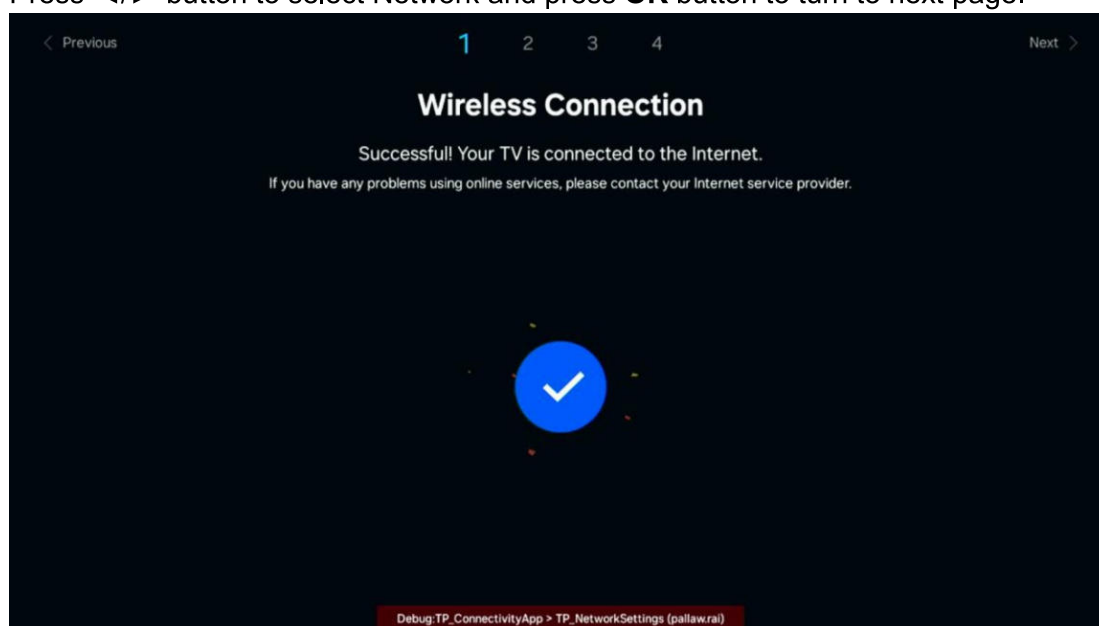

Select " OK " to agree to the Terms & Conditions and Privacy Notice, and then choose to enable specific additional service above by individually selecting.

Previous
2
3
4
Skip

Terms & Conditions and Privacy Notice

Your use of the Device is governed by the Terms & Conditions and Smart Hub Privacy Notice. You will need to agree and acknowledge your understanding of them to proceed with the setup.

Samsung Service: Terms and Condition

View details

Smart Hub Privacy Notice

View details

☐ Viewing Information Services

View details

☐ Interest-Based Advertisements Service Privacy Notice

View details

Click "I Agree to all" if you agree to the Terms & Conditions, read and understood the Smart Hub Privacy Notice, and want to enable ALL of the Additional Services above. You can also individually choose a specific Additional Service. If you do not wish to enable any of the Additional Services at this time, please click the "OK" to proceed with set-up.

☒ I agree to all

OK

Skip

 
Debug:TP_CoreApp > TP_DeviceDisclaimer (want_kim)

Previous
2
3
4
Next

Enjoy a Wide Range of Smart Features

Get a variety of services and features with your Samsung account:

- Enjoy films and shows with streaming apps
- Get content recommendations
- Connect and control IoT devices with SmartThings
- Benefit from Samsung services, such as the App Store, software updates and more

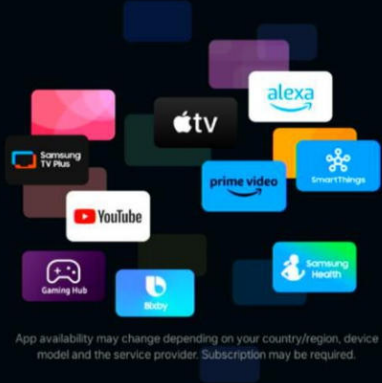


App availability may change depending on your country/region, device model and the service provider. Subscription may be required.


Start Setup


Debug:TP_CoreApp > TP_WizardBasicPage (wwwi.wu)

 Choose sign in the Samsung account or skip to next step.

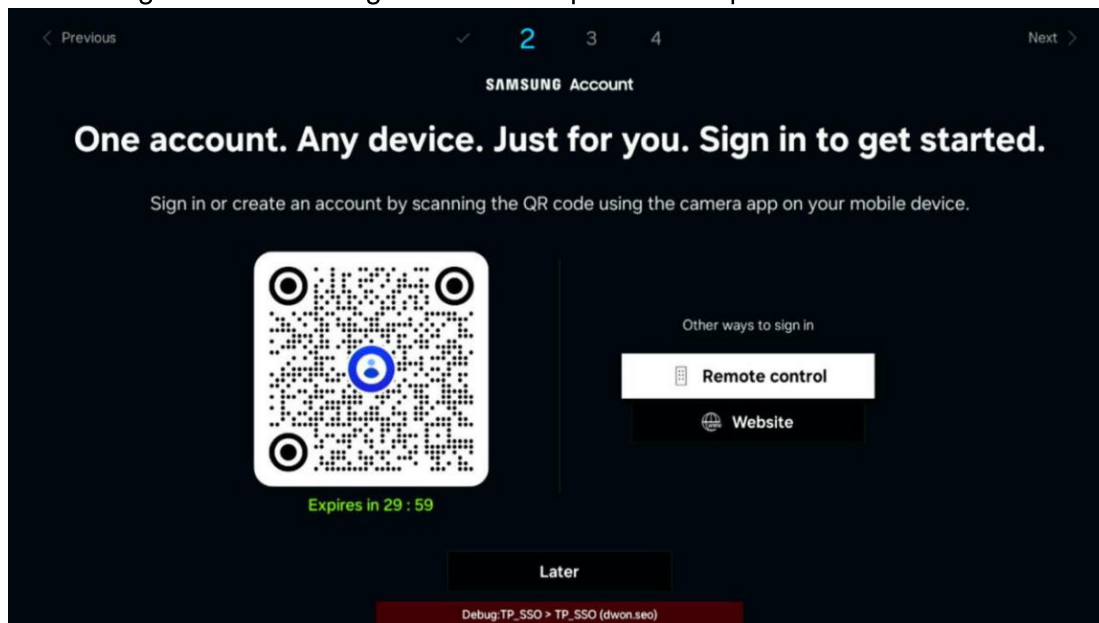


  Press ◀/▶/▼/▲ button to select TV source and scan channel

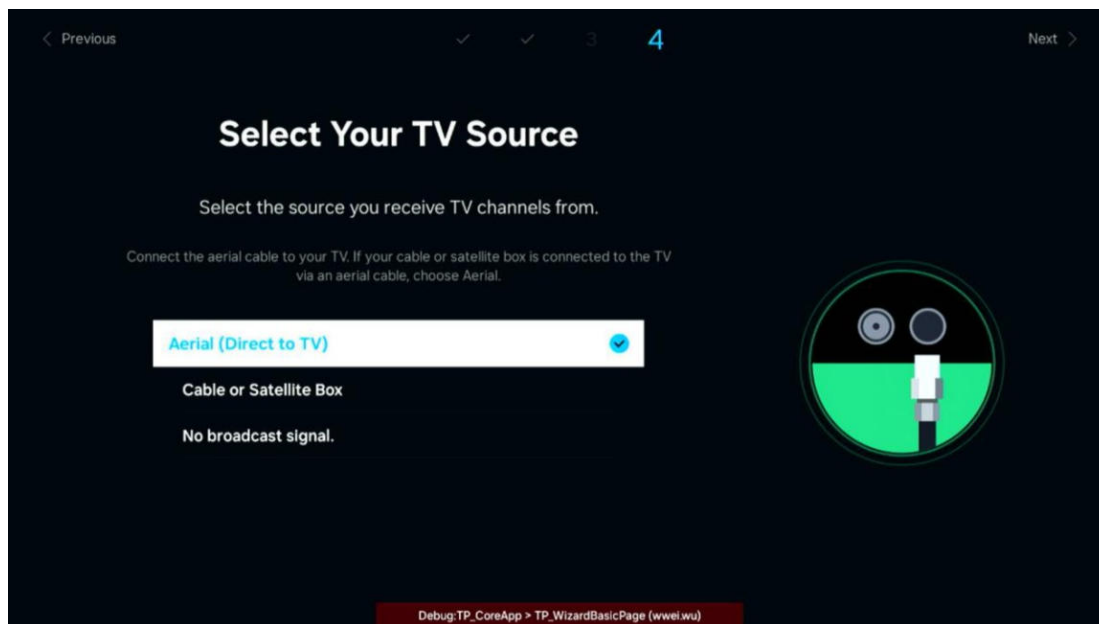

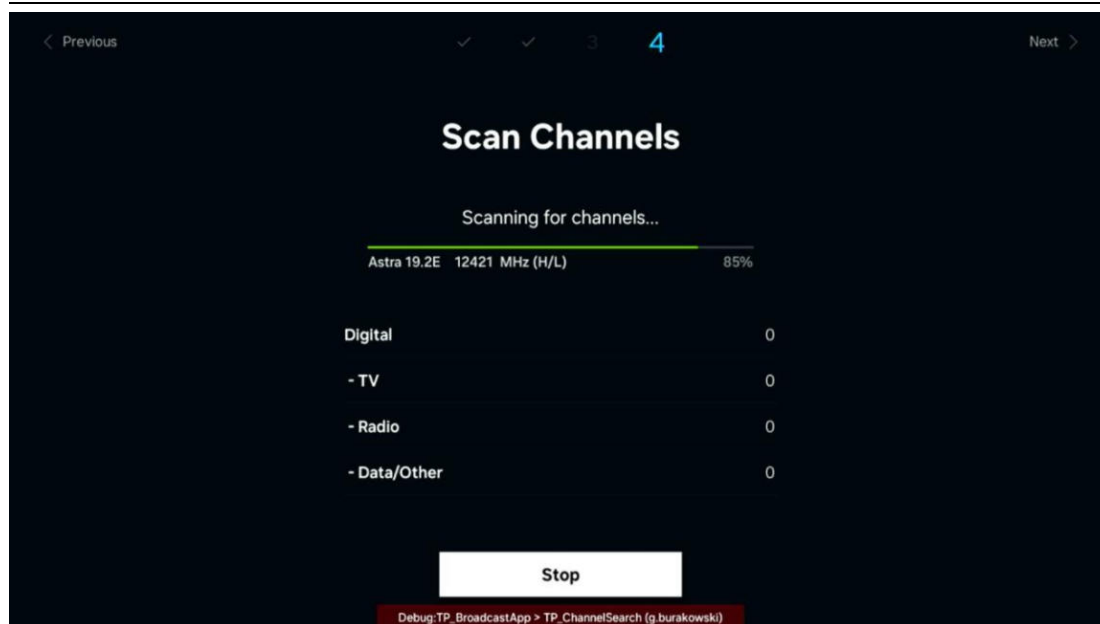


 Check the settings below to make sure everything's how you want it, then enter the next step.

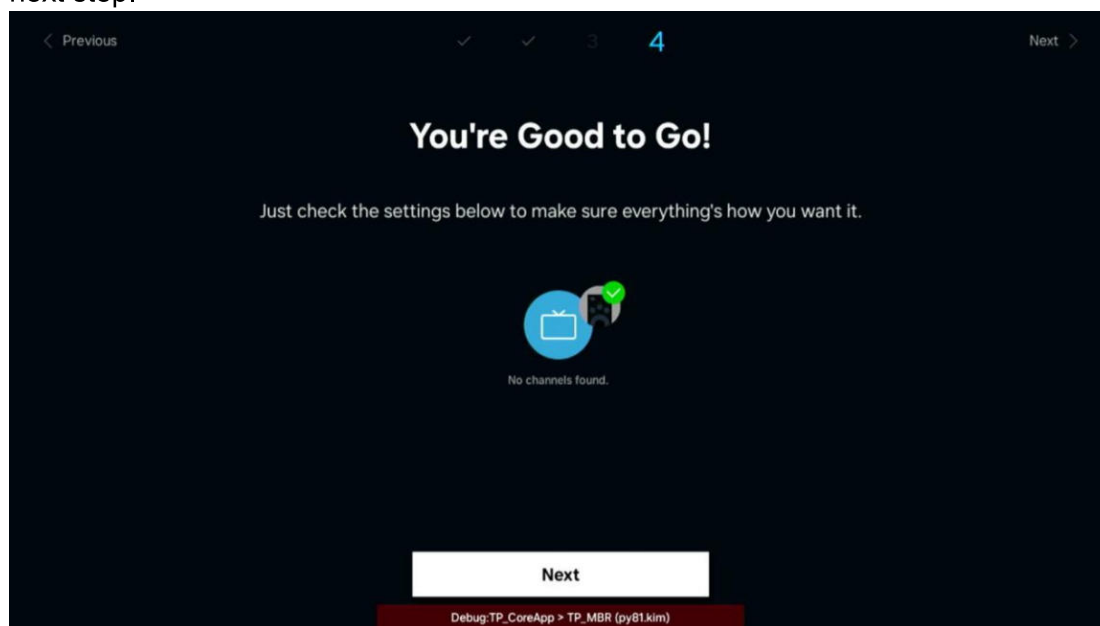

Home page

 Enter the Home page after Setup Wizard.

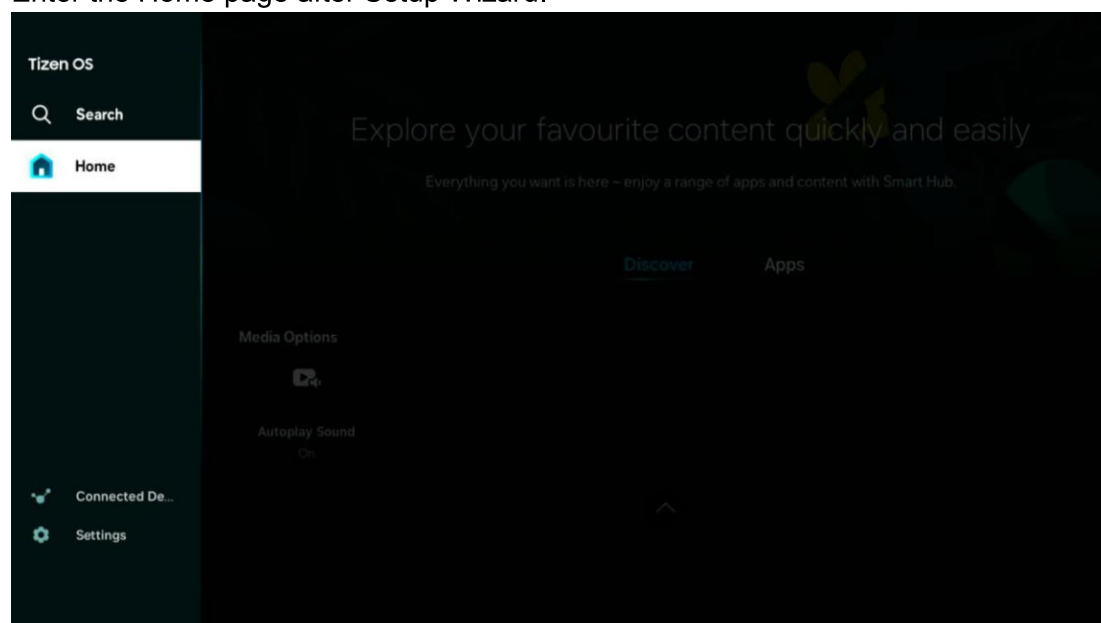



Search

Press ▼/▲/◀/▶ button to select Search, then press <OK> to enter.

You can search for channels, programs, movie titles and apps from Smart Hub.

  (Note: It only available when connected to the Internet.)

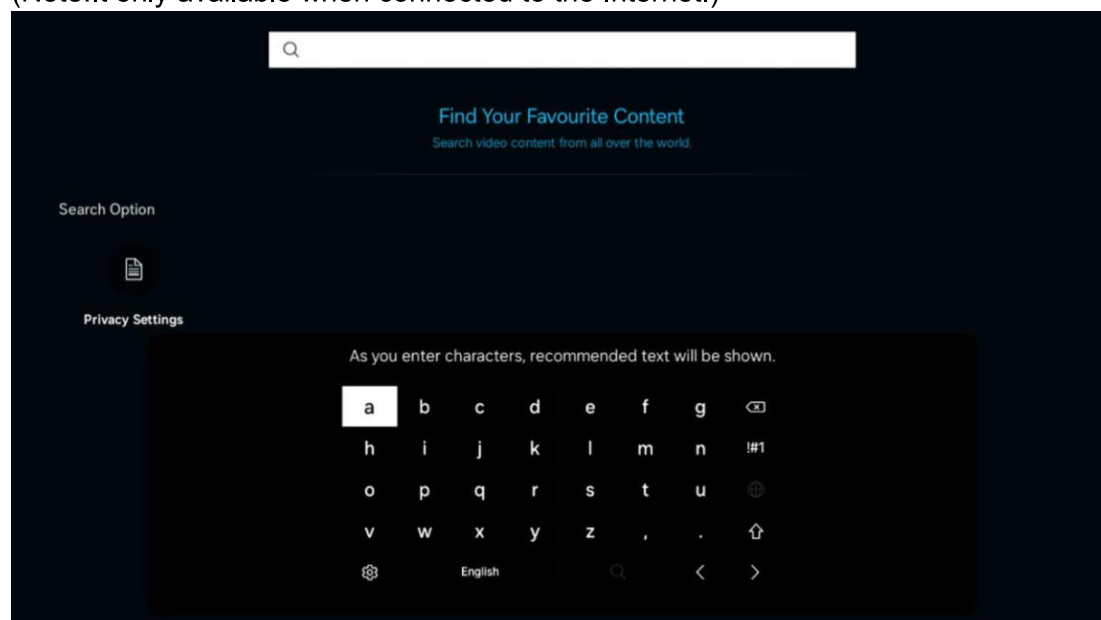


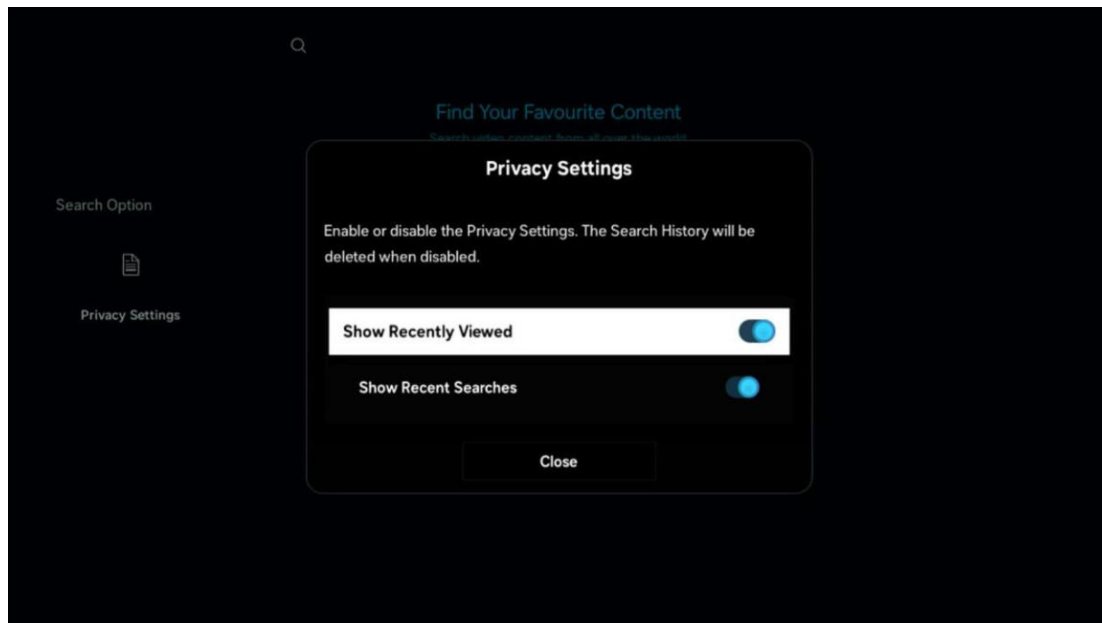


Home

Press ▼/▲/◀/▶ button to select Home, then press <OK> to enter.

  Press ◀/▶ button to select Discover/ Apps.

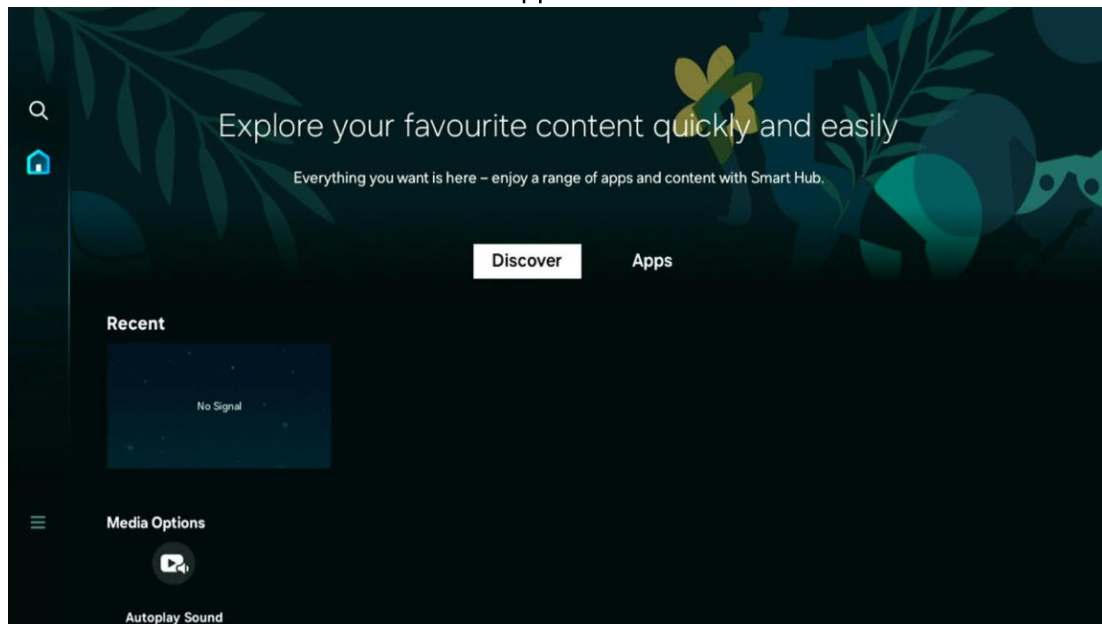

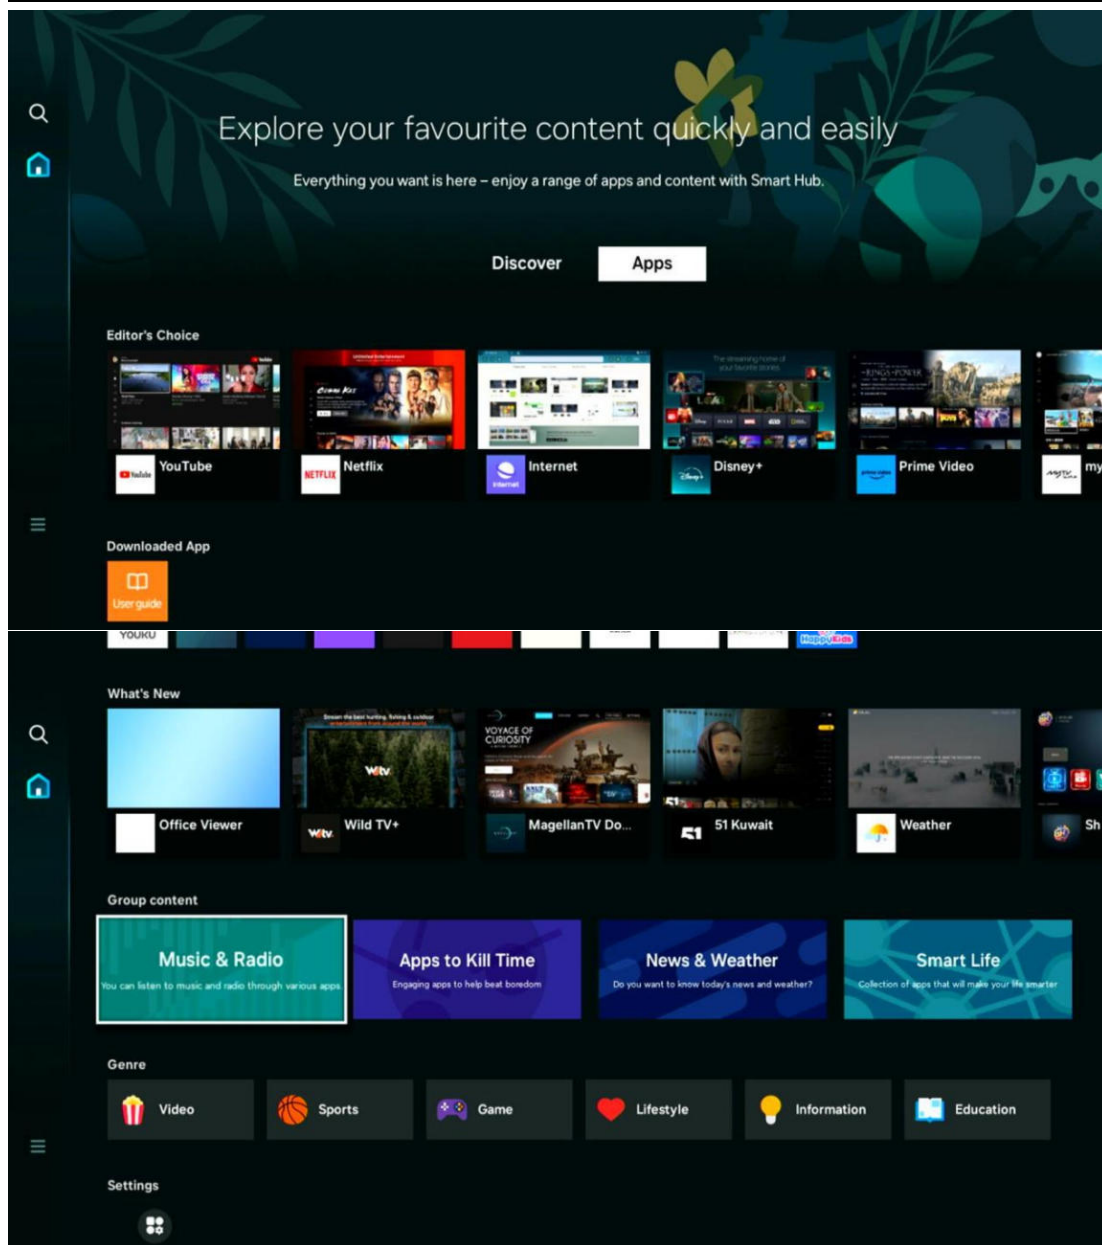


Source

Press ▼/▲/◀/▶ button to select Connected Devices, then press <OK>/▶ to enter.

You can select an external device connected to the TV.

 
(Optional:TV/HDMI1/HDMI2/HDMI3/AV/Connection Guide)

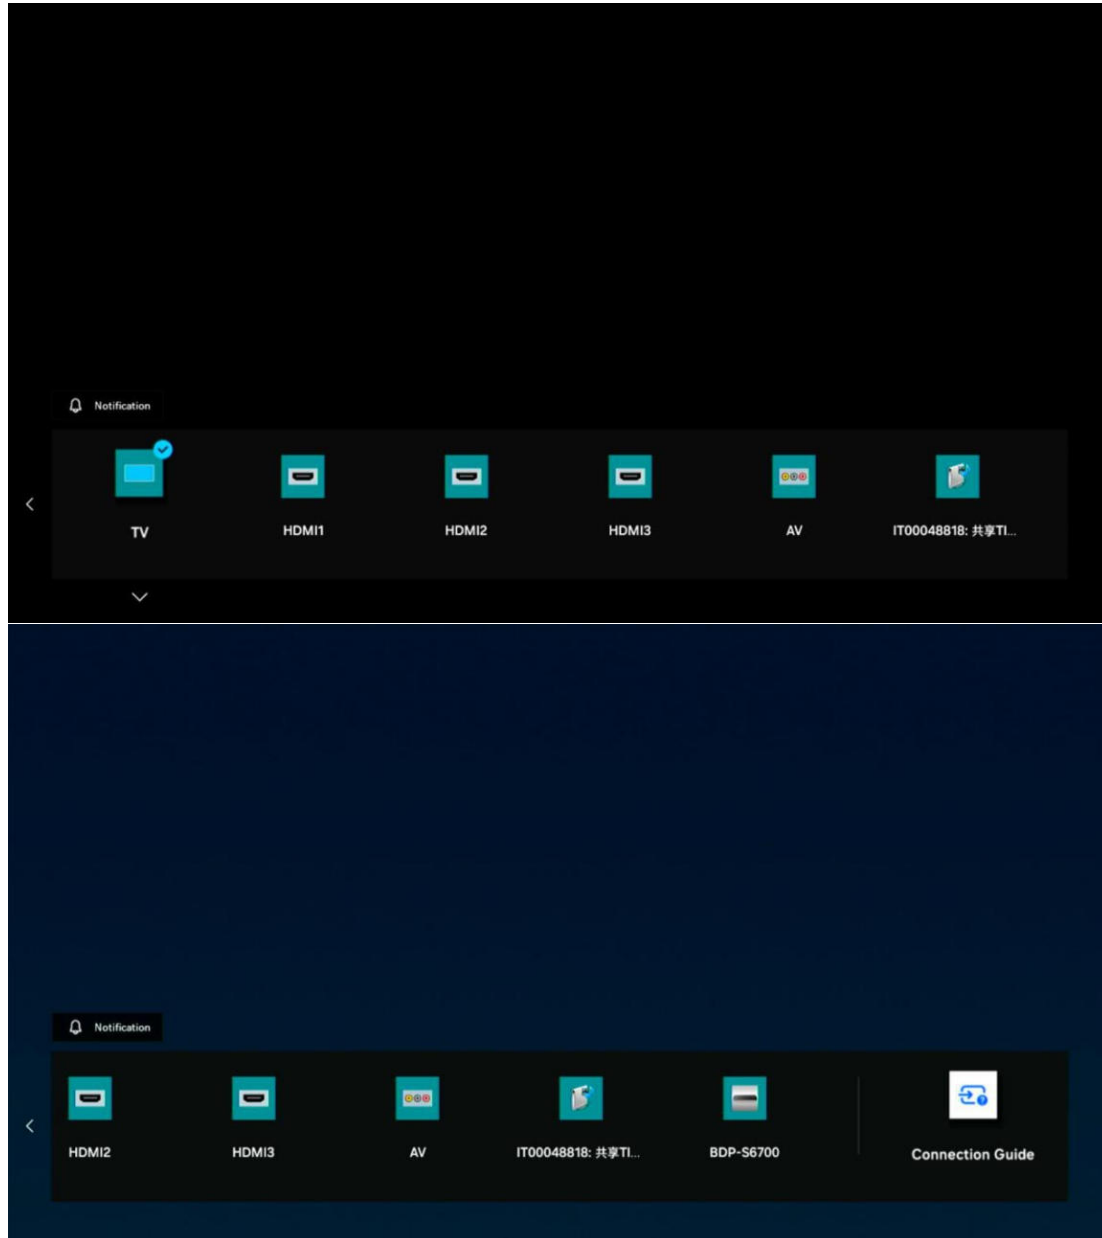


Settings

Press ▼/▲/◀/▶ button to select Settings, then press <OK>/▶ to enter.

  (Optional: All Settings/Sound Output/Backlight/Picture Mode/Sound Mode/Bluetooth Devices/LAN/Game Mode/Subtitle/Audio Language/Energy Saving Solution/Support/Sleep Timer/Edit List)

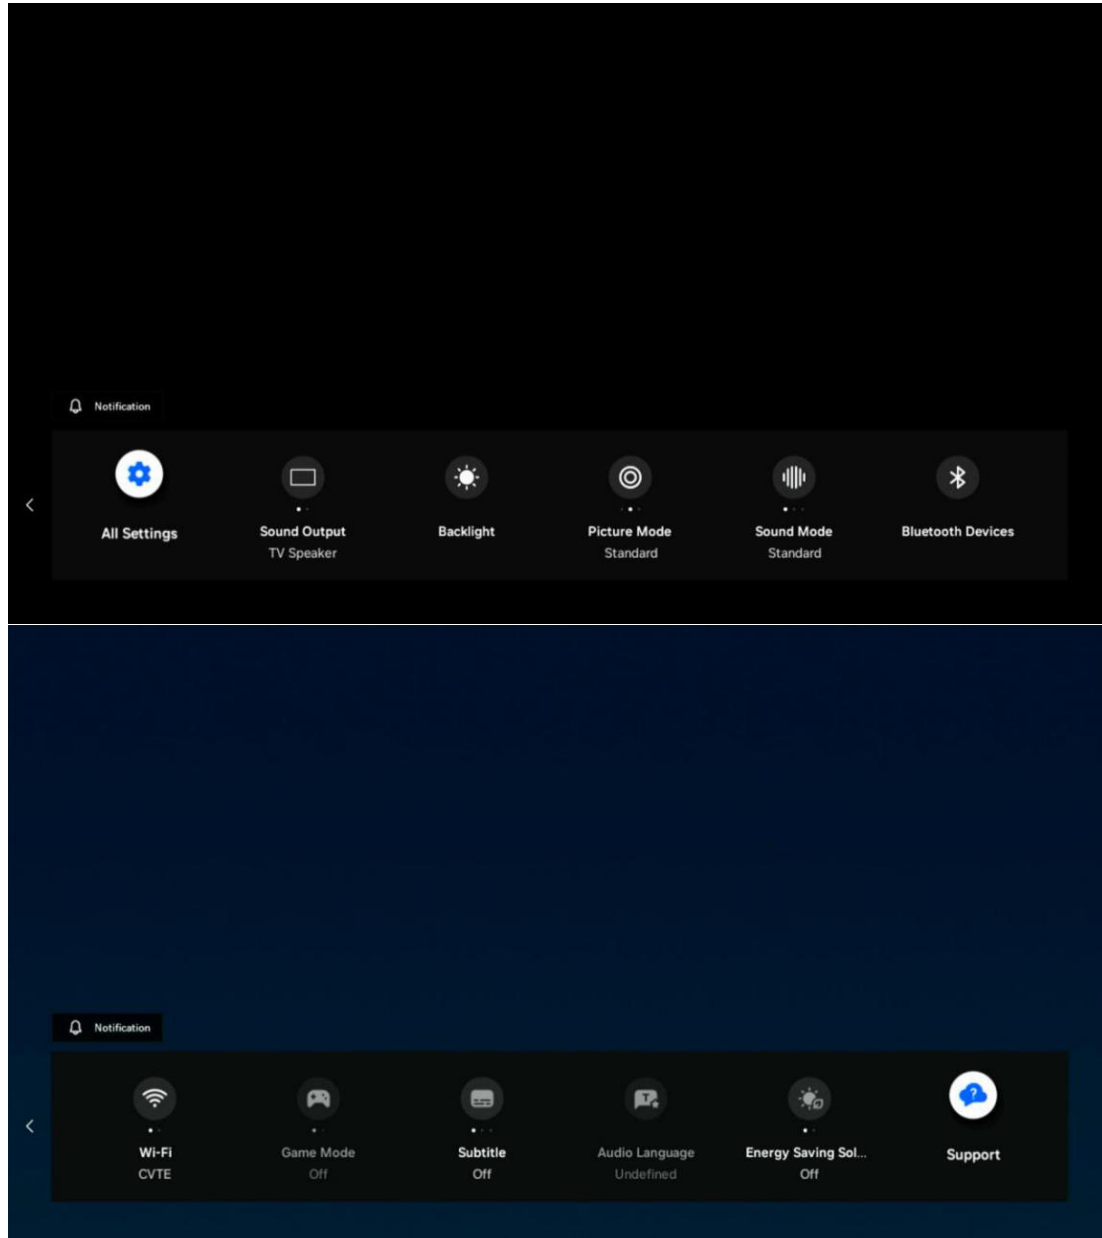


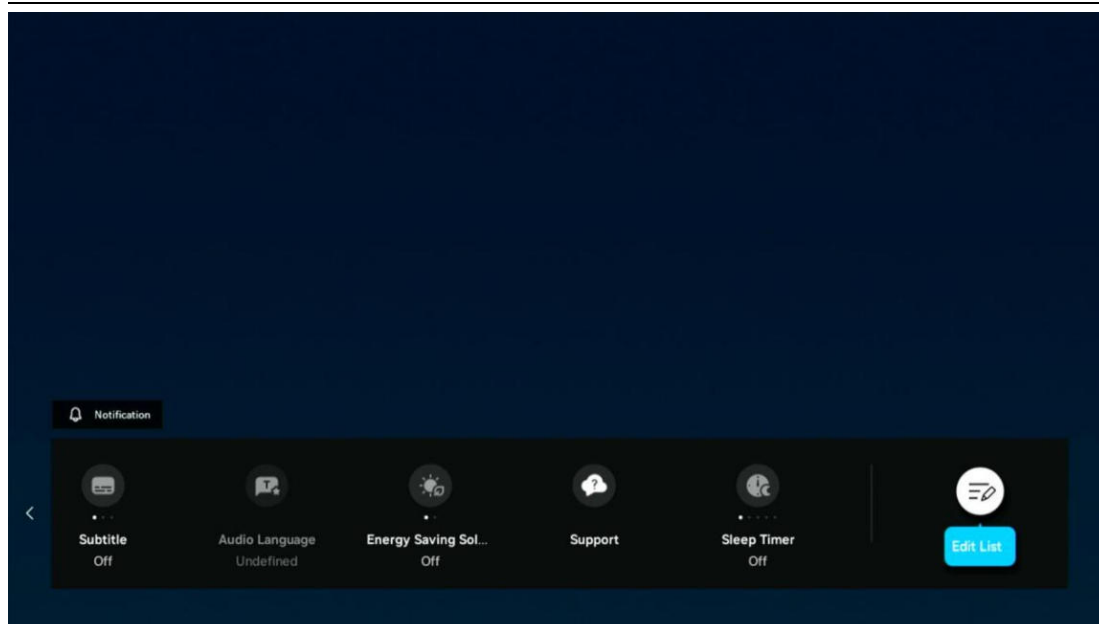

TV Setting

Press **SETTINGS** button to enter the TV Setting.

 Press ▼/▲ button to highlight the desired menu icon , and press **OK** button to select.
(Optional:Picture/Sound/Connection/Broadcasting/General&Privacy/Support)

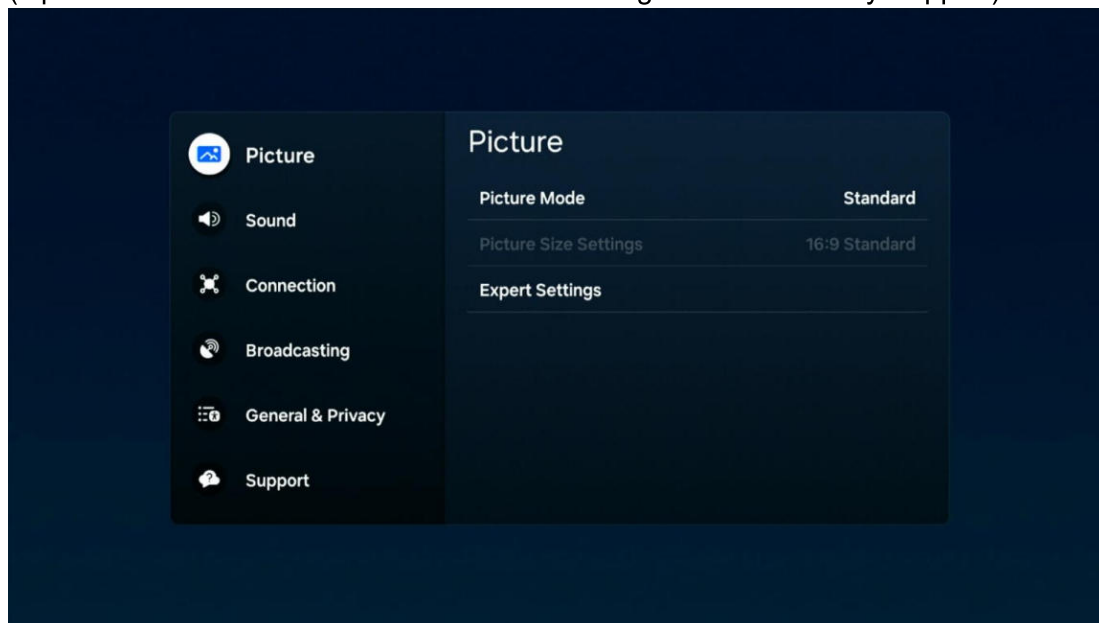


Picture

Press **SETTINGS** button to enter the main menu.

Press ▼/▲ button to select the Picture.

 Press **OK** button to enter the sub-menu.

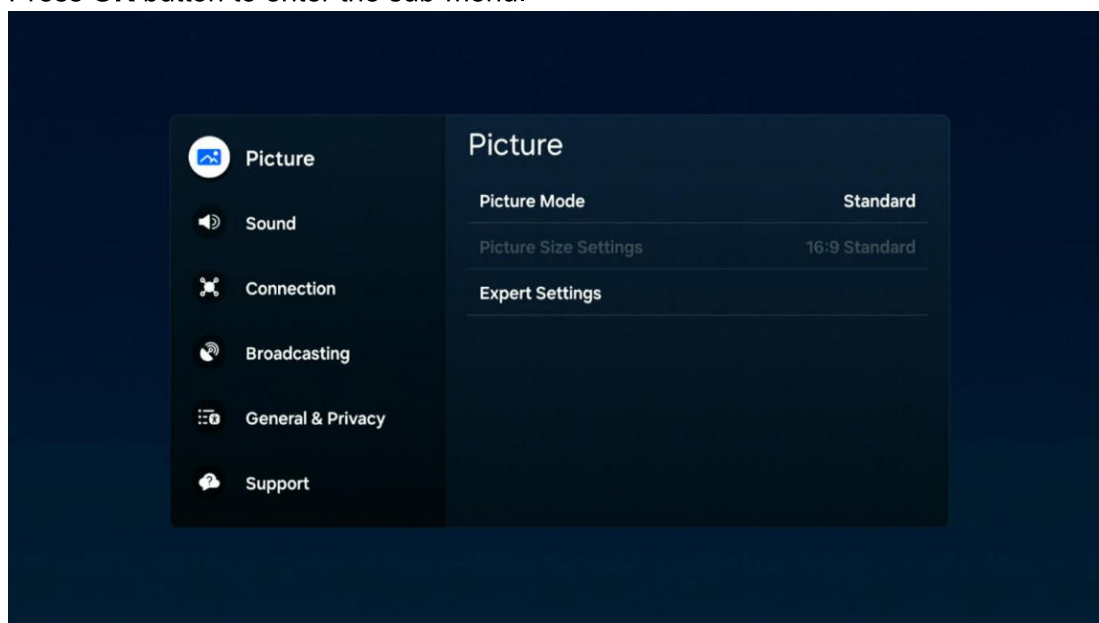

Press ▼/▲ button to select Picture Mode/Picture Size Settings/Expert Settings.

Press **SETTINGS** or **EXIT** button to quit.

Picture Mode

Highlight the item and press **OK** button to enter the sub-menu, that shows the picture mode you can choose.

Press ▼/▲ button to select Standard/Dynamic/Movie.

Standard Is the default mode suitable for general viewing environments.

Dynamic Makes the picture brighter and clearer in bright viewing environments.

Movie Is suitable for watching TV or movies in a dark room.

Picture Size Settings

Press ▼/▲ button to select Picture Size Settings and press **OK** button to enter sub-menu.

Picture Size

Press ▼/▲ button to select Picture Size.

Press ▼/▲ button to select 16:9 Standard/4:3/Custom.

Auto Wide

Press ▼/▲ button to select Auto Wide.

Press ▼/▲ button to select On/Off.

4:3 Screen Size

Press ▼/▲ button to select 4:3 Screen Size.

Press ▼/▲ button to select 16:9 Standard/4:3/Zoom.

Fit to screen

Press ▼/▲ button to select Fit to screen.

Press ▼/▲ button to select On/Off.

Zoom and Position

Press ▼/▲ button to select Zoom and Position.

Press **OK** button to adjust.

(Note: This function is available only if Picture Size is set to Custom.)

Expert Settings

Press ▼/▲ button to select Expert Settings and press **OK** button to enter sub-menu.

Backlight/Contrast/Sharpness/Colour/Tint(G/R)

Press ▼/▲ button to select Backlight/Contrast/Sharpness/Colour/Tint(G/R).

Press ◀/▶ button to adjust.

Backlight Adjust the Backlight of the image.

Contrast Adjust the contrast of the image.

Sharpness Adjust the edge sharpness of the image.

Colour Adjust the colour intensity of the image.

Tint(G/R) Adjust the ratio of green to red tint levels.

Apply Picture Settings

Press ▼/▲ button to select Apply Picture Settings.

Press ▼/▲ button to select All Sources/Current Source.

Noise Reduction

Press ▼/▲ button to select Noise Reduction.(Optional:Off/On)

Contrast Enhancer

Press ▼/▲ button to select Contrast Enhancer.

Press ▼/▲ button to select Off/Low/High.

Color Tone

Adjust the overall color of the image.

Press ▼/▲ button to select Color Tone.

Press ▼/▲ button to select Standard/Cool/Warm1/Warm2.

Cool The picture is in favor of green-blue and less red.
The whole color is in favor of light. The picture is more fresh and elegant.

Standard The picture does not in favor of any color.The color is moderate.

Warm1 The picture is in favor of red-green and less blue to make the color more vivid and soft.

Warm2 Warm2 is bluer than Warm1 and looks more vivid.

White Balance

Adjust the color temperature of the picture so that white objects appear brighter.

Press ▼/▲ button to select White Balance.

Press ▼/▲ button to select 2 Point/10 Point Settings,then press **OK** button to enter sub-menu and press ▼/▲/◀/▶ to select and adjust.

Brightness

 
Press ▼/▲ button to select Brightness.

Press ◀/▶ button to adjust.

Reset Picture

Press ▼/▲ button to select Reset Picture.

Press ◀/▶ button to select reset or not.

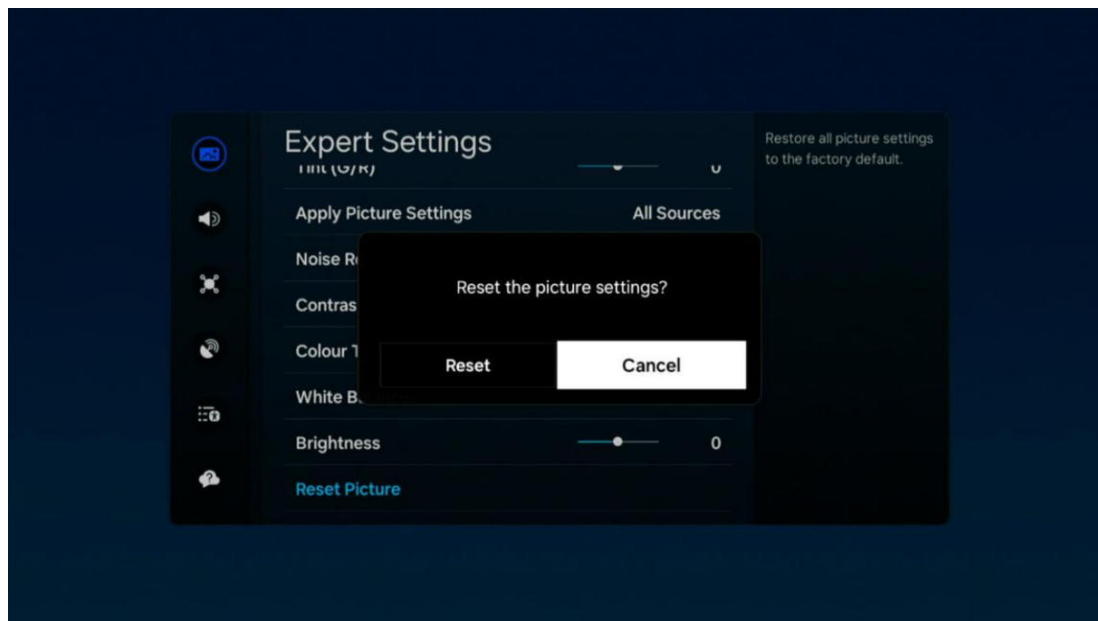


Sound

Press **SETTINGS** button to enter the main menu.

Press ▼/▲ button to select the Sound.

 Press **OK** button to enter the sub-menu.

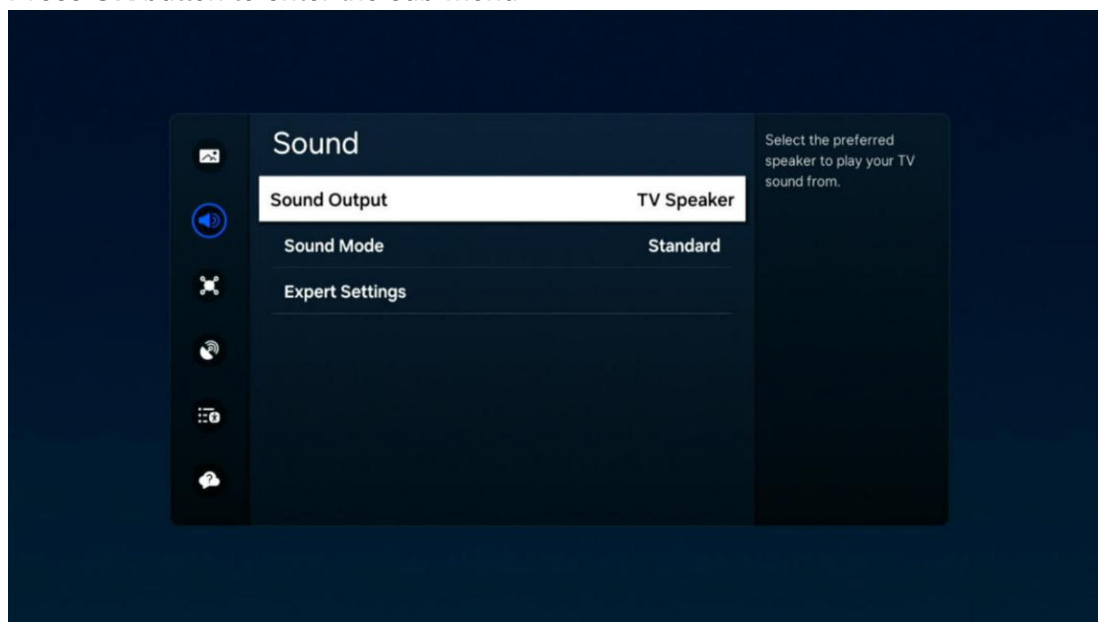

Press ▼/▲ button to select Sound Output/Sound Mode/Expert Settings.

Press **SETTINGS** or **EXIT** button to quit.

Sound Output

Press ▼/▲ button to select Sound Output.

Press ▼/▲ button to select TV Speaker/Receiver(Optical)/Bluetooth Speaker List.

Sound Mode

Press ▼/▲ button to select Sound Mode.

Press ▼/▲ button to select Standard/Optimised/Amplify.

Expert Settings

Press ▼/▲ button to select Expert Settings and press **OK** button to enter sub-menu.

Balance

Balanced left and right channels.

Press ▼/▲ button to select Balance.

Press **OK** button to enter sub-menu then press ◀/▶ button to adjust.

Equaliser

Press ▼/▲ button on to select Equaliser.

Press **OK** button to enter sub-menu then press ◀/▶ button to adjust.

HDMI-eARC Mode

Press ▼/▲ button to select HDMI-eARC Mode.

Press **OK** button to enter sub-menu then press ▼/▲ button to select Auto/Off.

Digital Output Audio Format

Press ▼/▲ button to select Digital Output Audio Format.

Press **OK** button to enter sub-menu then press ▼/▲ button to select PCM/Auto/Pass-through.

Digital Output Audio Delay

Press ▼/▲ button to select Digital Output Audio Delay. Press ◀/▶ button to adjust.

Auto Volume

Press ▼/▲ button to select Auto Volume. Press **OK** button to select On/Off.

 
Simultaneous Optical Output

Press ▼/▲ button to select Simultaneous Optical Output. Press **OK** button to select On/Off.

Reset Sound

Press ▼/▲ button to select Reset Sound.

Press **OK** button to enter sub-menu then press ◀/▶ button to select reset or not.

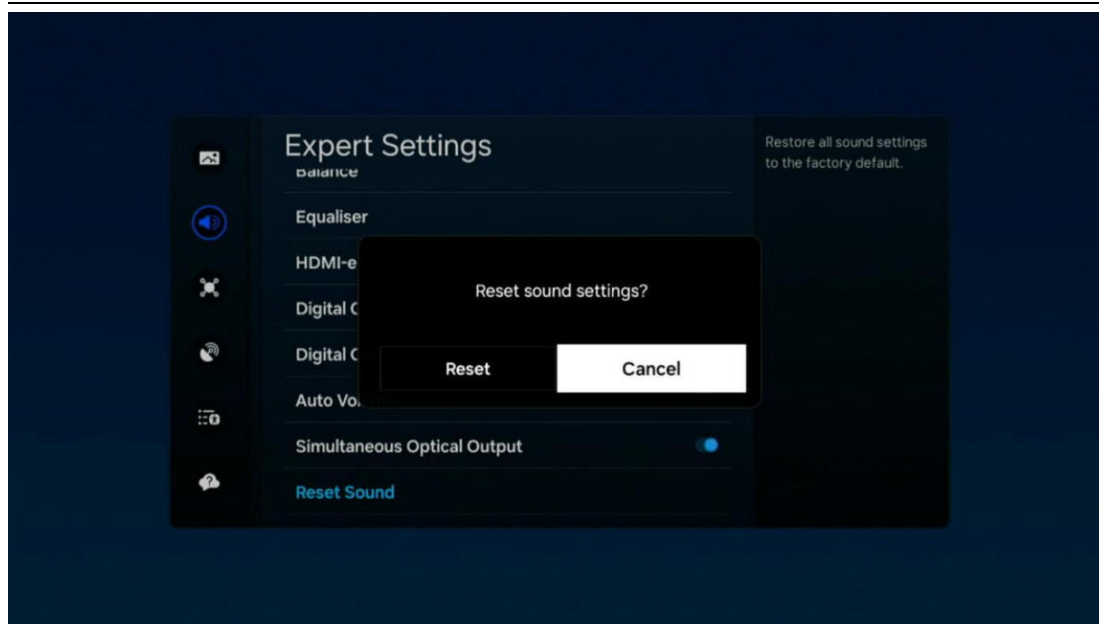


Connection

Press **SETTINGS** button to enter the main menu.

Press **▼/▲** button to select the Connection.

 Press **OK** button to enter the sub-menu.

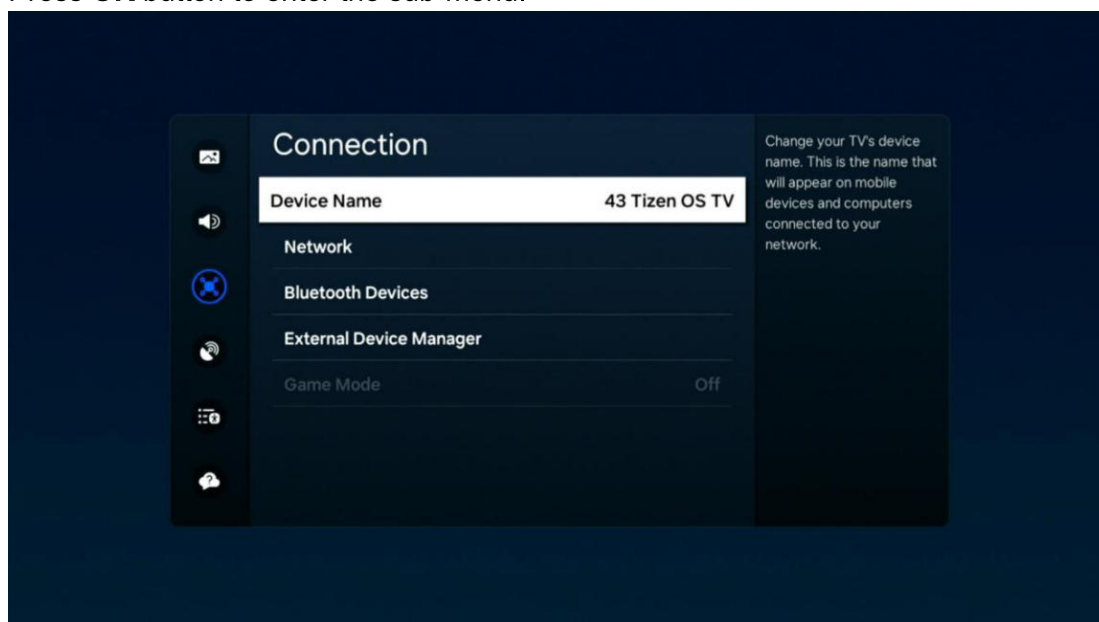

Press **▼/▲** button to select Device Name/Network/Bluetooth Device List/External Device Manager.

 
Press **SETTINGS** or **EXIT** button to quit.

Device Name

Press **▼/▲** button to select Device Name. Press **OK** button to select and change.

Network

Press ▼/▲ button to select Network. Press **OK** button to enter sub-menu.

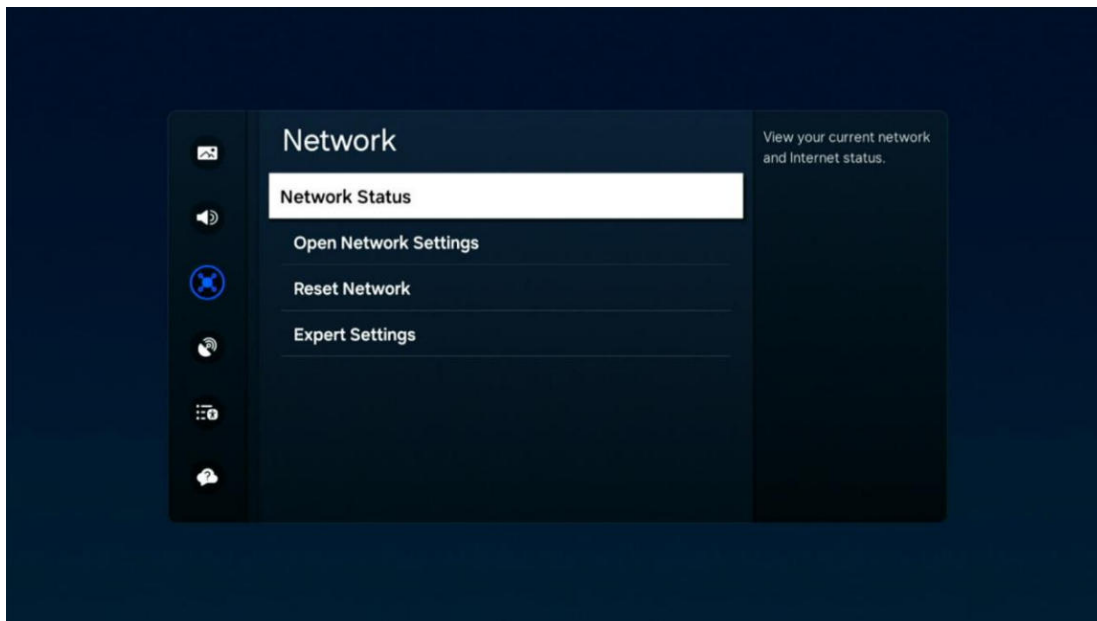

Network Status

Press ▼/▲ button to select Network Status. Press **OK** button to setup.

Open Network Settings

 
Press ▼/▲ button to select Open Network Settings. Press **OK** button to setup.

Reset Network

Press ▼/▲ button to select Reset Network. Press **OK** button to choose reset or not.

Expert Settings

Press ▼/▲ button to select Expert Settings. Press **OK** button to enter sub-menu.

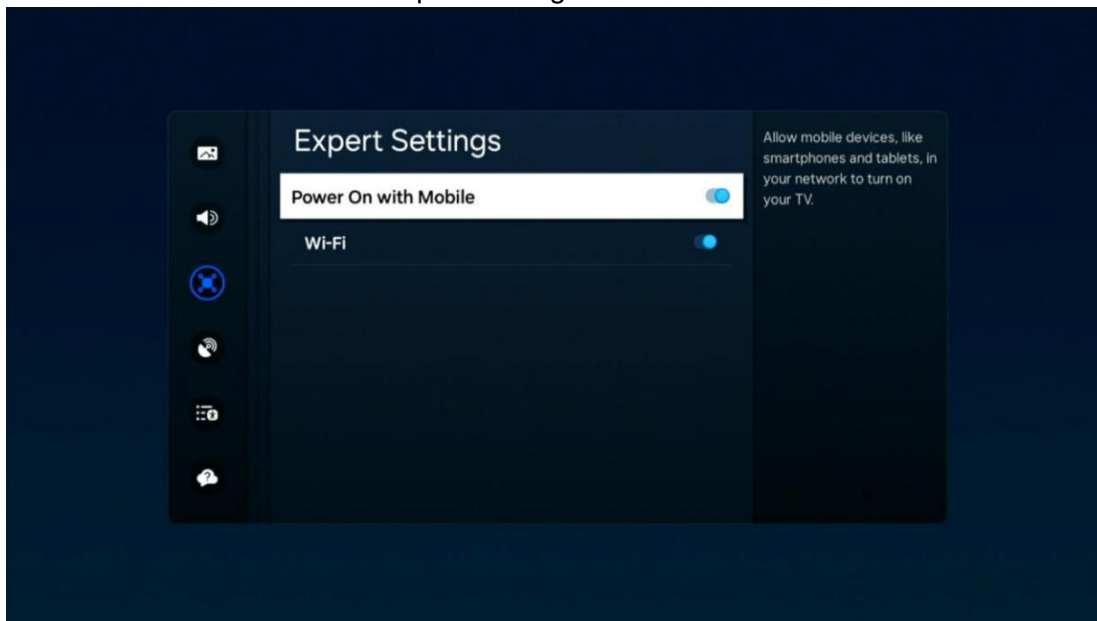

Bluetooth Device List

Press ▼/▲ button to select Bluetooth Device List. Press **OK** button to setup.

External Device Manager

Press ▼/▲ button to select External Device Manager. Press **OK** button to setup.

Broadcasting

Press **SETTINGS** button to enter the main menu.

Press ▼/▲ button to select the Broadcasting.

Press **OK** button to enter the sub-menu.



Press ▼/▲ button to select Auto Tuning Settings/Common Interface/Dual Sound/Expert Settings.

 
Press **SETTINGS** or **EXIT** button to quit.

 
Auto Tuning

Automatic search can search for effective program channel automatically.

Press ▼/▲ button to select Auto Tuning, then press **OK** button to start auto search.

If you want to stop searching, press Stop button to stop searching.

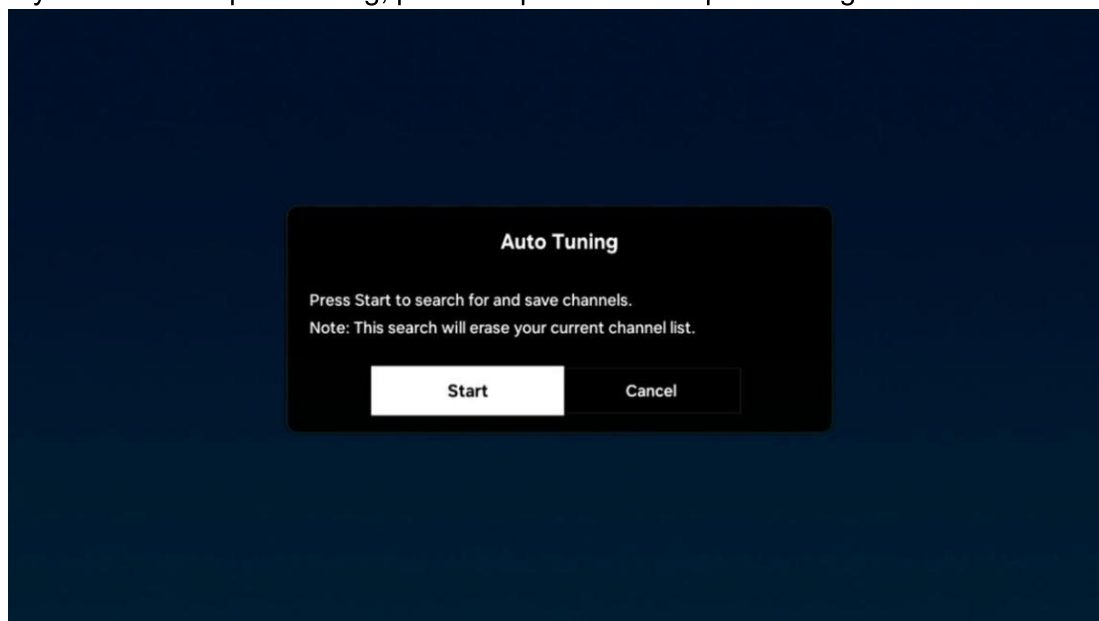

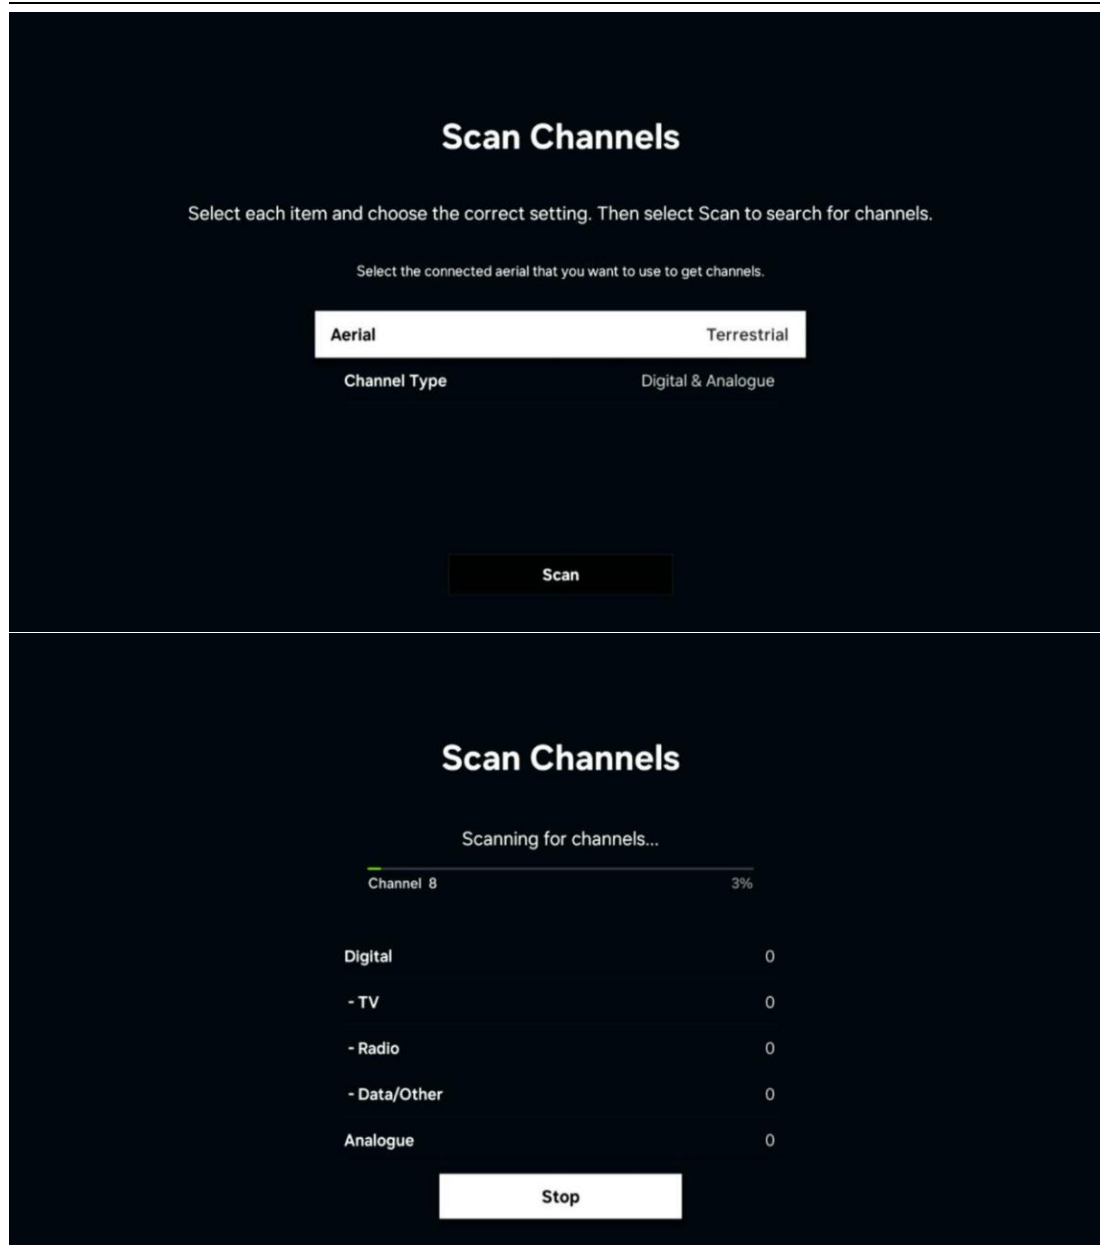

Common Interface

 
Press ▼/▲ button to select Common Interface, then sign in password to select.

Dual Sound

Press ▼/▲ button to select Dual Sound,
then press **OK** button to enter and press ▼/▲ button to select .

Expert Settings

Press ▼/▲ button to select Expert Settings, then press **OK** button to enter sub-menu.

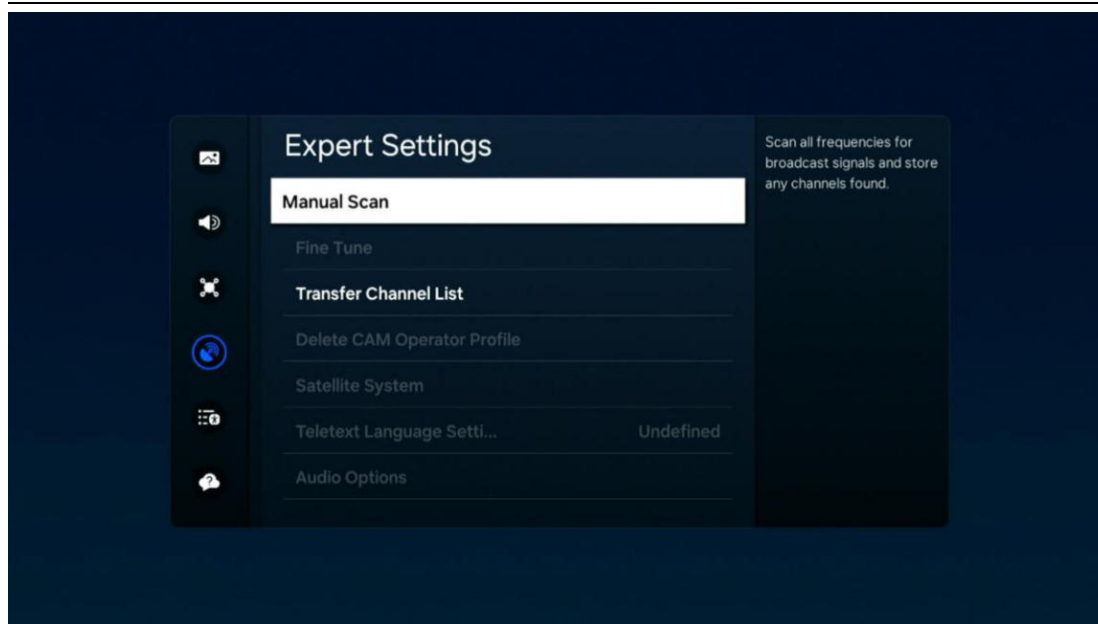

Manual Scan

You can scan for all the channels manually and store the scanned channels in the TV. Press **▼/▲** button to select Manual Scan. Press **OK** button to select.

Fine Tune

Press **▼/▲** button to select Fine Tune.

Fine-tuning analogue broadcasts, this function is only available for analogue broadcasts.

Transfer Channel List

Press **▼/▲** button to select Transfer Channel List. Press **OK** button to enter. (Optional: Import from USB/Export to USB)

Delete CAM Operator Profile

Press **▼/▲** button to select Delete CAM Operator Profile. Press **OK** button to enter.

Satellite System

Press **▼/▲** button to select Satellite System. Press **OK** button to enter.

Teletext Language Settings

Press **▼/▲** button to select Teletext Language Settings. Press **OK** button to enter.

HbbTV Settings

Press **▼/▲** button to select HbbTV Settings. Press **OK** button to enter sub-menu and select.

Audio Options

 
Press **▼/▲** button to select Audio Options. Press **OK** button to enter sub-menu.

General&Privacy

Press **SETTINGS** button to enter the main menu.

Press **▼/▲** button to select General&Privacy.


Press **OK** button to enter the sub-menu.

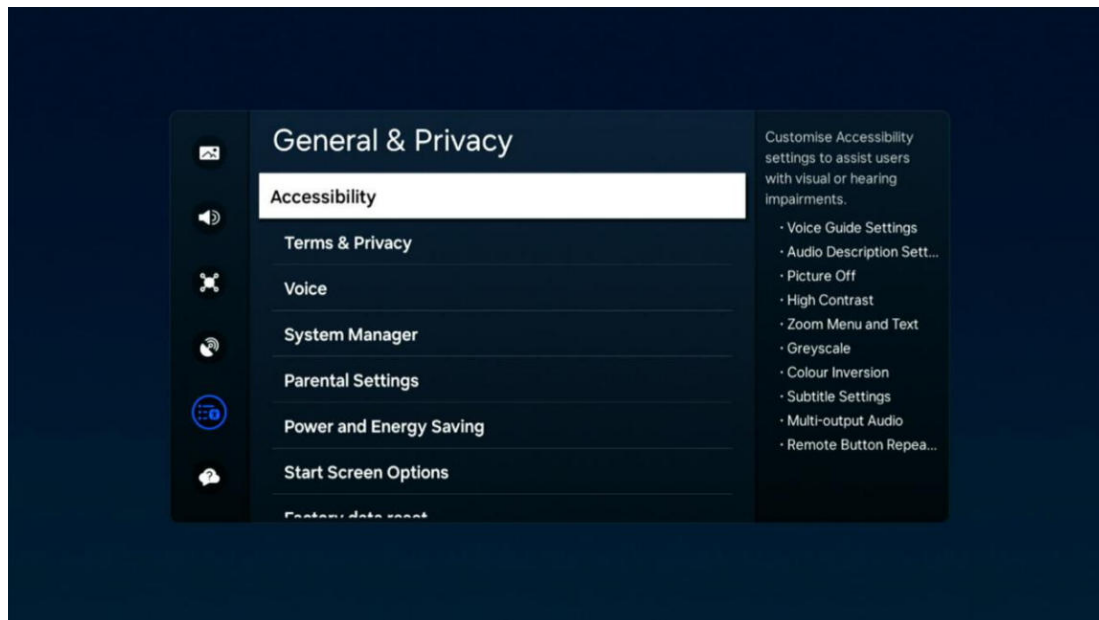


Press **▼/▲** button to select Accessibility/Terms&Privacy/Voice/System Manager/Parental Settings/Power and Energy Saving/Start Screen Options/Factory data reset.

Accessibility

  Press **▼/▲** button to select Accessibility. Press **OK** button to enter sub-menu.

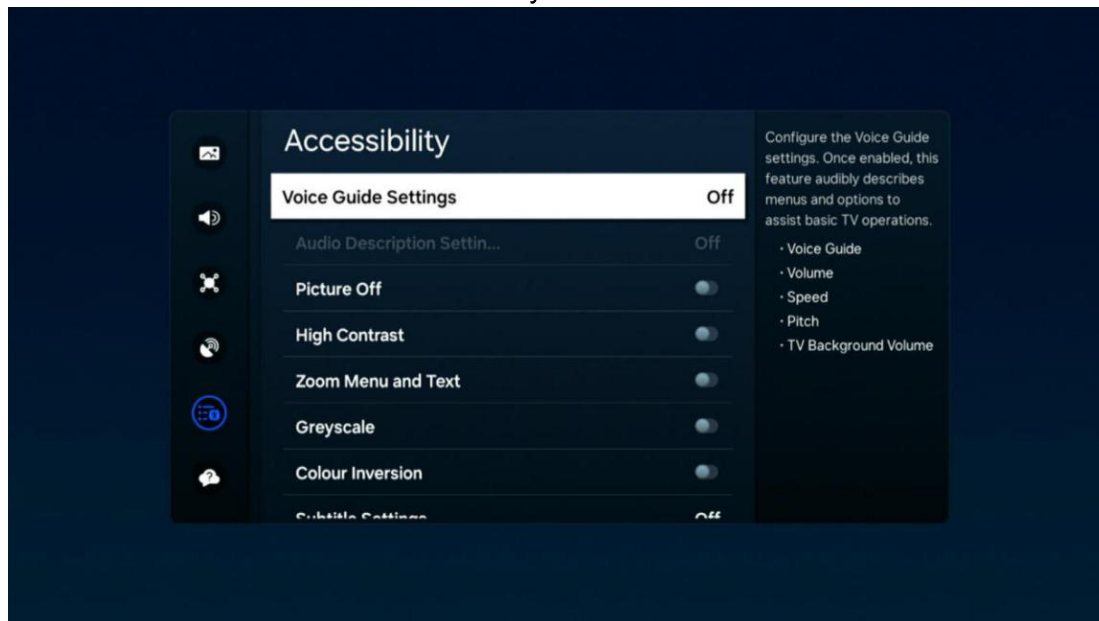

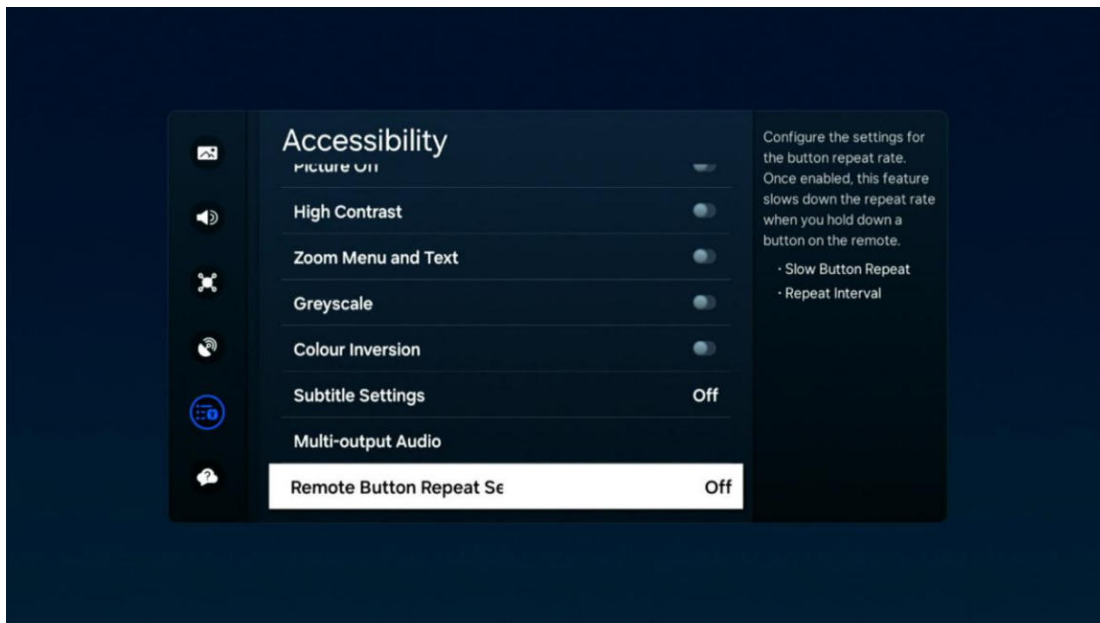

Voice Guide Settings

Press ▼/▲ button to select Voice Guide Settings. Press **OK** button to enter sub-menu.

(Optional: Voice Guide/Volume/Speed/Pitch/TV Background Volume)

Voice Guide

Press ▼/▲ button to select Voice Guide. Press **OK** button to select On/Off.

(The next function is available only if Voice Guide is set to On)

Volume

Press ▼/▲ button to select Volume. Press ▼/▲ button to select Loud/Medium/Soft.

Speed

Press ▼/▲ button to select Speed. Press ▼/▲ button to select Very Fast/Fast/Normal/Slow/Very Slow.

Pitch

Press ▼/▲ button to select Pitch. Press ▼/▲ button to select High/Medium/Low.

TV Background Volume

Press ▼/▲ button to select TV Background Volume.

Press ▼/▲ button to select Very Loud/Loud/Medium/Soft/Very Soft.

Audio Description Settings

Press ▼/▲ button to select Audio Description Settings. Press **OK** button to enter sub-menu to select.

Picture Off/High Contrast/Zoom Menu and Text/Greyscale/Colour Inversion

Press ▼/▲ button to select. Press **OK** button to select On/Off.

Subtitle Settings

Press ▼/▲ button to select Subtitle Settings. Press **OK** button to enter sub-menu to select.

Multi-output Audio

Press ▼/▲ button to select Multi-output Audio. Press **OK** button to enter sub-menu.

 
Remote Button Repeat Settings

Press ▼/▲ button to select Remote Button Repeat Settings. Press **OK** button to select On/Off.

Terms&Privacy

Press ▼/▲ button to select Terms&Privacy. Press **OK** button to enter sub-menu.


Press ▼/▲ button to select view information.

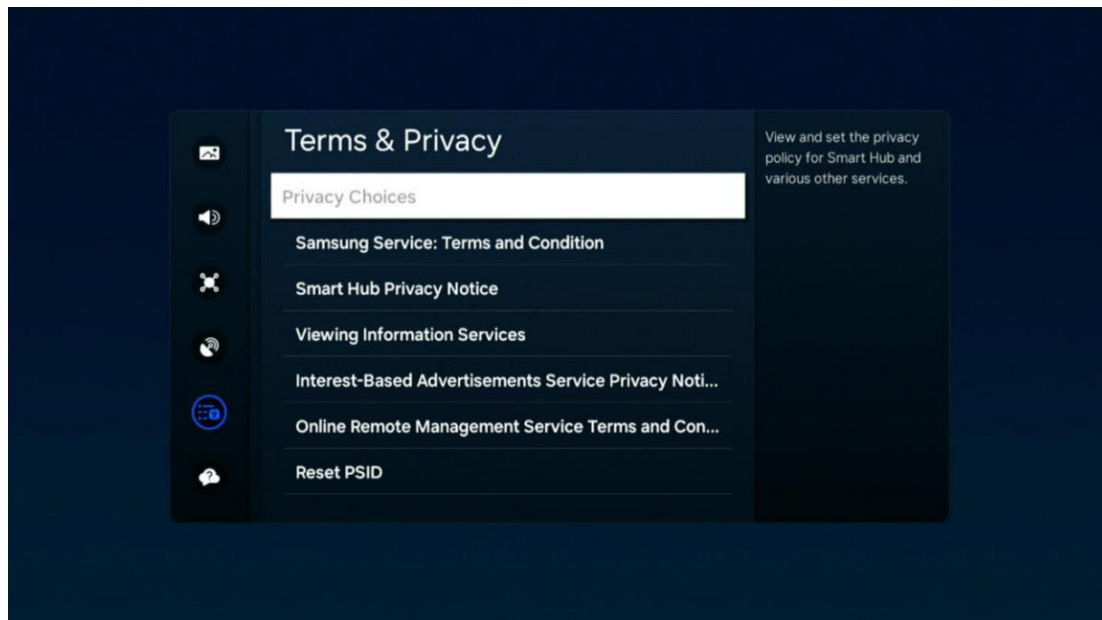**Voice**

Press ▼/▲ button to select Voice. Press **OK** button to enter sub-menu.

System Manager

 Press ▼/▲ button to select System Manager. Press **OK** button to enter sub-menu.

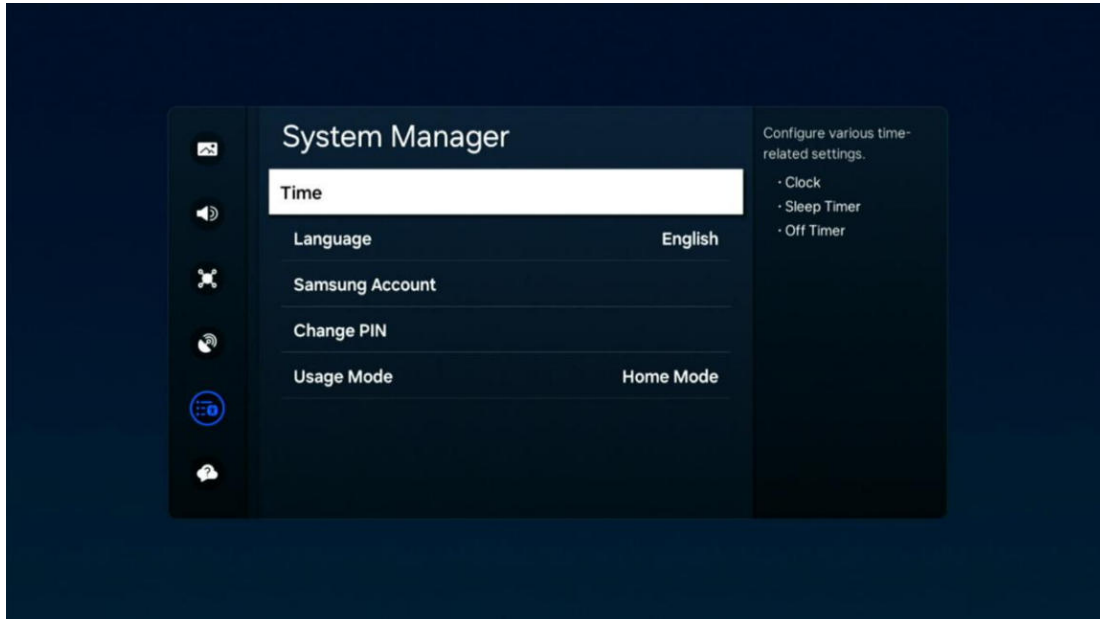

Press ▼/▲ button to select Time/Language/Samsung Account/Change PIN/Usage Mode.

Time

Press ▼/▲ button to select Time. Press **OK** button to enter sub-menu.

(Optional: Clock/Sleep Timer/Off Timer)

Clock

Press ▼/▲ button to select Clock. Press **OK** button to enter sub-menu then press ▼/▲ button to setup.

Sleep Timer

Press ▼/▲ button to select Sleep Timer. Press **OK** button to enter sub-menu.

Press ▼/▲ button to select.

(Optional: Off/30/60/120/180 minutes)

Off Timer

You can set Off Timer to shut off the TV automatically at a specific time.

Off Timer is only available if the Clock has been set.

Press ▼/▲ button to select Sleep Timer. Press **OK** button to enter sub-menu.

Language

Press ▼/▲ button to select Language. Press **OK** button to enter then press ▼/▲ button to select.

Samsung Account

Press ▼/▲ button to select Samsung Account. Press **OK** button to setup.

Change PIN

 
Press ▼/▲ button to select Change PIN. Press **OK** button to set Password.

Usage Mode

Press ▼/▲ button to select Usage Mode. Press ▼/▲ button to select Home Mode/Retail Mode.

Parental Settings

Press ▼/▲ button to select Parental Settings. Press **OK** button to enter sub-menu.

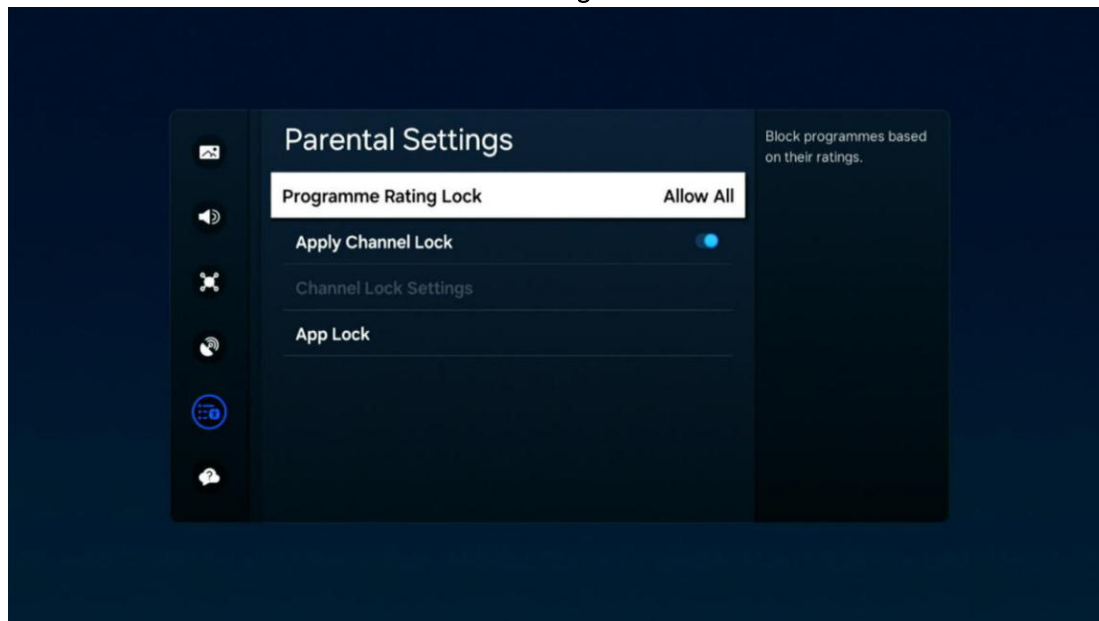

Press ▼/▲ button to select Programme Rating Lock/Apply Channel Lock/Channel Lock Settings/App Lock.

Programme Rating Lock

Press ▼/▲ button to select Programme Rating Lock. Press **OK** button to enter sub-menu.

Apply Channel Lock

Press ▼/▲ button to select Apply Channel Lock. Press **OK** button to select On/Off.

Channel Lock Settings

 
Press ▼/▲ button to select Channel Lock Settings. Press **OK** button to enter sub-menu.

App Lock

Press ▼/▲ button to select App Lock. Press **OK** button to enter sub-menu.

Power and Energy Saving

Press ▼/▲ button to select Power and Energy Saving. Press **OK** button to enter sub-menu.

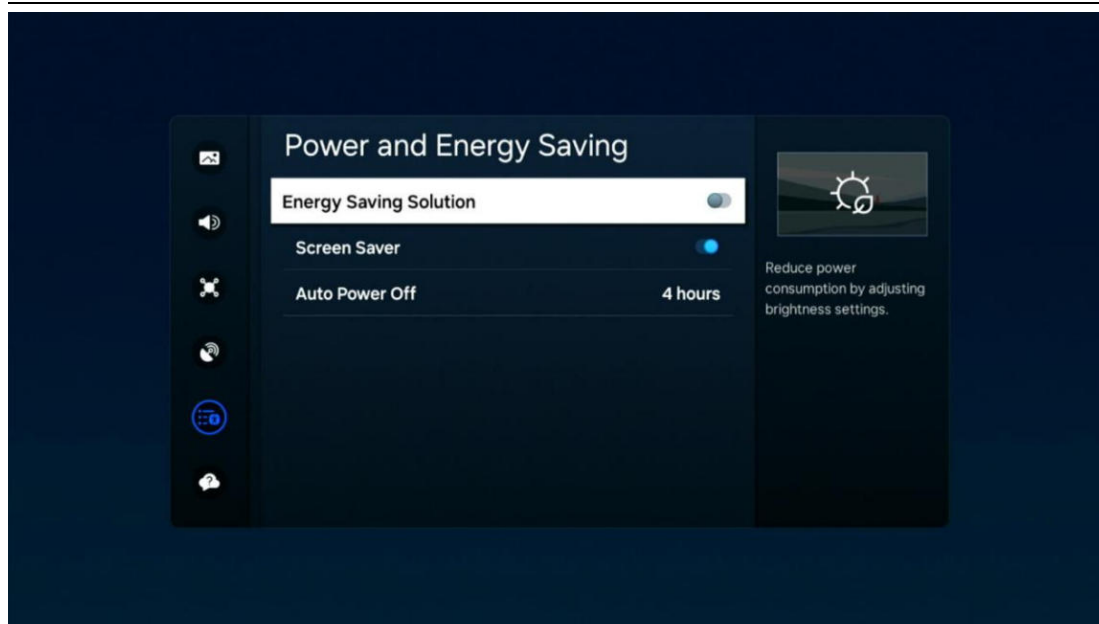

Press ▼/▲ button to select Energy Saving Solution/Screen Saver/Auto Power off.

Energy Saving Solution/Screen Saver

 
Press ▼/▲ button to select. Press **OK** button to select On/Off.

Auto Power off

Press ▼/▲ button to select Auto Power Off. Press ▼/▲ button to select Off/4 hours/6 hours/8 hours.

Start Screen Options

Press ▼/▲ button to select Start Screen Options. Press **OK** button to enter sub-menu.

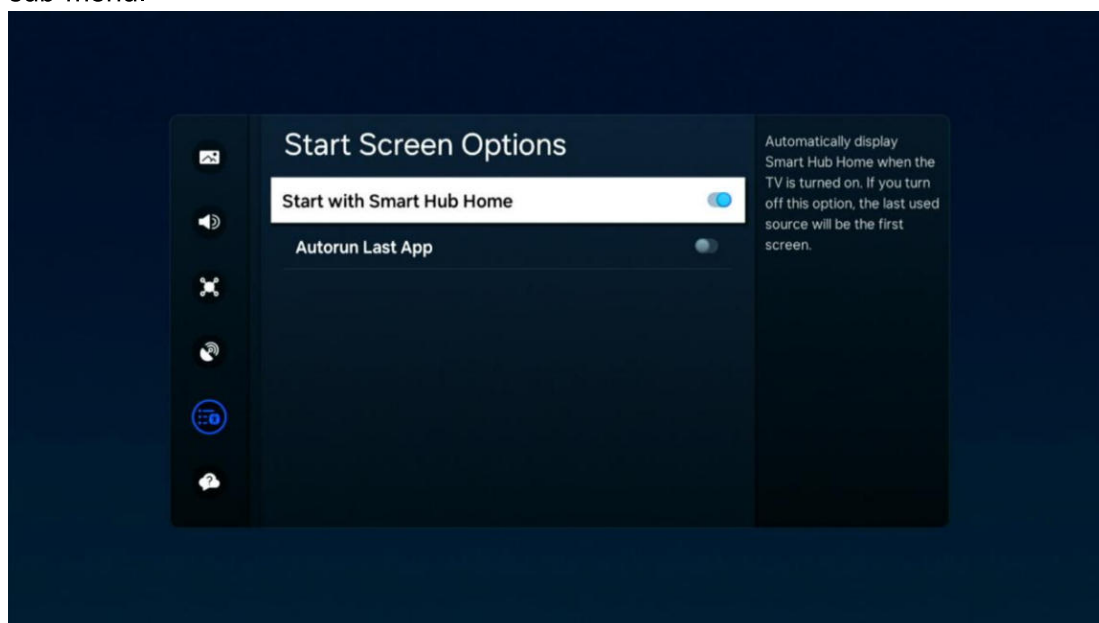

Press ▼/▲ button to select Start with Smart Hub Home/Autorun Last App.

 
Start with Smart Hub Home/Autorun Last App

Press ▼/▲ button to select. Press **OK** button to select On/Off.

Factory data reset

Press ▼/▲ button to select Factory data reset. Press **OK** button to enter password then choose reset or not. The default password is 0000.

After the reset, the boot screen is displayed again.

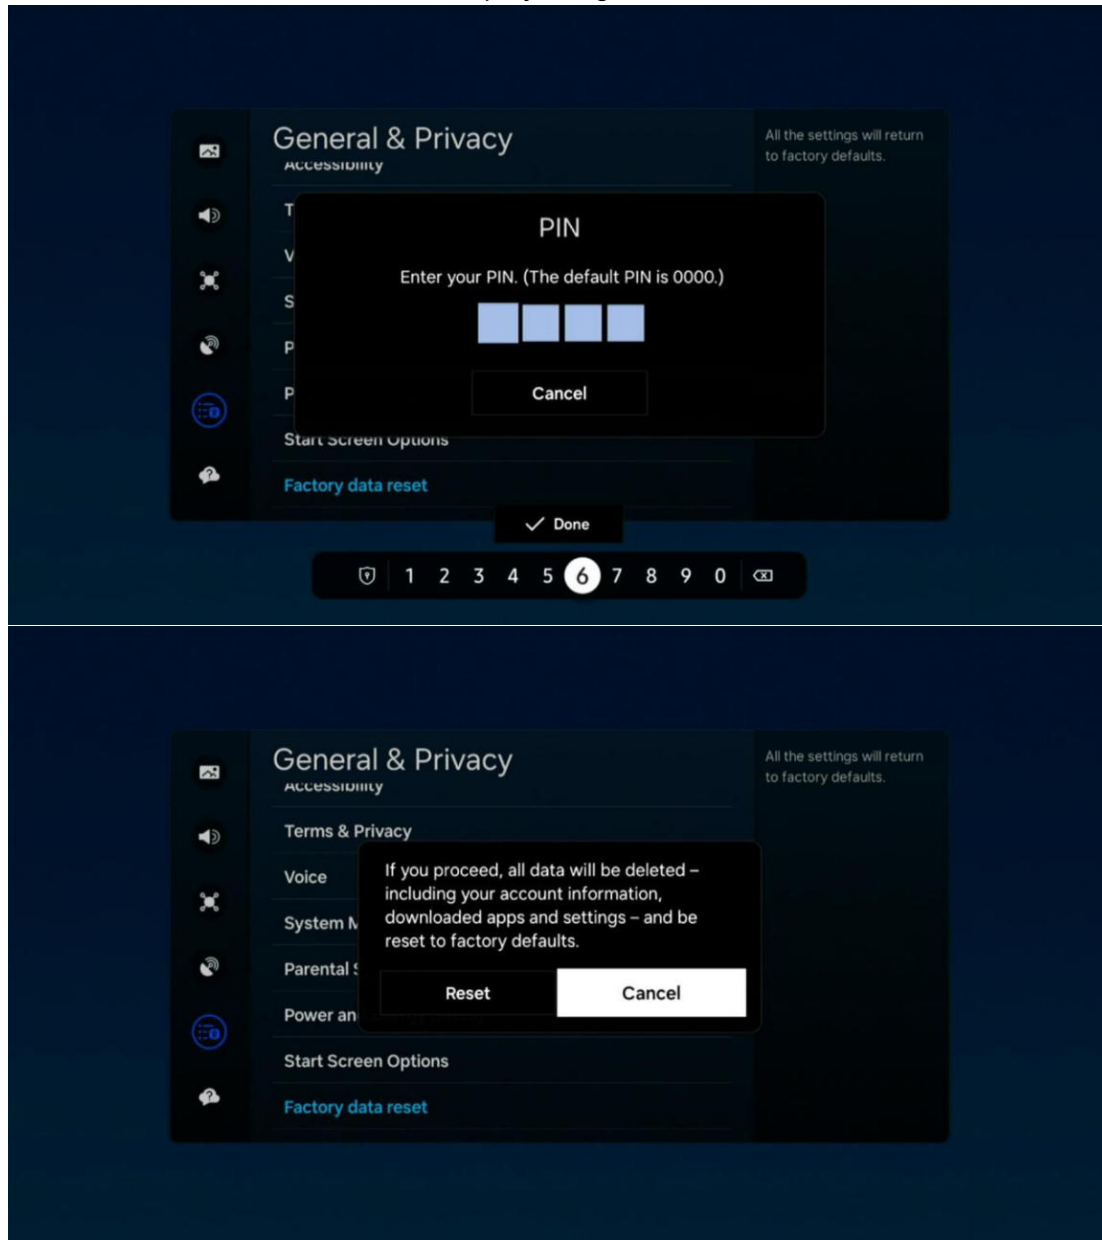


Support

Press **SETTINGS** button to enter the main menu.

Press **▼/▲** button to select Support.

 Press **OK** button to enter the sub-menu.

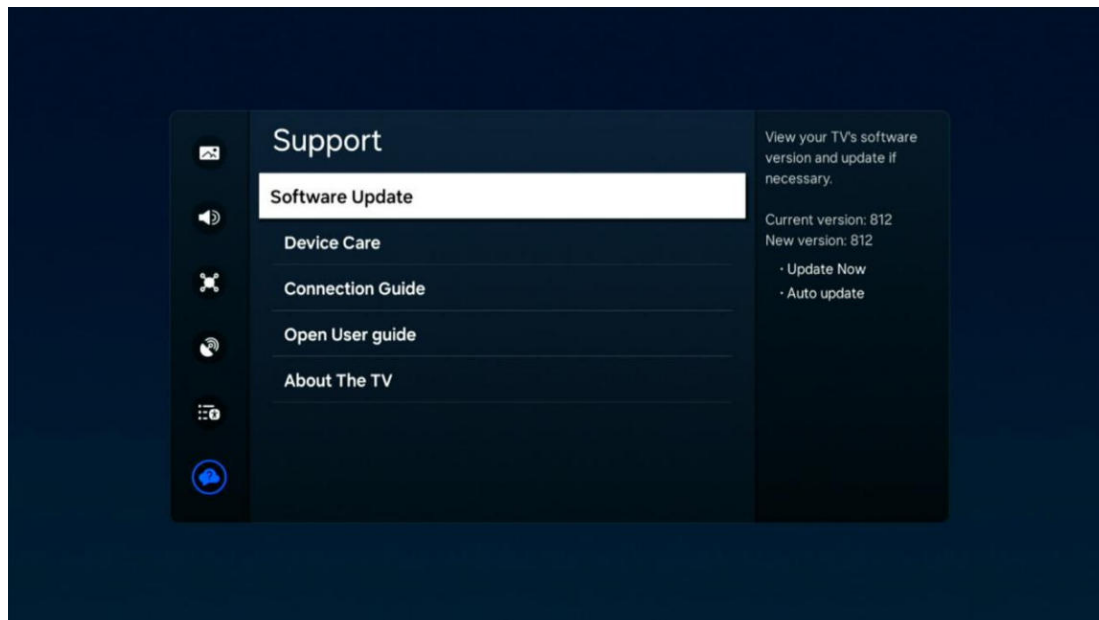

Press **▼/▲** button to select Software Update/Device Care/Connection Guide/Open User guide/About This TV.

Software Update

Press **▼/▲** button to select Software Update. Press **OK** button to enter sub-menu.
(Optional: Update Now/Auto update)

Device Care

 
Press **▼/▲** button to select Device Care. Press **OK** button to enter sub-menu.

Connection Guide

Press **▼/▲** button to select Connection Guide. Press **OK** button to enter sub-menu.


Open User guide

Press **▼/▲** button to select Open User guide. Press **OK** button to enter sub-menu.

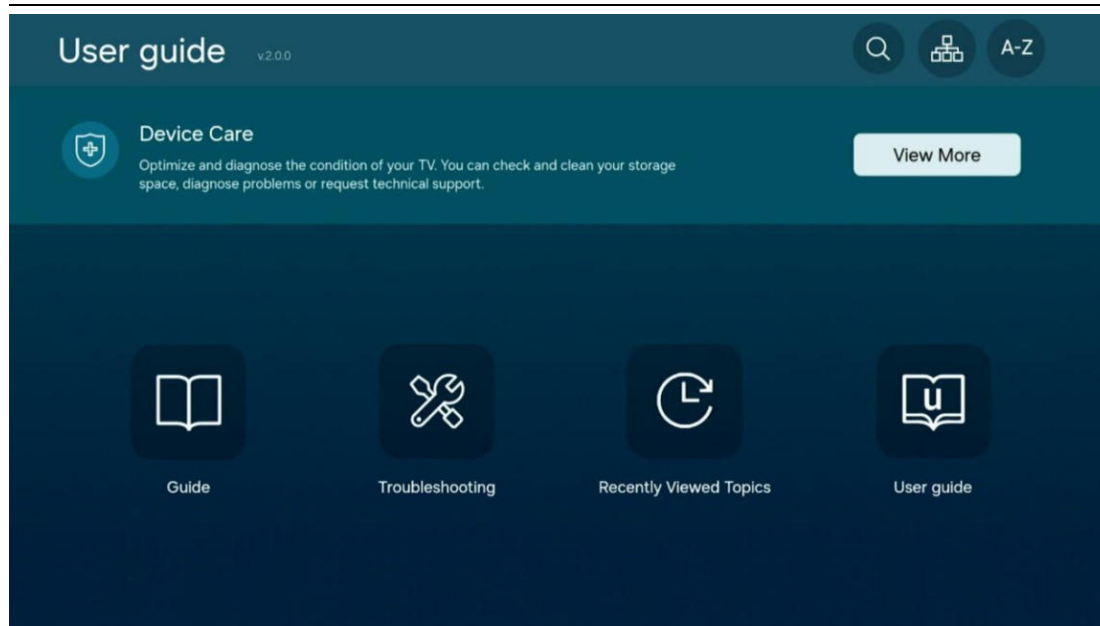


Guide

 Press ◀/▶ button to select Guide. Press **OK** button to enter sub-menu.

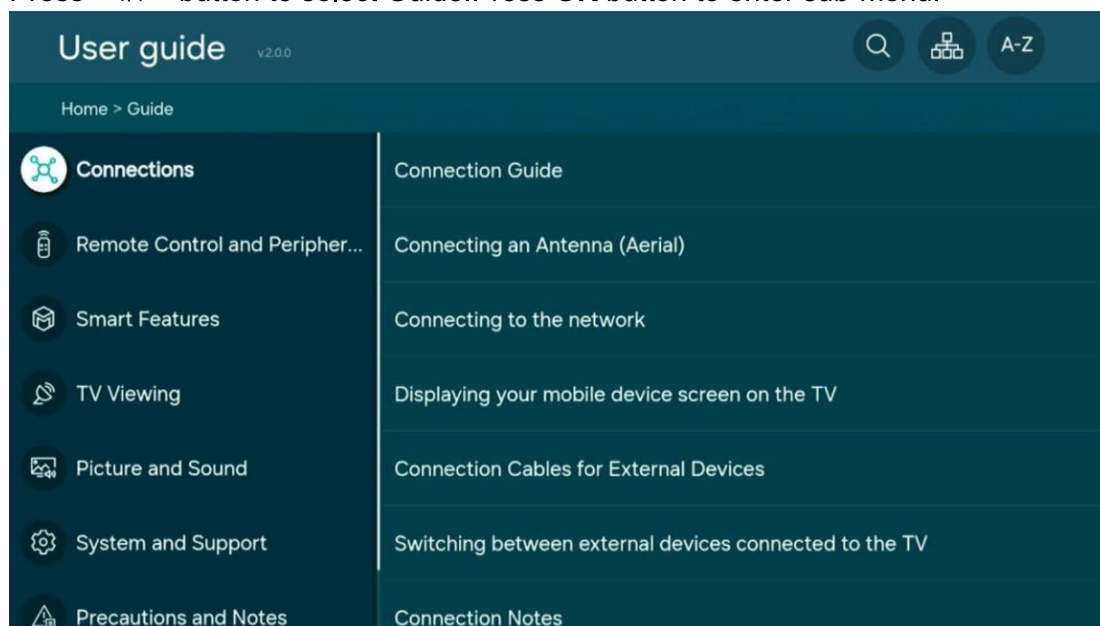


Troubleshooting

 Press ◀/▶ button to select Troubleshooting. Press **OK** button to enter sub-menu.

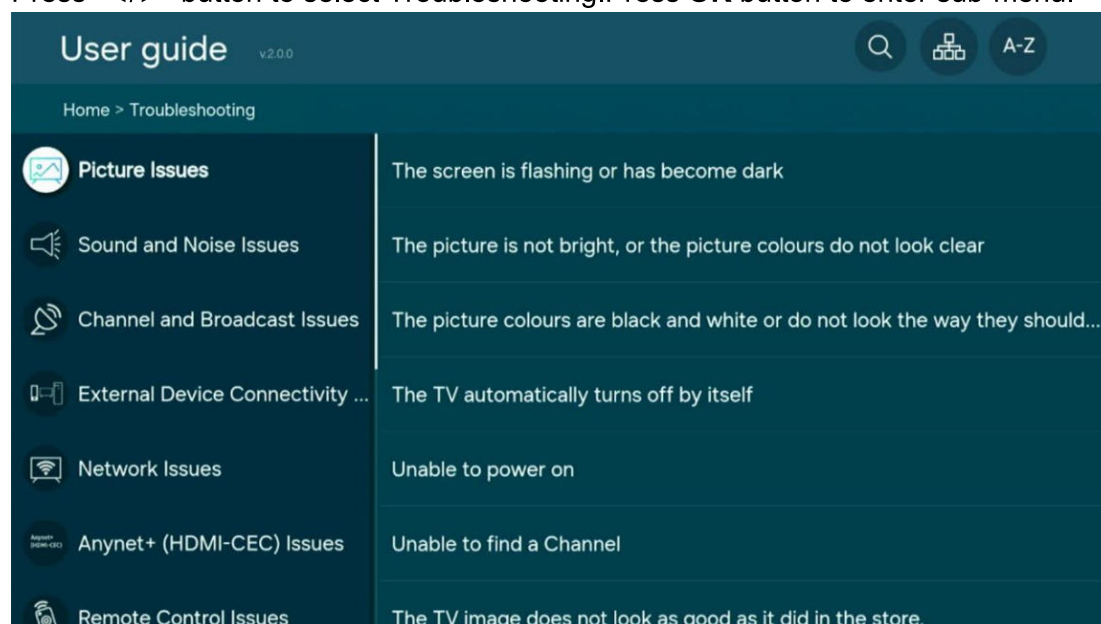


Recently Viewed Topics

 Press ◀/▶ button to select Recently Viewed Topics. Press **OK** button to enter sub-menu.

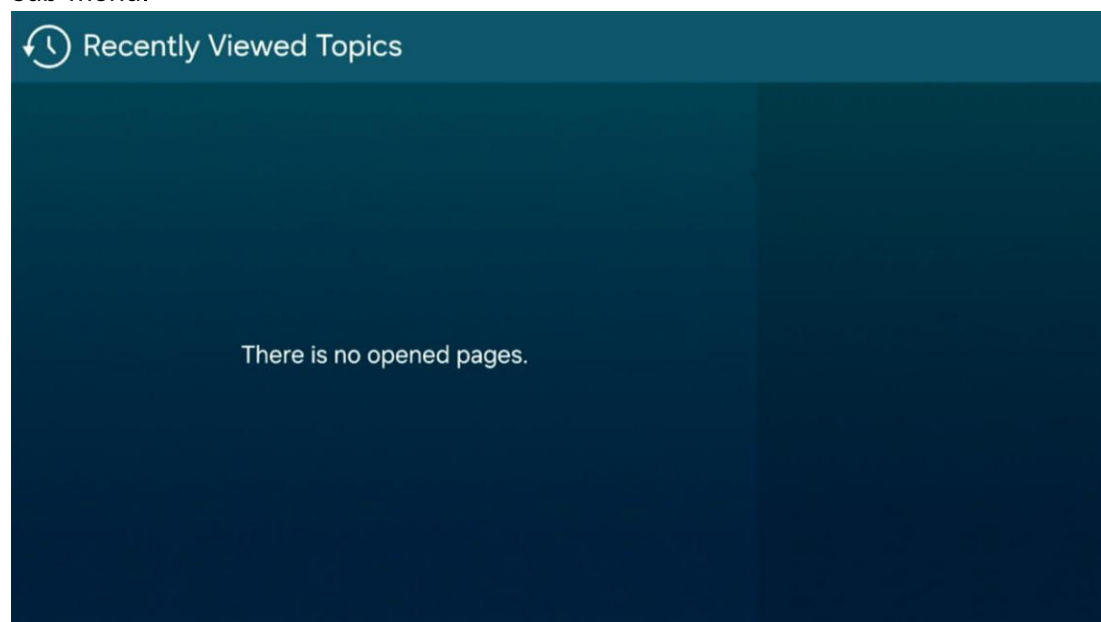


User guide

 Press ◀/▶ button to select User guide. Press **OK** button to enter sub-menu. Then press ▼/▲ button to view the embedded e-Manual that contains information about your TV's key features.

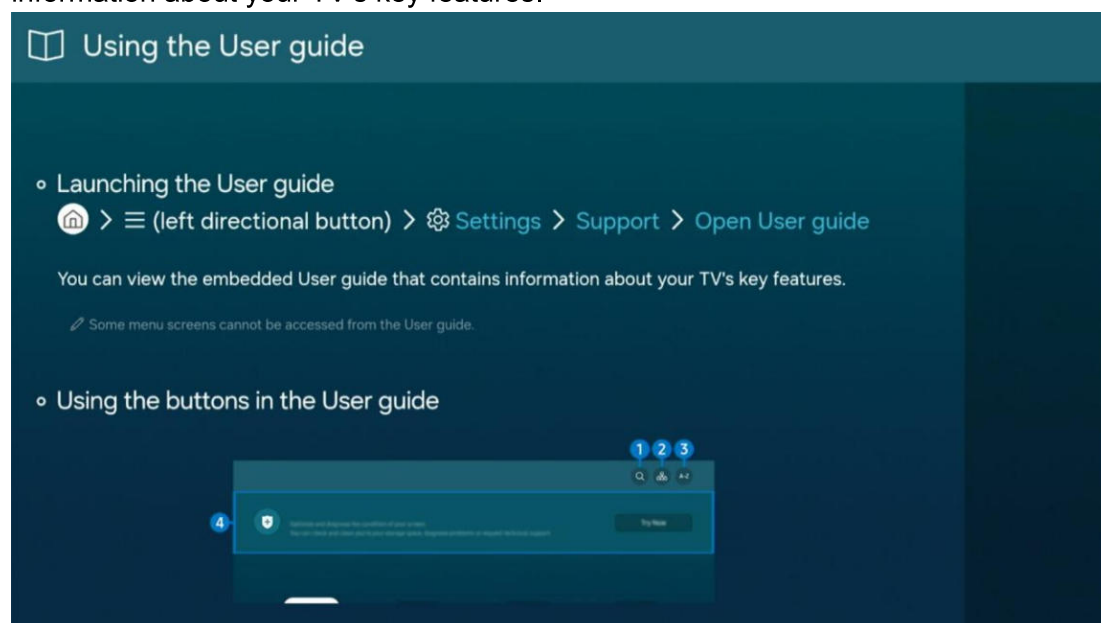

About This TV

 Press ▼/▲ button to select About This TV. Press **OK** button to view.

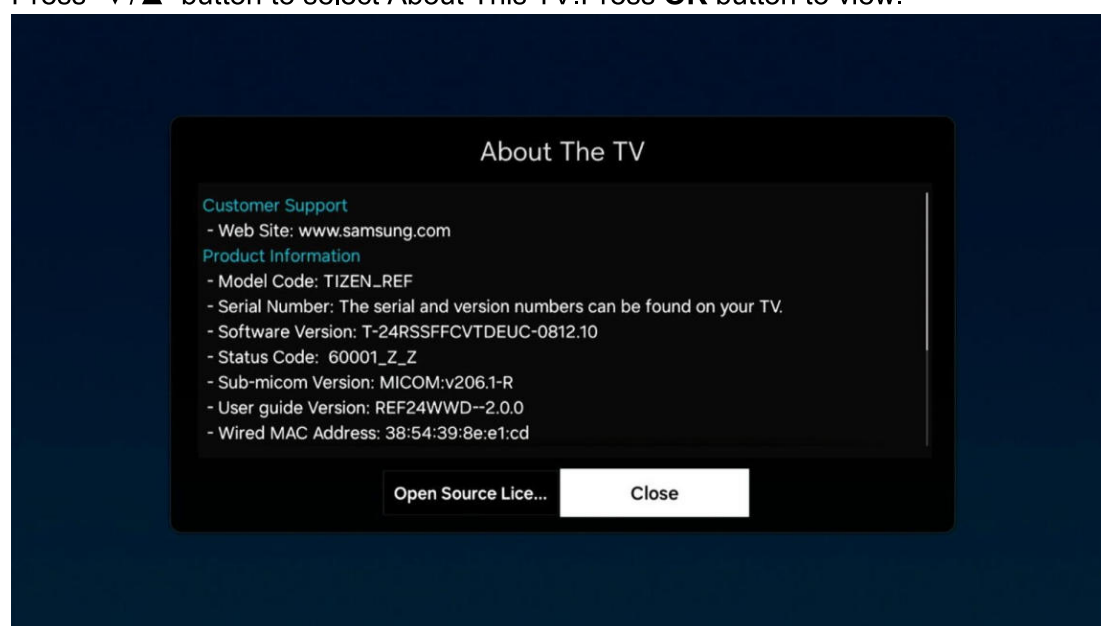

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.