

# Programming Instruction(SYHBK18)

Video of programming case displayed on Amazon main image block

## Preparation: Introduction to Remote Control Function

Each button on remote has 2 working modes and can be **switched** ;

**Each mode** is compatible with **different types** of door openers ;

Different **LED color** represent the various working modes.

Please refer to the following Chart for details :

LED : Red or Green



| Mode # | Remote LED Color                                                                               | Compatible Opener Learn Button Color                                                                                                                                                                                                                                                                                                       |
|--------|------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Mode 1 |  <b>Green</b> | <div><div><br/>2011+</div><div><br/>1993-1997</div></div>                                                                                                               |
| Mode 2 |  <b>Red</b>   | <div><div><br/>1997-2005</div><div><br/>1997-2005</div><div><br/>2005-2014</div></div> |

## Change Button's Working Mode on Remote

1. Press and hold buttons **A+B** simultaneously until LED blinks, then release all buttons.

2. Press and hold the button you would like to change working mode.

LED will change to either **GREEN** (Mode 1) or **RED** (Mode 2).

3. Release the remote button.



## Programming steps :

**Step 1:** Locate Learn button on the garage door opener. And confirm the color.



**Step 2.** Check the working mode on remote button.

To check the working mode, choose the button you want to program and press it.

Then, observe the LED Color.

if the current working mode of the remote matches the learn button in Step 1, proceed to Step 3.



**If not, Change Button's Working Mode on Remote. Then proceed to step 3.**

**Step 3.** Press and release the learn button on the opener. The learn LED will glow steadily for 30s.

opener

**NOTE:** For Step 3 and Step 4, certain door openers require unique programming methods. Consult the opener's **original** manual for instructions. **Examples:**

● LiftMaster/Chamberlain **Slide Gate Opener** require a unique programming procedure.

● LiftMaster 8500 / Chamberlain RJO20, RJO70, RJO101: Press door **Control Panel LEARN** Button **twice**, and the red learn LED will **turn on**



**Step 4.** Within 30 seconds, press and hold the button you wish to use on hand-held remote.

**Step 5.** Release remote control button when the Opener **until** light blinks OR two clicks are heard.

## HOW TO USE THE REMOTE CONTROL

Press and **hold** the button down **until** the door or gate starts to move.

**NOTE: Anti-mistrigger protection: Brief button press is ignored**

## Troubleshooting

**If you have any unresolved issues, please contact: [datonten@hotmail.com](mailto:datonten@hotmail.com).**

**Solution1:** Your garage door must be closed before you start to program remote.

**Solution2:** Try to program the remote using other button of the remote.

**Solution3:** Please first get close to garage door opener when you program remote.

**Solution4:** Maybe the memory of the opener is full, please clear it then program again.

**Method:** Press and hold the learn button on garage door opener for several seconds until LED off then release. Then all memory is cleared.

**Note:** The old remote will also be cleared, please program again.

**Solution5:** If one remote control program is successful and the other fails, try clearing the memory and reprogramming.

**Solution6:** For some garage door opener with the **red** or **orange** learn button, such as mode is **41A5021** or **41A5483**, please choose one of the following solutions: ① Try to select the **Yellow** learn button type; ② please first erase all receiver codes, then continue to program the remote.

**Solution7: Possible Issue:** The learn button's color may have **faded**, causing you to select the **wrong** mode. **Solution:** Try programming in a different mode.



**Solution8:** For Step 3 and Step 4, certain door openers require unique programming methods. Consult the opener's **original** manual for instructions. **Examples:**

- **LiftMaster/Chamberlain Slide Gate Opener** require a unique programming procedure.
- **LiftMaster 8500 / Chamberlain RJO20, RJO70, RJO101:** Press the door **Control Panel LEARN Button twice**, and the red learn LED will turn on.

Slide Gate Opener logic board



Control Panel

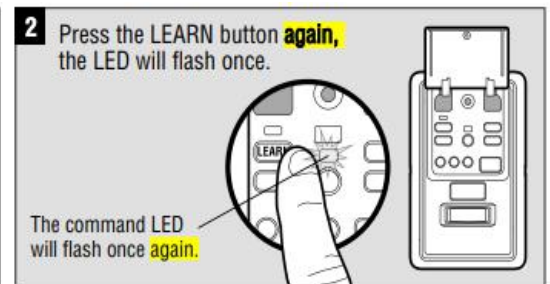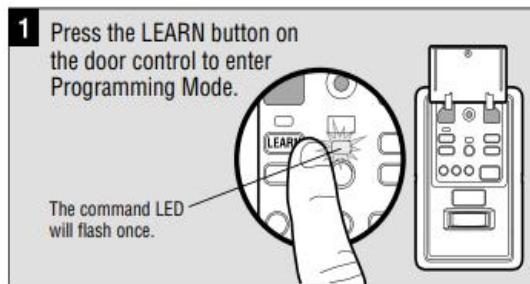

## BATTERY



### ⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



**a)** Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.

**b)** Even used batteries may cause severe injury or death.

**c)** Call a local poison control center for treatment information.

**d)** The compatible battery type **CR2032 3V**.

**e)** Non-rechargeable batteries are not to be recharged.

**f)** Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

**When replace the battery ,please notice as below:**

**a)** Ensure the batteries are installed correctly according to polarity (+and-).

**b)** Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

**c)** Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

**d)** Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

### ⚠ WARNING

**INGESTION HAZARD:** This product contains a button cell or coin battery.

### FCC Warning :

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.