

Remote Programming Introduction(SYHGR17)

(If you don't know how to program, please watch the programming video on Amazon's product main image)



While programming remote buttons,at stand least **5 feet** away from the opener.



Due to different models of garage door opener, the programming method may vary. When programming fails, please refer to the **original** manual of the **door opener**.

Programming steps:

Attention: Due to different production years of door openers ,Two operating methods.

Openers Manufactured between 1995 to 2011

Step1:Locate the Learn Code Button and Learn Code indicator LED on your opener's power head.

Step2:Press and Release **Learn Code button once**.

The Red LED will begin to **blink rapidly**.

Attention:within 30 seconds, proceed to the next step

Step3:Press and release the Remote Button of your choice.

The Red LED will **stop blinking**.


Attention:While programing remote buttons, stand at least **5 feet** away from the **opener**.

Step4:Press and release the **same** Remote Button **again**.

The Red LED will **trun off**.

Step5:TEST:Press and release the **same** Remote Button a **third time**.

The garage door will run,indicating successful programming.

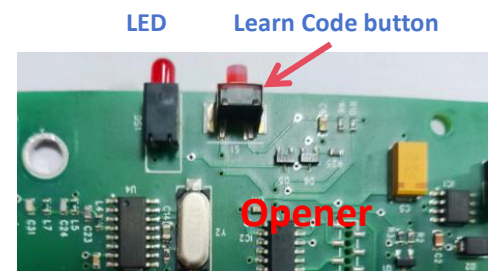

New Genie® Openers

Step1:Locate the Program/Set Button and the indicator LED on the your opener's power head.

Step2:Hold the Program/Set Button **until** the **round** LED turns **blue**.

Step3: Release the Program/Set Button .

The **long** LED will **blink purple**.

Step4:Press and release the Remote Button of your choice.

The **long** LED will **stop blinking**.

Attention:While programming remote buttons, stand at least **5 feet** away from the **opener**.

Step5:Press and release the **same** Remote Button **again** .

The both LEDS will **blink blue** and **trun off**.

Step6:TEST:Press and release the **same** Remote Button a **third time**.

The garage door will run,indicating successful programming.



Erasing all Remotes

Receivers Manufactured between 1995 to 2011:

To erase all remote devices from all other types of Genie® openers, Press and **hold** the **Learn Code Button** until the LED **stops blinking**.

New Genie® Openers:

1. Press and **hold** the program button until the round LED turns blue, then release.
2. Press and **hold** the Up(+) Down (-) buttons at the same time, until the both LED flash blue and go OFF.



Note: 1.The old remote will also be cleared, please program again.

2.For specific erasing methods, please refer to the original manual of the door opener.

Troubleshooting

If you have any unresolved issues, please contact: SYhong2025@163.com.

Solution1: Maybe the memory of opener is full, please clear the memory of opener.

Solution2: Your garage door must be closed before you start to program remote, otherwise programming maybe failed.

Solution3: If one remote control is programmed successfully and the other fails, try clearing the memory and programming again.

Solution4: When programming fails, please refer to the **original** manual of the **door opener**.

Solution5: If you don't know how to program, please watch the programming video on Amazon's product main image.

Solution6: While programing Remote Button, stand at **least 5 feet** away from the opener.



Battery Replacement

Replace remote battery with **CR2032** coin cell battery.



⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Attention: Match battery polarity symbols inside battery housing.

A) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in house hold trash or incinerate.

b) Even used batteries may cause severe injury or death.

c) Call a local poison control center for treatment in formation.

d) The compatible battery type CR2032 3V.

e) Non-rechargeable batteries are not to be recharged.

f) Do not force discharge, recharge, disassemble, heat above 60°C/140°F or incinerate.

Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

When replace the battery ,please notice as below:

a) Ensure the batteries are installed correctly according to polarity (+and-).

b) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

c) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

d) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, Remove the batteries, and keep them away from children.



WARNING

INGESTION HAZARD: This product contains a button cell or coin battery.

FCC Warning :

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.