

Display Instruction Manual

V1.0

1 Touch button instructions



1	MIC	Microphone, used for Bluetooth calls
2	Mute/turn off screen	Long press: turn off screen/short press: mute
3	HOME	Return to the main interface
4	Back button	Return to the previous interface
5	VOL+	Volume up
6	VOL-	Volume down

2 Main page description




1 Left turn signal	9 Vehicle speed unit	17 Carplay
2 Low beam/high beam	10 Gear (N/D/R)	18 Android Auto
3 LOGO	11 Battery Level Display	19 Radio
4 Running light	12 Trip mileage display	20 BT Music
5 Right turn signal	13 ODO mileage display	21 Radio
6 Vehicle speed progress	14 Time	22 BT Phone
7 Direction (front/back/left/right)	15 USB Connection icon	23 BT Music
8 Speed display	16 Bluetooth connection	24 Setup

3 Radio interface operation



1	HOME	Return to the main interface
2	Return	Return to the previous interface
3	Previous frequency band	Previous frequency band
4	Next frequency band	Next frequency band
5	Frequency band list	Display the searched frequency band
6	Return to frequency band list	Return to the homepage frequency band list
7	LOC	Local radio station
8	Stereo	Stereo channel
9	Frequency band search	Full channel search
10	Frequency band switching	Frequency band switching : AM1/AM2/FM1/FM2/FM3


4 Bluetooth music interface operation

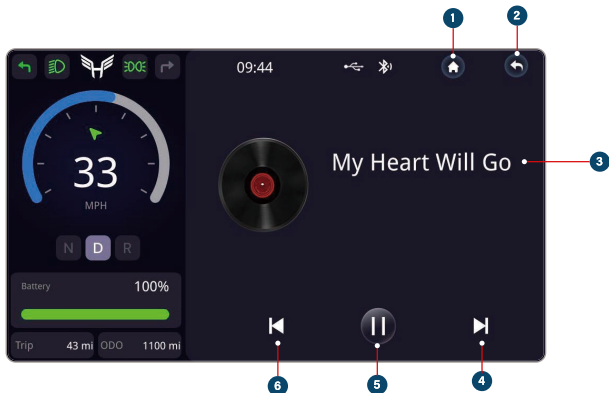

1	HOME	Return to the main interface
2	Return	Return to the previous interface
3	Song information	Display current song information
4	Next Track	Switch to the next track
5	Pause/Play	Pause/Play Switch
6	Previous track	Switch to the previous track

5 Bluetooth phone

5.1 Call Log Page

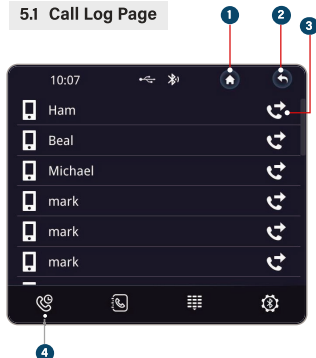

1

HOME

Return to the main interface

2

Return

Return to the previous interface

3

Call log


Call log list

4

Call log

Call log page

5.2 Address Book Page

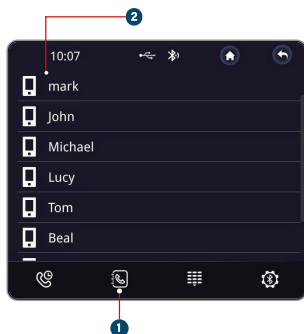

1

Address book

Address book page


2

Address book

Address book list

5 Bluetooth phone

5.3 Dialing Page

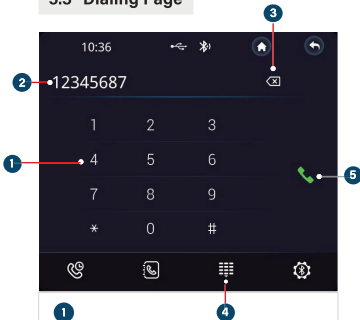

1

Dial pad
Dialing keyboard display

2

Dial
Dialing number display

3

Delete
Delete dialing number


4

Dial
Dialing page

5

Dial
Dial/hang up the phone

5.4 Address Book Page

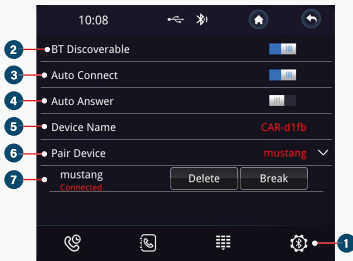

1

Bluetooth Settings

2

Bluetooth switch
On / Off

3

Automatic connection switch
On / Off

4

Automatic response switch
On / Off

5

Bluetooth Name
Bluetooth Name


6

Connected devices
List of Connected Devices

7

Device deletion
Delete connected devices


6 Settings interface

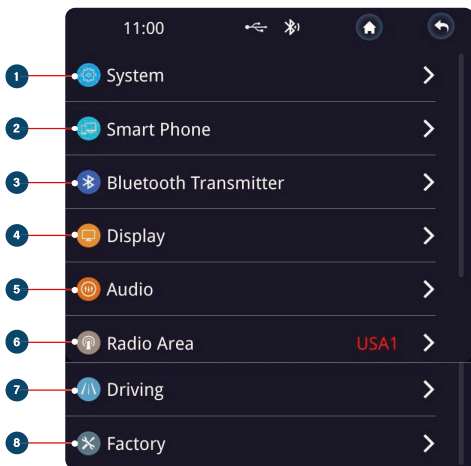

1	System Settings	5	Volume Settings
2	Phone settings	6	Radio area settings
3	Bluetooth Settings	7	Driving settings
4	Display Settings	8	Factory Settings

6 Settings interface

6.1 System Settings

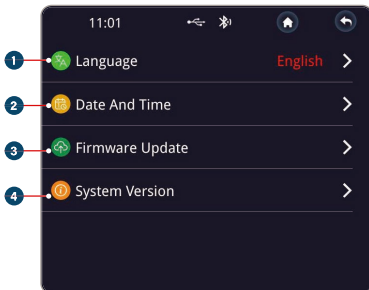

Note :

To access the system settings, please contact our support team. This is a restricted feature and can only be accessed by an authorized Honor Service Engineer.

1

Language

Language settings, available in multiple languages including English, Chinese, French, Japanese, Korean, Italian, etc. The default setting is English

2

Date And Time

Can be set to: year/month/day, hour/minute. 12 hour/24-hour format

3

Firmware Update

Software upgrades can be divided into system software and MCU software upgrades.
Upgrade plan: Copy the BIN document to be upgraded to a USB flash drive (required: 8GB FAT32 format), enter the software upgrade interface, select the corresponding system upgrade/MCU upgrade, and the upgrade process will automatically shut down and restart until the upgrade is complete. Do not power off during the software upgrade process.


4

System Version

Display system software version and MCU software version

6 Settings interface

6.2 Phone settings

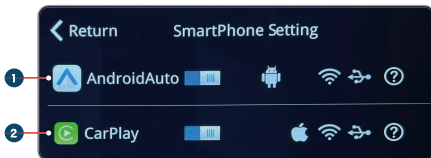

1

Android Auto


By default is on, if turned off Android phones cannot be connected.

2

CarPlay

By default is off, if turned off it will not be able to connect to Apple system phones.

6.3 Bluetooth audio connection

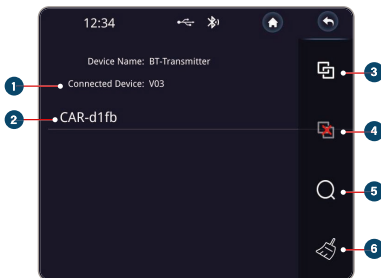

- | | |
|---|----------------------------------|
| 1 | Connected Bluetooth device |
| 2 | Search for Bluetooth device list |
| 3 | Connect Bluetooth devices |
| 4 | Disconnect Bluetooth device |
| 5 | Search for Bluetooth devices |
| 6 | Clear all Bluetooth devices |

6 Settings interface

Operation Instructions

1. Bluetooth search: Click on the ⑤ Bluetooth search icon, and the instrument panel will start searching for nearby Bluetooth devices. The Bluetooth devices found will be displayed in the ② device list. During the search process:

a: Click on the instrument search area, the instrument stops searching for devices, and displays the Bluetooth devices that have already been searched in the ② list.


b: Without any operation, the instrument search stops after 1 minute and displays the Bluetooth devices that have already been searched in the ② list.

2- Bluetooth connection: Select the Bluetooth device you want to connect to from the Bluetooth list in search ②, and click the connection icon in ③. After connecting the instrument Bluetooth to the device, the device model will be displayed in the connected list in ①.

3- Disconnect Bluetooth: Click on the ④ disconnect icon to disconnect the currently connected device, or click on the ⑥ clear device icon to disconnect the current connection and clear all devices.


6 Settings interface

6.4 Display Settings

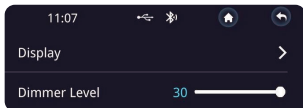


Display	Adjust color brightness
Dimmer level	Adjust the brightness of the display screen

6.5 Display Settings

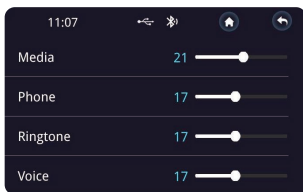


Media	Multimedia volume setting
Phone	Phone volume settings
Ringtone	Phone ringtone volume setting for incoming calls
Voice	Bluetooth phone call volume setting

6.6 Radio area settings

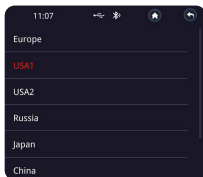

Radio area settings:
Default USA1, selectable regions:
Europe/USA/Russia/Japan/China/AUS/Latin.

 6.7 Driving settings



Reverse Camera Mirror Camera mirroring on/off, default on.

6 Settings interface

6.8 Factory Settings




Note :

This is a restricted feature and can only be accessed by an authorized Honor Service Engineer.

1	ScreenShot	Turn on/off the screenshot function. Default off.
2	VCOM	VCOM adjust
3	AVDD	AVDD adjust
4	Car Li Info	Car Li Info Information display and settings
5	Car Mcu Info	Car Mcu Info Information display and settings
6	Car Setting	Car Setting Information display and settings

6.8.4 Car Li Info

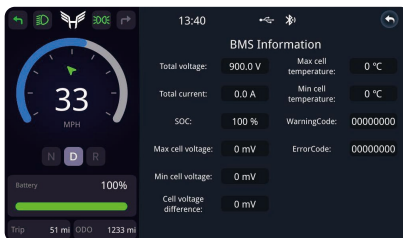

7 CarPlay and Android Auto



FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC 's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

