

尺寸：70x60mm

60.00 mm

70.00 mm

蓝牙音响说明书

基本参数

1.产品名称： TYBOX01蓝牙音响

2.蓝牙版本： Bluetooth6.0

3.喇叭功率： 4欧姆3W

4.频率响应:20HZ—20KHZ

5.电池容量： 600mAh

6.内置电压： 3.7V

7.播放时间： 4H左右

8.充电时间： 1-2H

9.充电电压： 5V/500mA

10.防水等级： IPX4

功能指示

type-c充电口

指示灯

麦克风

开关键

音量加减键

开关键：长按3秒开机，灯光闪烁3次开机状态下长按开关键约3秒关机，红灯长亮1秒

连接：开机后蓝牙音响进入配对模式，打开手机蓝牙,在搜索设备列表中找到蓝牙音响型号“TYBOX01”

连接成功后音响发出提示音：“连接成功”， 后续使用中，只要保持移动设备的蓝牙开启,即可自动连接。

蓝牙音响

1pcs

Type-C充电线

1pcs

说明书

1pcs

严重警告：

请勿在充电时使用本产品，请使用厂家指定的适配器给本品充电，内置锂电池切勿拆开放置火中，不可让金属品接触或短路电极，不可碰击或挤压电池，避免放置于潮湿腐蚀性或过热（>60℃）环境中。

商品保修卡（保修细则）

一、由购买日起至三个月保修期内，机件如有发生故障时，经本公司技术人员证实故障属正常使用下发生，将提供免费修理及零配件更换服务。

二、在下列情况，公司将拒绝提供保修服务；

a. 产品曾被错误操作，疏忽使用或因天灾人祸等意外事件引到机件损坏。

b. 产品被非本公司技术人员修理及改造。

c. 产品机身号曾被转换、涂改或删除。

d. 产品不按原厂提供安装指示。

三、此保修卡提供之免费服务并不包括产品附件，及其它装饰等项目。

四、本公司将不负责任何于器材损坏而招致直接或间接损失。

五、本保修卡内容若有修改，恕不另行通知。

保修卡

保修凭证，请认真填写妥善保管

产品型号

售出日期

购买商店

售后电话

常见问题解决方法

故障现象	故障原因	解决方法
不能开机/产品自动关闭	电池电量不足	对产品进行充电2-5小时
配对后无声	配对不正确	重新配对
充电无指示	充电器无电压输出	检查充电器是否插好或电源开关是否打开
无法收听音乐	手机不支持	换支持立体声的蓝牙音响

Bluetooth audio specification

Basic parameter

1.name: TYBOX01 Bluetooth audio

2.Bluetoothversion： Bluetooth6.0

3. Speaker power: 4 ohms 3W

4. frequency response:20HZ—20KHZ

5. battery capacity: 600mAh

6. Built-in voltage:3.7V

7. play time： ~4H

8.charging time： 1-2H

9. charging voltage: 5V/500mA

10. Waterproof rating IPX4

Function indication

Type-C charging port

indicator light

power button

microphone

Volume increase/decrease button

Power button: Press and hold for 3 seconds to turn on the device. The light will flash 3 times. In the on state, press and hold the power button for about 3 seconds to turn off the device. The red light will remain on for 1 second.

Connection: After turning on the device, the Bluetooth speaker enters pairing mode. Turn on the Bluetooth on your phone, and find the model "TYBOX01" of the Bluetooth speaker in the search list of devices.

After the connection is successful, the audio system emits a notification sound: "Connection successful", During subsequent use, as long as the Bluetooth on the mobile device remains enabled, it will automatically connect.

Disconnect: When in connected state, a prompt of "Disconnect" will be shown.

Answer/End call: Press the power button briefly.

Reject incoming call: Press the power button for about 2 seconds continuously.

Start Siri: Press the power button for about 2 seconds continuously.

Music play/pause: Short press the power button.

Volume up/down: Rotate the potentiometer.

Next song: Double-click the power button

Game mode/Music mode switch: Press the key three times

包装清单

Bluetooth audio	1pcs
Type-C charging port	1pcs
specification	1pcs

Serious Warning:

Do not use this product while charging. Please use the adapter specified by the manufacturer to charge this product. The built-in lithium-ion battery must not be disassembled and exposed to fire. Do not allow metal objects to come into contact with or short-circuit the electrodes. Do not bump or squeeze the battery. Avoid placing it in a humid, corrosive or overheated (above 60℃) environment.

Product Warranty Card (Warranty Details)

1. From the purchase date until the three-month warranty period, if any component of the machine malfunctions and is confirmed by our technicians to have occurred during normal use, we will provide free repair and replacement of parts.

2. The company will refuse to provide warranty services under the following circumstances:

a. The product was operated incorrectly, used carelessly, or damaged due to natural disasters or other unexpected events.

b. The product was repaired or modified by non-company technicians.

c. The machine number of the product was converted, altered, or removed.

d. The product did not follow the original factory installation instructions.

3. The free services provided by this warranty card do not include product accessories, and other decorations and items.

4. The company will not be responsible for any direct or indirect losses resulting from equipment damage.5. If there are any modifications to the content of this warranty card, no further notice will be given.

Warranty card

Warranty certificate. Please fill it out carefully and keep it properly.

Product model

Date of Sale

Shopping store

SupportPhone

Common Problems and Their Solutions

Fault symptoms	The reasons for the failure	Solution
Cannot turn on the device / The product will automatically shut down	Insufficient battery power	Charge the product for 2 to 5 hours
No sound after pairing	Incorrect pairing	Re-pair them
No charging indicator	No voltage output from the charger	Check if the charger is properly plugged in or if the power switch is turned on
Cannot listen to music	The phone does not support	Replace with a Bluetooth speaker that supports stereo sound.

FCC Caution:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.