 


ORSKEY K Series

User Manual

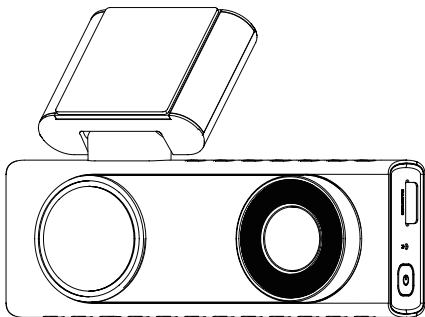

Contents

Quick Start Guide	01
Product Overview	02
Standard Items.....	02
Product Diagram.....	03
Integrated Memory Card Instructions.....	04
LED Indicators.....	04
Buttons Description.....	05
Installation	06
Display Overview	08
Operation Guidance	09
System Settings	11
Connect & Control via App	15
S5 Hardwire Kit Installation	16
Troubleshooting	18
Notice	20
FCC Statement	21
Warranty & Support Guide	22
Customer Service	24
About US	24

Quick Start Guide

★ Step 1- Memory Card Installation

Before using the dash cam, insert a compatible microSD card (Class 10, UHS Speed Class 3 [U3] or higher, max. 512GB).

★ Step 2- Power Connection

Connect the dash cam to a power source using the included USB Type-C cable—it will power on automatically .

- Important: This dash cam uses a supercapacitor rather than a battery. It must remain plugged in at all times to operate.
- For temporary use, connect to a standard 5V USB wall charger (e.g., smartphone charger).

★ Step 3- AMGEKE App Setup

Download the App by scanning the QR code or searching “AMGEKE” on the Apple App Store (iOS) or Google Play Store (Android). Pair the App with the dash cam for remote access (see details on p.15).



★ Step 4- Initial Configuration


- Set your time zone via **Time Zone** function using your local UTC offset (see details on p.13).
- Format the memory card via **Format** function (required for first-time use).

★ Step 5- Ready to Use


The dash cam operates on optimized default settings. Customize settings further via the AMGEKE App or manual controls .

Product Overview


■ Standard Items

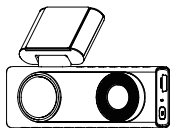

ORSKEY Front Camera

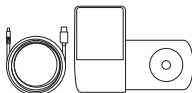

Rear Camera
(6m/20ft cable)

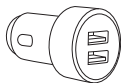

12V Car Charger
Adapter



USB Type-C Car Charger
Cable (3.5m / 11.5 ft)



 
USB Type-C Data
Cable (0.8m / 2.6 ft)




Spare 3M Adhesive
Sticker



Electrostatic Films
(2×Front + 2×Rear)



Trim Removal Tool

 


User Manual

⚠ Notes

1. This User Manual applies to **Model K80** (4K + 1080P) and **Model K70** (4K). Accessories listed are for reference only and may vary by product configuration or region. For exact details about your purchase, refer to the retailer's product page. Review the warranty policy in this manual to understand coverage terms .
2. The included USB Type-C Data Cable is for video file transfer to computers only—it does not support charging .

Product Overview

 ■ Product Diagram

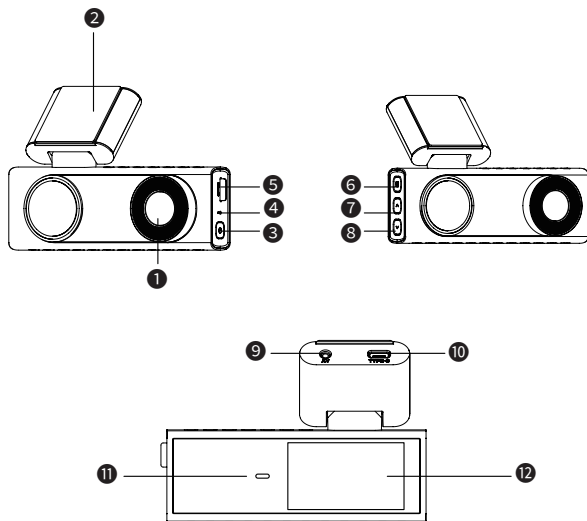

❶	Camera Lens	❷	Up Button / Emergency Recording
❸	Mounting Bracket	❸	Down Button / Wi-Fi Toggle
❹	Power Switch	❹	AV Output Port
❺	Reset Button	❺	USB Type-C Power Input
❻	microSD Card Slot	❻	Status LED
❼	Menu / Playback / Confirm	❼	Display