


VIDEO WALKIE-TALKIE FOR KIDS

USER'S MANUAL



 
I. Appearance and functional description

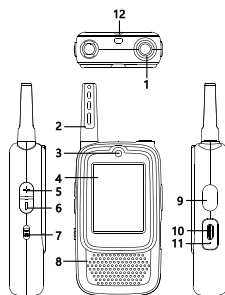

- 1- Camera conversion/voice change button
- 2- Antenna
- 3- Camera
- 4- Display screen
- 5- Volume up
- 6- Volume down
- 7- Power switch
- 8- MIC hole
- 9- Intercom key
- 10- Type-C interface
- 11- Charging indicator light
- 12- Rope hole

II. Power on/off function

1. The product is factory-settings with the power switch in the "OFF" position
2. As shown in the figure, pushing the button upward will turn on the device, and pushing it downward will turn it off.
3. Please fully charge the product before using it for the first time.



Power OFF



Power ON

III. Charging indicator

1. Connect the included charging cable to the charger, the power indicator will light "red".
2. Charger adaptation specifications: 5V/1A.

IV. Function description

1. Turn the power switch to the "ON" state, the machine will automatically turn on and display our own camera image. When the other party's device is turned on, both Parties will automatically connect and display each other's image.
2. Press and hold the "P" button to initiate voice intercom. The device voice is transmitted through a one-way channel, and only after the speaker releases the intercom button can the other party press the intercom button to send the voice.
3. Image Display Switch Key "M": This device has the following four screen display modes:

4. Volume adjustment:

Short press the "+" button to increase the volume. Short press the "-" button to decrease the volume.

5. Voice changing function:

Press and hold the "M" key for 2 seconds, then release it to switch to voice mode. The voice change mode returns to the original voice mode after powering off.

6. Product power on/off and auto-off function:

This product enters the working state after being turned on. Regardless of whether it is used or not, it will always be in working condition. It will automatically shut down when the battery is low. If you stop using it, please turn the toggle switch to the "OFF" state. If you need to restart the product, simply turn the power to "OFF" and then to "ON" to start it normally.

7. Product pairing and connection methods:

This product adopts WIFI 2.4G transmission and connection mode; Each package contains two walkie-talkies that have been paired and cannot be connected to other machines for use. If multiple sets of products are purchased, they can only be connected one-to-one in sets and cannot be used simultaneously.


8. Precautions:

- a. This product is suitable for outdoor use.
- b. This machine is not waterproof.
- c. The indoor distance of the product shall be based on the image without any lag.

V. Product specifications

Display	2.0 Inch IPS
CMOS Pixel	300,000 pixels
Battery Capacity	3.7V 650mAh
Language	English
USB Port	Type-C
Operate TEMP	-20°C ~ 60°C
Storage TEMP	-30°C ~ 70°C
Power	5V/1.0A
Product Size	124mm*54mm*23mm

CE FC RoHS
Made in China

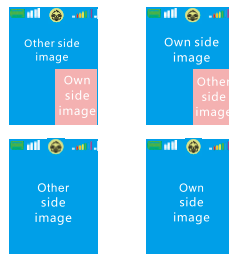

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.