

V-NTVMS-CMT-AA-01 说明书
V-NTVMS-CMT-AA-01 instructions



Input Voltage	DC12V
Current	12A
Product function	Signal lights,including the driving lights,brake lights and turn signals
Temperature for Normal Working	-20℃~60℃
Degrees of protection provided by enclosure	IP66

本产品主要功能:

Main features of this product:

将车辆的信号灯通信方式,行车灯/刹车灯/车向灯由电缆传输。

The communication method of the vehicle's signal lights, including the driving lights, brake lights and turn signals, is through cables.

其它工作灯、呼吸灯、警示灯、显示屏、电机信号则采用电缆传输或无线传输。

Other working lights, breathing lights, warning lights, display screens, motor signals are transmitted by cable or wireless.

遥控器按键功能

Remote control button functions:



VMS CONTROL			
	Total switch		Worklight switch
	Open the display screens to 90 degrees		Open the display screens to 135 degrees
LIGHTBAR CONTROL			
	warning lights switch		Flow LED both side
	to the left		to the right

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.