 


Product User Manual

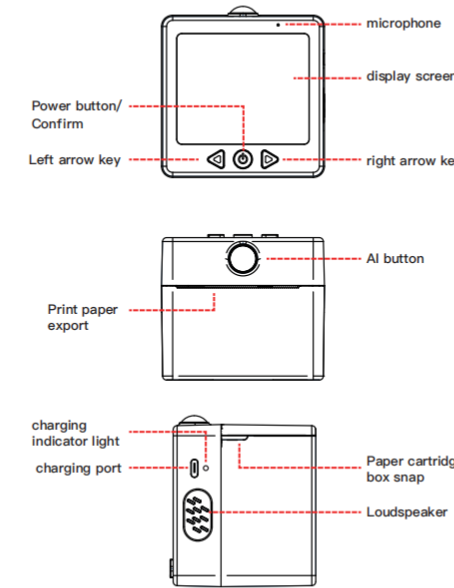 


Button instructions:



Paper Loading Instructions:

- Step 1: Ensure that the machine is turned off. Grip the buckles from both sides and open the paper loading door (as shown in Figure 1)
- Step 2: Pay attention to the direction of the thermal paper when loading it (as shown in Figure 2)
- Step 3: After loading the paper and closing the door, the machine can be used normally.

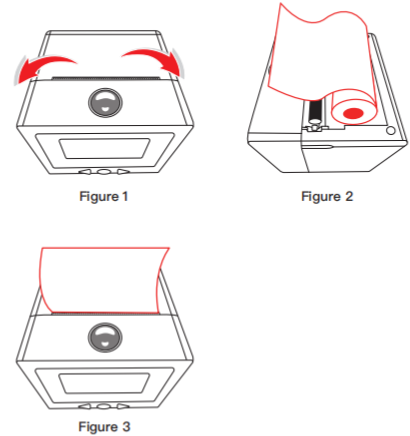

Operation Instructions:

I. Bluetooth Connection


Method 1:

- Press and hold the power button to turn on the device, and the screen will display as shown in Figure 1.
- On any screen, long press the left arrow key for about 3 seconds. The device enters Bluetooth pairing mode, the screen shows "Pairing..." and the blue LED flashes rapidly.
- Open your phone's Bluetooth settings, search for available devices, select the Bluetooth device named "Printer_BT" (or the actual device name), and tap "Pair".
- If prompted for a pairing code, enter 0000 or 1234 (default).
- After successful pairing, the screen shows a "Connected" icon and the blue LED stays solid. You can now send print jobs via any Bluetooth printing capable App (e.g., the official App).



Method 2:

 - After power on, long press the left arrow key to enter pairing mode (as above).
- Scan the QR code shown on the screen (or on the package) to download and install the official App.
- Open the App, tap the "Bluetooth Search" button on the home page (see Figure 3). The App will automatically scan for nearby Bluetooth devices.
- Select your printer name (e.g., "Printer_BT") from the list and tap to connect.
- After successful connection, a Bluetooth connected icon appears at the top of the App home page, and you are ready to print.

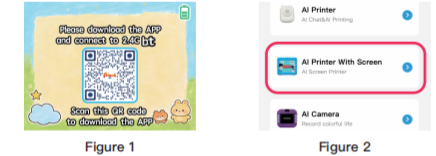

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

II. Mode Switching

After long-pressing the power button to power on and configure the Bluetooth, press the left and right arrow keys to switch to the corresponding image modes. These modes are: stick figure, line drawing, sketch, anime, cartoon, and ink painting. The generated image styles vary in different modes, and you can switch as needed.

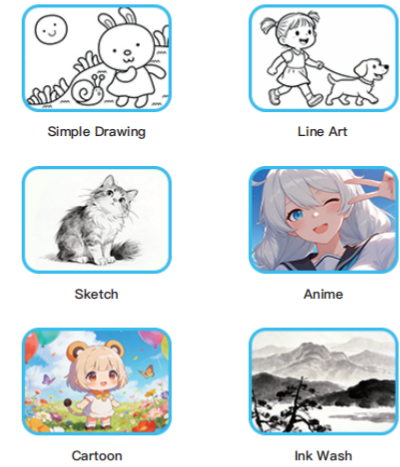

III. Printing of voice-generated images

 
- After powering on and configuring the Bluetooth by long pressing the power button, select the corresponding image mode. Keep holding the AI button and start voice inputting the image you want to generate after hearing the prompt tone (Figure 1). For example: Help me generate a cat. After voice input is complete, release the AI button, and the machine will recognize the voice and print the generated image.
- When the AI button is pressed and no voice input is made, a prompt as shown in Figure 2 will pop up. At this time, pressing any button can close the prompt and return to the selected mode page.



Charge

If you need to charge, please use the matching charging cable to charge in a timely manner. Do not use during charging.

Charging status indicator light: The red light is on during charging, and the red light for charging saturation is off.

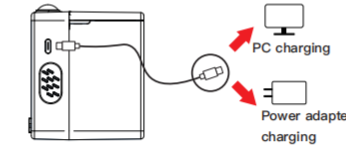

Warning

- Contains small parts, not suitable for children under three years old!
- Do not approach fire sources while playing!
- A guardian should be present to supervise children while they are playing.
- When cleaning this product, ensure that the charger is disconnected.
- Please use a regular 3C power adapter 5V 1A for charging.

This product should not be immersed in water or placed in a humid environment for a long time. Please wipe the surface stains with a dry cloth. It is necessary to regularly check whether the wires, plug housings, and other components are damaged. If any damage is found, they should be immediately stopped from use until they are repaired. In addition, to reduce battery aging and swelling; If not used for a long time, it needs to be charged once every three months or so.

Matters needing attention

- This product should not be immersed in water or used in humid environments. Please keep the product case and interface dry.
- The built-in battery is non removable and non replaceable. If it is damaged, please contact the merchant or customer service for repair.
- Charging should be carried out under adult supervision. If you come into contact with charging objects or parts, please keep them dry and operate charging according to safety regulations.