

解压助眠音响使用说明书

产品型号： C10
适用场景： 摆件、助眠、放松、冥想、学习专注、缓解压力、床头夜灯

安全须知

- 1.用电安全
- 使用原装充电线，5V2A/5V3A充电器，避免电压不稳导致损坏，请勿使用9V/12V充电器；
 - 充电时请勿长时间离开，充满电后及时断开电源；

- 2.使用环境
- 避免高温、潮湿或强磁场的环境；

- 请勿将音响置于枕头、被褥等柔软物品或大幅度不平整斜面上，以免堵塞散热孔，防止设备倾斜水箱漏水；

- 户外使用设备，需提前清空水箱内储水，放置平稳后再注水使用设备；
- 设备水箱注水请用清洁干净水源，勿使用有杂质的水源；

- 往水箱注水时注意勿撒至充电口和喇叭出音孔处；

 
- 设备在使用中，雨滴停止工作，可反复短触雨滴开关键直至雨滴正常工作即可；

- 3.适用人群
- 适合各年龄段人群使用；
 - 儿童需在成人监护下使用；

- 听力敏感者建议调低音量使用；
- 灯光敏感者建议调暗灯光适用；

- 4.禁止事项
- 请勿拆卸、改装产品，否则可能引发故障或安全隐患；
 - 如设备有进水情形，请勿开机使用，清理并晾干后再开机使用；

产品示意图

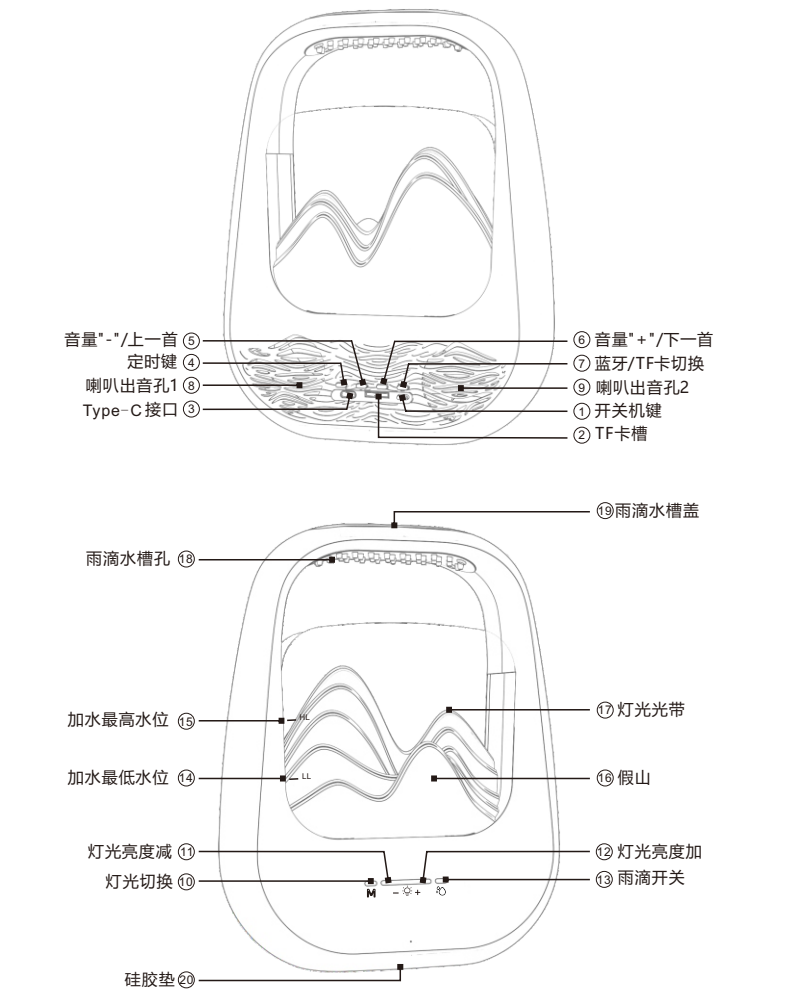

使用方法

- ① 开关机：短按 开关机键提示音后进入开机模式
长按 开关机键2秒关机
双击 开关机键中文/英文语言模式切换
- ② TF卡槽：插入TF卡，播放TF卡音乐内容
- ③ Type-C充电口：使用Type-C/USB线连接充电器，红灯亮表示充电中或电源连接，红灯灭表示已充满。
- ④ 定时：单击 定时键设置定时,按一次30分钟，按两次60分钟，按三次90分钟，长按取消定时。
- ⑤ 音量减：单击 “音量减” 长按 “上一首”
- ⑥ 音量加：单击 “音量加” 长按 “下一首”
- ⑦ 蓝牙/TF卡切换：短按 (蓝牙/TF卡切换)
双击 (音乐暂停/播放)
长按 (蓝牙连接状态下、断开蓝牙连接)
- ⑧ 喇叭出音孔1
- ⑨ 喇叭出音孔2
- ⑩ 灯光切换：单击触摸 切换模式；
模式一：暖白光模式，指示灯闪烁
模式二：单色呼吸循环模式，指示灯闪烁
模式三：七彩呼吸循环模式，指示灯闪烁
- ⑪ 灯光亮度减：短触 (亮度慢速变暗) 指示灯闪烁
长触 (亮度快速变暗) 指示灯闪烁
- ⑫ 灯光亮度加：短触 (亮度慢速变亮) 指示灯闪烁
长触 (亮度快速变亮) 指示灯闪烁
- ⑬ 雨滴开关：单触 (雨滴开/关) 指示灯闪烁
- ⑭ 最低水位：水箱最小注水建议水位
- ⑮ 最高水位：水箱最大注水建议水位
- ⑯ 假山：产品设计效果
- ⑰ 灯光光带：灯光亮后，山棱呈灯带发光
- ⑱ 雨滴水槽孔：蜂巢状滴水孔;(提示：开机后水压过大，滴水呈水柱时，可轻拍水槽盖至水滴状即可)
- ⑲ 雨滴水槽盖：水槽盖可打开，雨滴孔堵塞时可打开清洁
- ⑳ 硅胶垫：固定防滑；(提示:设备平放至玻璃面时硅胶垫自带吸力吸住桌面，可双手握住左右壳左右用力轻微旋转向上提至硅胶离开桌面)

蓝牙连接

 
连接：按 切换蓝牙模式，打开手机或其它蓝牙设备，搜索"C10"，点击连接。



消除硅胶垫吸力

双手握住产品，左右轻微旋转，并向上提起使产品离开桌面。

提示：硅胶自吸力较大，水箱有水时，如需移动产品，请按图示操作，请勿前后左右晃动产品,防止水溅出流入内部损坏产品。

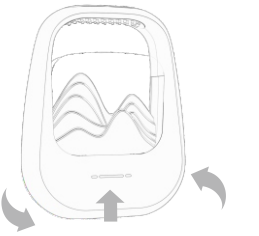

灯光场景模式说明

- 1.隐光秘影(暖白光)
见光不见灯，以柔和的暖白光（4000k-5000k），模拟月光倾泻的效果，高山流水营造出温馨与自然感。
推荐使用场景：工作、学习、洽谈、疗养
效果：放松心情，提高专注力，缓解焦虑
- 2.素彩光韵(单彩光)
单彩素色赋予平静祥和氛围，以水滴“动”态效果，营造出情绪舒缓空间感。
推荐使用场景：冥想引导、呼吸练习、睡前放松
效果：情绪缓解，焦虑释放，纯净氛围
- 3.静夜流光(彩光轮换)
彩灯轮换，以动入静，配以夜幕雨滴，深呼吸频率，梦境通幽，打造睡梦空间。
推荐使用场景：失眠、压力大、深度睡眠
效果：屏蔽干扰，情绪放松，深度助眠

维护与保养

- 1.清洁：定期用干软布擦拭表面，避免液体及灰尘进入机身。
- 2.存放：长期不用时，请关机并存放在干燥通风环境中。
- 3.电池：每月至少充放电一次，延长电池寿命。

故障排除

- 1.问题现象：无法开机
解决方法：检查电量，充电30分钟后再尝试
- 2.问题现象：蓝牙连接失败
解决方法：按蓝牙切换键，并靠近设备（10米内）
- 3.问题现象：按键无反应
解决方法：长按电源键8秒强制重启

注意事项

- 本产品非医疗设备，不可替代专业治疗。
- 使用过程中如发现漏水，请立即停止并咨询生产商。
- 大音量长期使用会影响听力，请调整至适当音量使用。
- 请妥善处理废弃产品，遵守当地环保法规。

基本参数

- 电池容量：[4000mAh]
- 播放时长：[3~4H]
- 蓝牙版本：[5.3]
- 频响范围：[2402-2480MHz]
- 喇叭功率：[2x8W]
- 充电功率：[5V/1A]
-

售后服务

- 保修期：[1年]

生产日期及批次号：见产品外包装标签。
提示：本说明书内容仅供参考，请以实际产品功能为准。

Multifunctional decor speaker user manual

Product Model:C10
Applicable Scenarios: Decoration, sleep aid, relaxation, meditation, learning concentration, stress relief, bedside night light

Safety Notice


- 1.Electrical Safety
- Please use a regular charger with specifications of 5V2A or 5V3A for power supply to prevent damage to the device caused by voltage instability. Do not use 9V or 12V chargers.
 - Do not leave for a long time while charging, and disconnect the power supply in time after fully charged.

- 2.Operating Environment
- Avoid environments with high temperature, humidity, or strong magnetic fields.
 - Do not place the speaker on soft items such as pillows or quilts, or on significantly uneven slopes, to avoid blocking the cooling vents and preventing water leakage from the device's water tank due to tilting.
 - When using the device outdoors, empty the water stored in the water tank before carrying it. After placing it steadily, inject water and then use the device.
 - For water injection into the device's water tank, please use clean and pure water sources. Do not use water sources with impurities.
 - When filling the water tank, take care not to spill water onto the charging port or the speaker sound outlet.
 - When the device is in use and the raindrop function stops working, you can repeatedly short-press the raindrop on/off button until the raindrop function works normally.

- 3.Target Users
- Suitable for users of all age groups.
 - Children should be used under adult supervision.
 - It is recommended that people with hearing sensitivity turn down the volume when using the device.
 - It is recommended that people sensitive to light dim the lights when using the device.

- 4.Prohibitions
- Do not disassemble or modify the product, as this may cause malfunctions or safety hazards.
 - If the device gets water inside, do not turn it on. Clean and dry it thoroughly before powering on.

Product Schematic Diagram

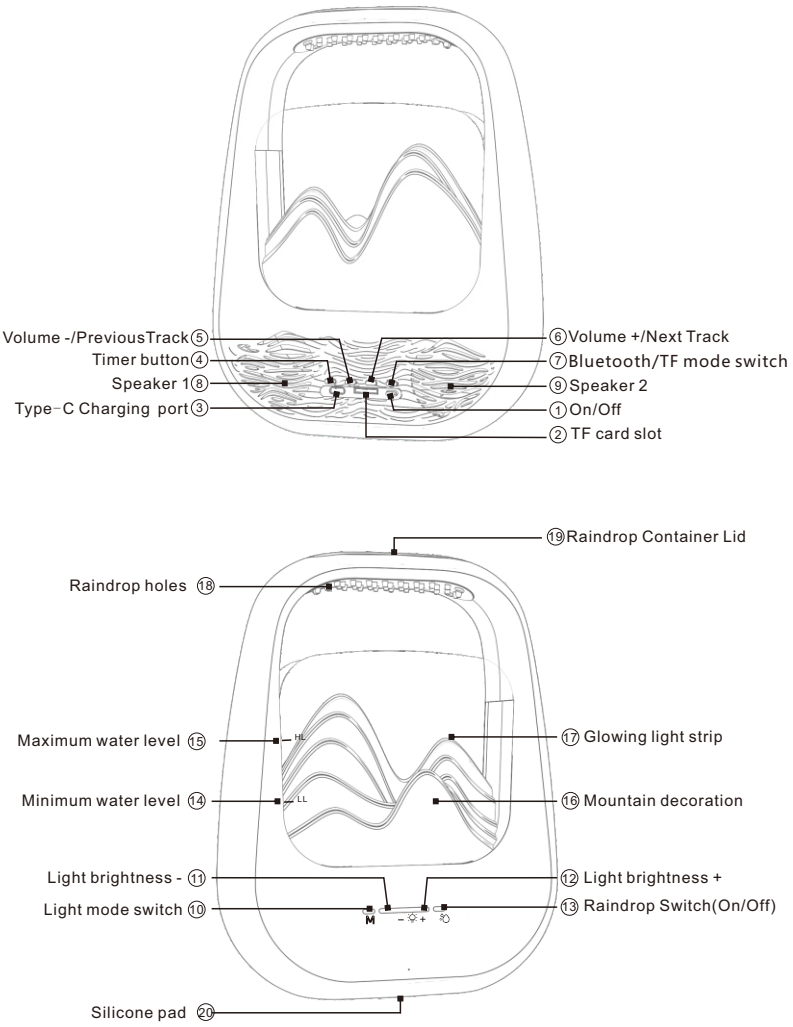


Usage Guide

- ① Power on/off: Short-press the button, and enter the power-on mode after the prompt tone.
Long-press the button for 2 seconds to shut down.
Double-click the button to switch between Chinese and English language modes.
- ② TF Card slot: Insert a TF card to play music content from the TF card.
- ③ Type-C charging port: Use a Type-C/USB cable to connect to a charger.
A red light indicates charging or power connection, and the red light turning off means it is fully charged.
- ④ Timer: Single-click the button to set the timer.
Single click for 30mins, double click for 60mins, triple click for 90mins.Long press to cancel timer.
- ⑤ Volume down: Single-click "Volume Down".
Long-press "Previous Track".
- ⑥ Volume up: Single-click "Volume Up".
Long-press "Next Track".
- ⑦ Bluetooth/TF Card switch: Short-press (Bluetooth/TF Card Switch)
Double-click (music pause/play)
Long-press (to disconnect the bluetooth connection)
- ⑧ Speaker 1: Sound outlet
- ⑨ Speaker 2: Sound outlet
- ⑩ Light mode switch: Single-click the touch area to switch modes.
Mode 1: Warm white light mode.
Mode 2: Single color breathing cycle mode.
Mode 3: 6 color RGB light.
- ⑪ Light brightness down: Short-touch (brightness dims slowly).
Long-touch (brightness dims quickly).
- ⑫ Light brightness up: Short-touch (brightness increases slowly).
Long-touch (brightness increases quickly).
- ⑬ Raindrop switch: Single-touch (raindrop on/off).
- ⑭ Minimum water level: The recommended minimum water level for tank filling.
- ⑮ Maximum water level: The recommended maximum water level for tank filling.
- ⑯ Mountain decoration: Product design effect.
- ⑰ Glowing light strip: After the light is on, the mountain ridges emit light in the shape of a light strip.
- ⑱ Raindrop hole: Honeycomb-shaped raindrop hole;(Tips: When the water pressure is too high after powering on and the raindrops form water columns, gently tap the trough cover until the raindrops become droplet-shaped.)

- ⑲ Raindrop Container Lid: The lid can be opened for cleaning when the raindrop holes are blocked.
- ⑳ Silicone Pad: For fixing and anti-slip.

Bluetooth Connection

 
Connection method: Press to switch to Bluetooth mode, turn on your phone or other Bluetooth devices, search for "C10", and click to connect.

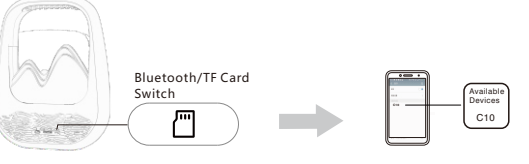

Release the suction of the silicone pad.

Hold the product with both hands, gently rotate it left and right, and lift it upwards to make the product leave the desktop.

 Notice:
The silicone pad has strong self-suction.
When the water tank is filled with water,
When moving the product, please follow the instructions in the diagram. Do not shake the product back and forth or left and right to prevent water from splashing and flowing inside, which may damage the product.

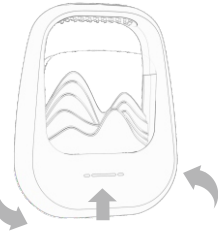

Lighting Scene Mode Instructions

1. Warm White Light(Hidden Light Secret Shadow)
The light is visible while the lamp is hidden. With soft warm white light (4000K-5000K), it simulates the effect of moonlight pouring down, and the flowing water over rocks creates a warm and natural atmosphere.
Recommended usage scenarios: work, study, negotiation, recuperation
Function and Effect: Relax the mind, enhance concentration, and alleviate anxiety.
2. Single-Color Light(Plain Color Light Rhythm)
Single-color tone endows a peaceful and harmonious atmosphere, and the dynamic effect of water droplets creates a space for emotional relief.
Recommended usage scenarios: meditation guidance, breathing exercises, pre-sleep relaxation
3. Color Light Rotation(Quiet Night Flowing Light)
Color lights rotate, turning movement into stillness. Paired with night-time raindrops and deep breathing rhythms, they lead to a secluded dream realm, creating a space for sound sleep.
Recommended usage scenarios: insomnia, high stress, deep sleep
Function and Effect: Block interference, relax emotions, and deeply aid sleep.

Maintenance and Care

- 1.Cleaning: Regularly wipe the surface with a dry soft cloth to prevent liquids and dust from entering the body.
- 2.Storage: When not in use for a long time, please turn off the device and store it in a dry and ventilated environment.
- 3.Battery: Charge and discharge at least once a month to extend battery life.

Troubleshooting

- 1.Problem Symptom: Unable to power on.
Method: Check the battery level and try again after charging for 30 minutes.
- 2.Problem Symptom: Bluetooth connection failure.
Method: Press the Bluetooth switch button and stay close to the device (within 10 meters).
- 3.Problem Symptom: No response to operation.
Method: Long-press the power button for 8 seconds to force a restart.

Precautions

- This product is not a medical device and cannot replace professional treatment.
- During use, if water leakage is found, please stop immediately and consult the manufacturer.
- Prolonged use at high volume may affect hearing. Please adjust to an appropriate volume when using.
- Please properly dispose of the waste product and comply with local environmental protection regulations.

Basic Parameters

- Battery Capacity:[4000mAh]
- Playback Duration:[3~4H]
- Bluetooth Version:[5.3]
- Frequency Response Range:2402-2480MHz
- Horn Power:[2x8W]
- Charging Power:[5V/1A]

After-Sales Service

Warranty Period: [1 year]

Production Date and Batch Number:
See the label on the outer packaging of the product.

Prompt: The contents of this manual are for reference only.
Please refer to the actual product functions.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.