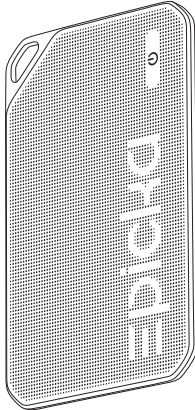
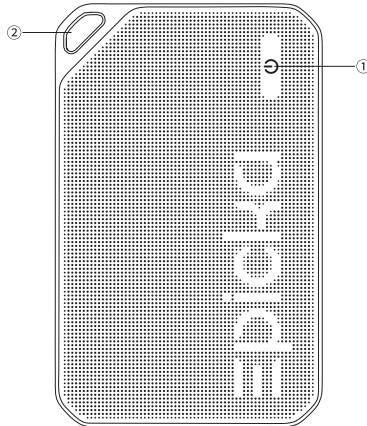


名称	EP-U1LC5A 卡片防丢器说明书	规格	54*84 mm	装订方式	折页
版本号	V1.03	材质	80g书纸双面印刷	设计师	Batman
变更记录	修改页面顺序				
备注	此文档仅归深圳万拓科技创新有限公司所有，请勿随意使用				

 epicka Tagie Slim Finder Card User Manual Please read this manual carefully before use and keep it for further reference.  Works with Apple Find My To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS. GET TO KNOW YOUR CARD - The Epicka Tagie Slim Finder Card (referred to as "the Card") helps you easily keep track of your belongings. It appears in Apple's Find My app, where you can view your item on a map or play a sound to locate it. - When your Card is misplaced but nearby, play a sound to pinpoint its location. - Location information is only sent to Apple when you actively locate your Card, mark it as lost, or enable the Share Item Location feature. All data is encrypted on the server, ensuring everyone's information remains private—even Apple cannot access it. - Requires iPhone SE, iPhone 6s or later, iPod touch (7th generation) with iOS 14.5 or later, or iPad Pro, iPad (5th generation or later), iPad Air 2 or later, iPad mini 4 or later with iPadOS 14.5 or later. Using the latest version is recommended. - To check the firmware version, go to the Find My app, open the product details page, and view the Firmware section. IN THE BOX - Tagie Slim Finder Card x 1 - User Manual x 1 PRODUCT OVERVIEW  ① Button ② Hanging Hole (The lanyard needs to be purchased separately) USE WITH FIND MY APP (APPLE USERS ONLY) Before You Start - An iPhone, iPad, or iPod touch with iOS 14.5 or iPadOS 14.5 or later and two-factor authentication turned on. Find My enabled. - Bluetooth turned on. - Location Services turned on: Go to Settings > Privacy > Location Services. - To use Precision Finding to get the most accurate location for your Card, turn on Location Access for Find My. Go to Settings > Privacy > Location Services, then scroll down and tap Find My. Check While Using the App / While Using the App or Widgets, then turn on Precision Location. Add Your Card - Open the Find My app, go to the Devices tab, tap + , then tap Add Other Item. - Bring the Card close to your phone. Press the button on the Card and you will hear a beep sound, then tap Connect on your screen. - Name the Card, then tap Continue. - Choose an emoji for the Card, then tap Continue. - Tap Agree to register the Card with your Apple ID. - Tap Finish, now you can attach the Card to an item and see it in the Find My app. Tip: Status confirmation - Normally, when the Card is powered on, pressing the button once will cause the Card to emit a single beep sound. If you can't set up your Card: - Make sure that the Card is ready for setup, check the Before You Start section for more. - If you have multiple Cards to set up, make sure that only one is near your device when you attempt to connect. - If the Card still won't connect to your device, try to reset it, check the Disable Find My Network and Reset Your Card section for more. If you see a message that says your Card is connected to another Apple ID: - Make sure you have removed the Card in the Find My app of the previous Apple ID if you plan to use it with a different Apple ID. - If you are adding the Card for the first time and encounter this issue, please contact support@epickatech.com to get help. Locate Your Card Open the Find My app, select your Card from the Items tab, and tap Play Sound. The Card will ring to help you locate it. Reset Your Card - Press the button once, then quickly press and hold it for 3 seconds. Release the button when you hear a long beep. - The reset is complete, and the Card is ready for a new pairing. Tip: - If you still want to connect the Card to the same phone, it is recommended to restart the phone before trying to connect again. Remove Your Card - Open the Find My app and go to the Items tab. - Select your Card and scroll to the bottom of its detail page. - Tap Remove Item and confirm. The Card will beep once, indicating that it has been removed. ANTI-TRACKING & DISABLE FIND MY NETWORK If your phone detects an unknown Card moving with you over time, the Find My app will notify you. Learn More About the Card - Open Find My > Items > Identify Found Item. - Select the Card you want to learn about in the Searching Items list, then tap Continue. - Press the button on the Card. - Tap Continue On Website for more information including any Lost Mode message from the owner. Disable Find My Network If you are not familiar with this Card, you can disable it and stop sharing its location. - Tap Instructions to disable. - Press and hold the button on the Card for 3 seconds to power it off and stop sharing its location.
--