

折叠后尺寸:84x120mm
材质:普通纸,正反面单色印刷

TOMASHI

DESKTOP CD PLAYER

USER MANUAL

MODEL:CD-67



Thank you for purchasing our personal audio products. High-quality CD player is an electronic acoustic technology product carefully designed by our company. To obtain the perfect use effect and prolong the service life of this product, correct use and maintenance are very important, please read this manual carefully before use it.

IMPORTANT REMINDER

- (1) Safety Instructions:
- ◇ Don't expose this unit or any accessories near water or under the sun. Don't place this unit next to the fire, heating or the liquid. If liquid splashes on the surface or inside of the product, please cut off the power supply immediately. Please contact with our customers' service people firstly, they will indicate you how to re-work and operate.
 - ◇ Please unplug the AC/DC adapter before lightning or rainstorm weather. (If you use AC/DC adapter to supply power)
 - ◇ Don't scratch LCD lens with something hard, to avoid any damage.
 - ◇ Don't touch CD optical head, otherwise, the playback will be affected.
 - ◇ Don't insert anything into the ventilation slot.
 - ◇ If this unit is transported at less than 5℃, please open the unit package and wait for the unit temperature in accordance with the house temperature, then turn it on.

- (2) Don't Overheat
- ◇ Relevant identification and power supply please check the technical data in back of unit or user manual.
 - ◇ Don't place this unit in an enclosed space, be sure to leave 10cm/4 inches space around it.
 - (3) if unit is dead, please use long thin stick to long press RESET button(#17).

VERY IMPORTANT TIPS

- ◇ When using this product, please follow the prescribed steps, otherwise you may be exposed to harmful radiation. This CD player is a CLASS 1 LASER (Class I laser) product.
- ◇ When the CD door is opened or carelessly closed, an invisible laser will be generated. Avoid radiation beams.
- ◇ Please do not touch the bald head at will, otherwise it will affect the playback performance.




POWER SUPPLY

- A. You can use power from built-in rechargeable polymer battery. When battery is low power, battery indicator “” will flash, indicating that you need to charge battery. Low battery operation will affect the unit normal playback.
- B. AC/DC adaptor: Connect the 5V USB AC/DC adapter to a household AC power outlet. Use provided Type-C USB power cable to connect the unit and the 5V USB AC adapter. When battery is charging, the indicator (#19) is red color, when it is green, it's full capacity, and you can see “” on LCD display.
- C. Unit can be working when battery is charging.


Note : Don't take out the built in rechargeable battery in case of burst.

FUNCTION DESCRIPTION

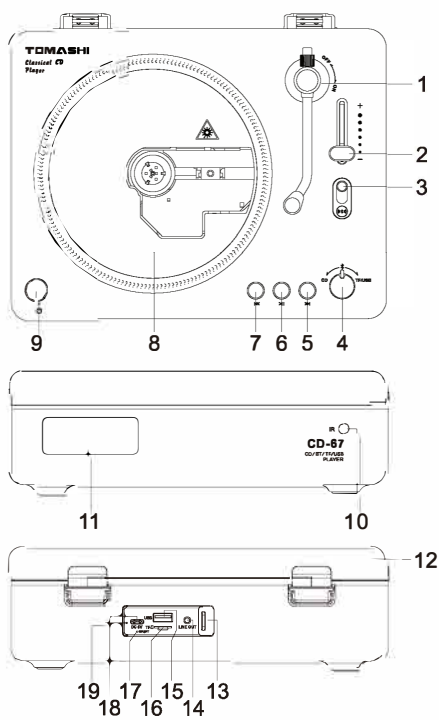

1. CD on/off switch
2. Volume control
3. Bluetooth knob
4. Function switch
5. Next(short press)/skip+(long press)
6. Play /pause(short press) & stop (long press)
7. Previous(short press)/skip-(long press)
8. CD deck
9. Power on/off button
10. Remote control sensor
11. LCD display
12. CD compartment cover
13. Interference cover
14. Line out jack
15. USB port
16. TF card slot
17. Reset button
18. Power jack
19. Charging indicator

LCD DESCRIPTION

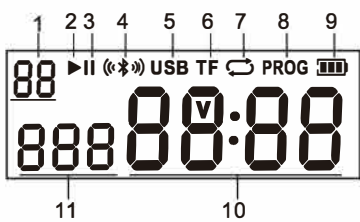

1. A. USB/TF mode: folder display
B. CD mode: show “”
2. Play mode
3. Pause mode
4. BT mode: “” is bluetooth transmitter, “” is bluetooth receiver
5. USB mode
6. TF card mode
7. Repeat mode: “” is repeat one only
“” is repeat all
8. Programme mode
9. Battery indicator

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

10. A. CD/USB/TF playback mode: show playback time
B. CD mode: flashing “---” means disc is being read
C. CD mode: when put CD on/off switch(#1) to off position, it show “”
D. CD/USB/TF programme mode: show “P-01”
E. BT playback mode: show “”
5. Track number

Note : Validity working distance for remote control is within 3 meters (when nothing is blocking), and working direction is horizontal 30 degree angle for left and right.

1. Power on/off: First press to turn on unit, you can see LCD display is on and show “”, press again to turn it off, and LCD display is off at the same time.
2. Next: When CD/USB/TF is playback, press this button to go to the next track
3. Previous: When CD/USB/TF is playback, press this button to select the previous track
4. Skip forward: Long press this button to fast forward to the segment you need for CD/USB/TF
5. Skip rewind: Long press this button to fast rewind to the segment you need for CD/USB/TF
6. Numeric keys(0 - 9): When CD/USB/SD card, directly press your desired track number. For Example, if you want to play the 14th track, you can press button “1” and “4”.

7. Bluetooth transmitter: When CD/USB/SD playback, place your wireless device near the unit and make sure it's under bluetooth mode, press this button to go to bluetooth transmit, you can see “” is flashing on the LCD display which means unit is under bluetooth pairing mode, the two devices will pair automatically in short time. When “” on display is stop flashing, it will be successfully connected and audio will be transmitted wirelessly from the unit to the device. If you want to disconnect the wireless link, long press this button again to exit bluetooth mode.
8. Play/Pause button: During CD/USB/TF card playback, press this button to pause, and press it again to resume playback.
9. Stop button: When playback mode, press this button to stop playing.

10. Programme button:
A. When CD/USB/SD is under stop mode, press this button to enter programme mode, take USB for example, you will see the display as below



“01” is flashing on the upper left, it is the folder number for the track which stop playing. “26” before “P-01” is track number which stop playing. For “P-01”, the number after “P” is the tracks' qty you selected. press the previous or next button to select the tracks you want, and then press PROG button after each selected track to confirm. Press the play button to playback the programmed tracks.

- B. if you want to exit program mode, press stop button two times and press the play/pause button to go to normal

11. Repeat button: When CD/USB/TF is playback, press this button once to repeat the current track, and the LCD will show “”, press it again to repeat all the tracks, and the LCD will show “”; press the third time to cancel the repeat and resume normal playback

CD PLAYBACK OPERATION

- (1) CD Playback
 - Open CD cover(#12), press power on button (9), turn function switch(#4) to CD position. Insert a CD or MP3 disc, CD on/off switch(#1) to “on” position, it will automatically playback.
 - Press stop button(#6), move CD on/off switch(#1) to “off” position, CD will stop playback
 - Short press “ >” to previous (#7) or next (#5) track, if long press, it's skip forward or skip rewind.
 - When CD playback mode, short Press “>” (#6) to pause and press again to resume playback.
 - Turn up or turn down volume control (#2) to adjust sound output.
 - When CD playback, long press “>” (#6) to stop playback

- Special Reminder
- ◇ Don't use irregular discs.
 - ◇ Don't put more than 1 piece disc into CD compartment.
 - ◇ Before you changing disc, please long press “>” to stop playback

USB/TF OPERATION

1. Insert the USB/TF card with MP3/WMA/WAV format into USB port (#15) or SD card slot (#16)
2. Turn the Function switch button(#4) on the unit to USB/TF card mode, it will Playback after the unit detecting it.
3. USB/TF card playback operation method is same as the section “CD playback”.

LINE-OUT OPERATION

1. This product can be connected to external audio device through the line out jack. (#14), You need to use your own audio cord.
2. In LINE OUT mode, the CD player's volume knob will not work. You can adjust the volume through the external device.

BLUETOOTH OPERATION

- It's necessary that your wireless device support the Bluetooth standard. To avoid pairing errors, switch off other nearby wireless receiving devices (wireless speakers or headphones) and place your wireless device near the unit while pairing. To enable wireless audio transmission from the unit to your wireless device, the two devices need to be paired first, take CD via bluetooth transmission as follow:
1. Insert a disc and set the unit to playback mode.
 2. On wireless device: power on and set pairing mode.
 3. On unit: short press bluetooth button (#3) to make sure the wireless device is in pairing mode, you can see “” is flashing on the display, if your wireless device has display, you can searching and find unit model number TOMASHI CD-67, clip it then two devices will pair in short time (connection may take few seconds to few minutes). when the “” on display is stop flashing, it will be successfully connected and audio will be transmitted wirelessly from the unit to the device.
 4. If you want to disconnect the wireless link, long press the Bluetooth button (#3) to exit bluetooth mode.
 5. The bluetooth connection distance is within 10 meters.

TECHNICAL SPECIFICATION

Power Supply: 5V --- 1A
Rating Power: 5W
Battery: Rechargeable polymer battery (2000mAh)
CD Frequency Response: 50Hz-20kHz
Speaker: ϕ 40mm 4 Ω 3W
Support Format: CD/CD-R/CD-RW/MP3/WMA
Unit Size: 257(L) x 206(W) x 83(H)mm
Weight: about 1.04kg
Accessories: Remote control/Battery charging cord/Manual