

TC60 (Am)

Operation Instructions

Safety information

Safety procedures and instructions for mobile phone batteries

Recommended usage precautions

- Before using the battery, please read the instruction manual and the battery surface label carefully.
- When you use the battery, please keep it away from heat source and high pressure and keep it away from children. Don't beat the battery. The battery can only be charged by the original charger.
- Do not make short circuits the positive and negative electrodes of the battery; do not disassemble and assemble the battery by yourself and do not let the battery get damp to avoid danger.
- If the battery has not been used for a long time, it should be well stored in good condition. Keep the battery in a semi-charged state and make it neither full nor drained.

Warning against danger

- Do not dismount and install the battery

The battery is equipped with protection mechanism and protection circuit to avoid danger. Improper disassembly and assembly will damage the protective function and lead to the heat, smoke, deformation or burning of the battery.

- Do not make short-circuit the battery

Do not connect the positive and negative electrodes of the battery with metal and do not store and move the battery along with metal. If the battery is short-circuited, a large current will flow through the battery, which will damage the battery, leading to heat, smoke, deformation, or burning of the battery.

- Avoid using the battery near power sources

Do not use the battery near fire or oven because overheating will cause a short circuit

inside the battery and make the battery to heat, smoke, distort or burn.

- Be sure to use dedicated chargers to charge the battery properly

It can be dangerous to charge the battery using a non-dedicated charger. Charging under abnormal conditions will cause the loss of internal protection circuit function of the battery and abnormal chemical reactions. The battery may heat, smoke, deform or burn.

- Do not damage the battery.

Do not use metal to chisel into the battery, beat or beat the battery, or damage the battery by other means. Otherwise, the battery will heat, smoke, distort or burn, or even lead to danger.

- Do not use the battery for other devices

Improper use conditions will damage the performance of the battery, reduce its service life, and even make the battery heat, smoke, deformation or combustion.

Warning

- The battery can not be placed on the charger for a long time

If the charger is still charging long after the normal charging time, you should stop charging it because abnormal charging may cause the battery to heat, smoke, deform or burn.

- Do not place the battery in microwave oven or other pressure vessels.

Instantaneous heating or structural damage can cause the battery to heat, smoke, deform, or burn.

- Keep weeping battery away from the fire

If the battery is found to leak (or smell), the battery should be kept away from the fire; otherwise, the leaking electrolyte will catch fire and even cause other dangers.

- The sound of headphones should not be too loud

Be careful with headphones. Too much noise may lead to hearing loss.

Matters needing attention

- Use the battery in strong sunlight

Please do not use the battery in an environment exposed to strong sunlight so as to avoid heat, deformation and smoke. Avoid that at least because it may lead performance degradation of the battery and the reduction of its service life.

- Anti-static operation

The battery is equipped with a protective circuit, which can prevent all kinds of accidents. Do not use the battery in high-voltage electrostatic areas because static electricity may damage the protective plate, resulting in abnormal operation of the battery, such as heating, smoking, deformation or burning.

- Usage manual

Before using the battery, please read the manual carefully. You can read it as needed.

- Charging mode

Please use a dedicated charger to charge it according to the recommended charging method under the recommended environmental conditions.

- Operating temperature of the equipment

Minus 20 degrees Celsius to 55 degrees Celsius.

Usage and maintenance of mobile phones

This mobile phone is designed by excellent technology. Please use it carefully. The following suggestions can help users better use and maintain their mobile phones.

- Keep the phone and all parts out of reach of children.
- Do not place mobile phones in hot places because high temperatures may shorten the life of electronic devices, damage the battery and warp or melt some plastic parts.
- Do not put the phone in a cold place because when it is moved from a low temperature to a normal temperature, moisture may be generated inside, which may cause damage to the circuit board.
- Please do not attempt to disassemble the phone. Improper handling by unprofessional personnel may result in damage to the device.
- Do not use harsh chemicals, cleaning solvents or corrosive cleaners to clean the phone. If you want to clean the phone, please use a cloth dipped in mild and soapy water to and wipe it gently.
- Please use original accessories recommended by the manufacturer. Unauthorized accessories may damage the phone.
- If the phone gets wet accidentally, please make sure the phone is dry before using it.
- Do not connect metal parts (except for specially configured charger interface and data cable interface) with the phone charger interface so as to avoid short circuit.

Important notice

Please exactly follow the following precautions to avoid possible disasters or legal penalties when you use the mobile phone.

Pay attention to flight safety

Please do not use your cell phone on the plane because the navigation system on the plane can be interfered with by mobile phones. Many countries have banned the use of mobile phones on planes.

Pay attention to the safety of surrounding environments

Do not use cell phones at gas stations. In addition, do not use mobile phones in oil storage plants, chemical plants and around flammable or explosive objects.

Pay attention to traffic safety

Please pay attention when you drive the car and try to avoid driving while talking.

Avoid radiation interference

When using the mobile phone, please try to keep away from easily disturbed objects or instruments. We recommend that you keep the antenna at least 2.5CM away from your body when you use your mobile phone.

Be aware of interference with medical facilities

The use of mobile phones may cause interference with certain medical instruments. Most hospitals forbid you from using your cell phone there.

Pay attention to the storage environment

Keep the phone away from magnetic devices, such as magnetic cards and floppy disks. The

radiation from the phone will erase the information stored on the magnetic devices.

Warning

No part of the phone that can be repaired by the user. If the mobile phone is suspected to be damaged, please send it to the designated service center to repair it by qualified technicians as soon as possible. Do not disassemble the mobile phone by yourself for you may suffer electric shocks or other injuries.

Keep mobile phones or accessories away from young children. Improper operations by children may damage the phone or accessories and may harm themselves or others. At the same time, detachable parts of the phone, such as the SIM card and memory card, may be swallowed by children, which is dangerous.

When you use the mobile phone, please keep it away from high temperature and avoid exposure to the sun. Please keep it in dry and cool places.

Waterproof precautions:

1. Before the waterproof test, all parts of the battery cover should be closed, otherwise, it will be non-watertight.

2. The USB seat, headset seat and charger seat of this machine are waterproof devices. After completing the waterproof test, the machine should be dried and placed for a period of time until the water in the headset seat, USB seat and charger seat dries.

1. Getting Started with Mobile Phone

1.1 SIM card insertion and removal

Turn off the phone, take out the card holder, place the SIM card flat on the groove of the card holder according to the shape of it, make sure that the metal plane area is facing down, and the corner position is the same as that of the card slot, and then insert the card holder into the card slot; If you need to take out the SIM card, please turn off the phone first, remove other external power sources, and take out the card holder before taking out the SIM card.

Notes: The SIM card supports hot swapping. Please try to remove or insert the SIM card when the phone is turned off, so as not to damage the SIM card.

1.2 Disassembly and installation of the battery

Built-in battery

Notes: The battery of this phone does not support manual disassembly.

1.2.1 Charging the battery

When the new battery is not fully charged, before using the phone, you need to install the battery and use up the battery, and then charge the battery according to the following method.

1. Insert the connector of the charger into the charger socket of the mobile phone.
2. Plug the charger into the power supply, the battery symbol will be dynamically displayed, indicating that the battery is charging.

When the charging is complete, the full battery symbol will be displayed, indicating that the charging is complete.

After charging is complete, please remove the charger from the power source first, and then pull the charging head out of the phone.

Notes: You can connect the computer with the USB data cable to charge the phone and copy data, USB version is 2.0. If the battery of your mobile phone is completely exhausted, it may not be possible to charge the mobile phone through the USB data cable connection. At this time, you need to use the charger to charge the mobile phone.

2. Basic Operations

2.1 Turn on/off the phone

To start or turn off the phone, press and hold the power button.

Notes: It will take some time for the phone to initialize, please wait patiently.

If the phone is turned on first, but the SIM card is not inserted, some functions of the phone will not work normally. After inserting the SIM card, the phone will automatically check whether the SIM card is available.

2.2 Lock and unlock the screen

When the mobile phone is not working for a period of time, then the screen goes black and enters the lock screen state to save the power.

Lock screen/phone: press power key

Unlock the screen/phone: Press the power button to light up the screen and display the lock screen status. Tap the unlock icon and slide up to unlock.

If you have set a lock pattern or password, you will be prompted to draw your pattern or enter your password.

Main Menu→Settings→Security→Screen Lock

Set screen lock method→Pattern

1. Screen lock → pattern;
2. Pay attention to the screen prompts and pattern examples and select the next step twice;
3. Drag your finger to connect at least 4 points to draw a pattern;
4. Choose to continue;

5. Redraw the pattern to confirm;
6. Select OK.

After setting the unlock pattern, every time the phone is turned on, the phone will ask to slide up to unlock, and then ask to enter the unlock pattern. If you want the phone not to ask you to enter the unlock pattern next time, please go to Settings→Security to change the screen lock method, enter the unlock pattern and click None.

Set screen lock method → password

1. Settings→Screen Lock→Password;
2. Enter a password with at least 4 characters;
3. Choose to continue;
4. Re-enter the character password to confirm;
5. Select confirm;

After setting the password, every time the phone is turned on, it will ask to slide up to unlock, and then ask to enter the unlock password. If you want to prevent the phone from asking for password next time, please go to Settings→Security to change the screen lock method, enter the unlock password and click None.

Notes: The steps to set the screen lock method as PIN code are the same as above

2.3 Touch method

You can use the following methods to operate the mobile phone (please press the corresponding function key with your fingertip).

2.3.1 Tap:

You can select an icon or option in the display by using the tap function. For example, under the main menu, click message to enter and browse all SMS/MMS message.

2.3.2 Press and hold:

You can tap and hold to see more menu options. For example, if you press and hold a number on the contact details interface, a pop-up menu will open, and you can perform some options and functions on the menu.

2.3.3 Rolling:

Tap and hold the scroll bar, then drag up or down. For example: when browsing the contact list, a scroll bar will pop up on the right, drag the scroll bar to find contacts conveniently.

2.3.4 Tap and drop:

Tap and hold an item with your finger, then drag your finger to move the item.

2.3.5 Double click:

When viewing a photo or web page, double-tap your finger quickly to zoom in or out.

2.3.6 Quick Swipe

Use the scroll bar to select a contact in the list, and you can quickly swipe the touch screen.

When you're swiping through a long list of contacts, tap the screen to stop swiping.

Reminder: To avoid scratching the touch screen, do not use sharp tools.

It's prohibited the touch screen from touching other electronic devices. Silent discharge can cause the touch screen to malfunction.

In order to use the touch screen better, please remove the touch screen protective film before using the phone.


2.4 Find IMEI number

1. Main menu→Settings→About phone→Status message

You can check the IMEI number in the status message.

2. Enter "*#06#" on the dial pad to check the IMEI number.

2.5 Main buttons

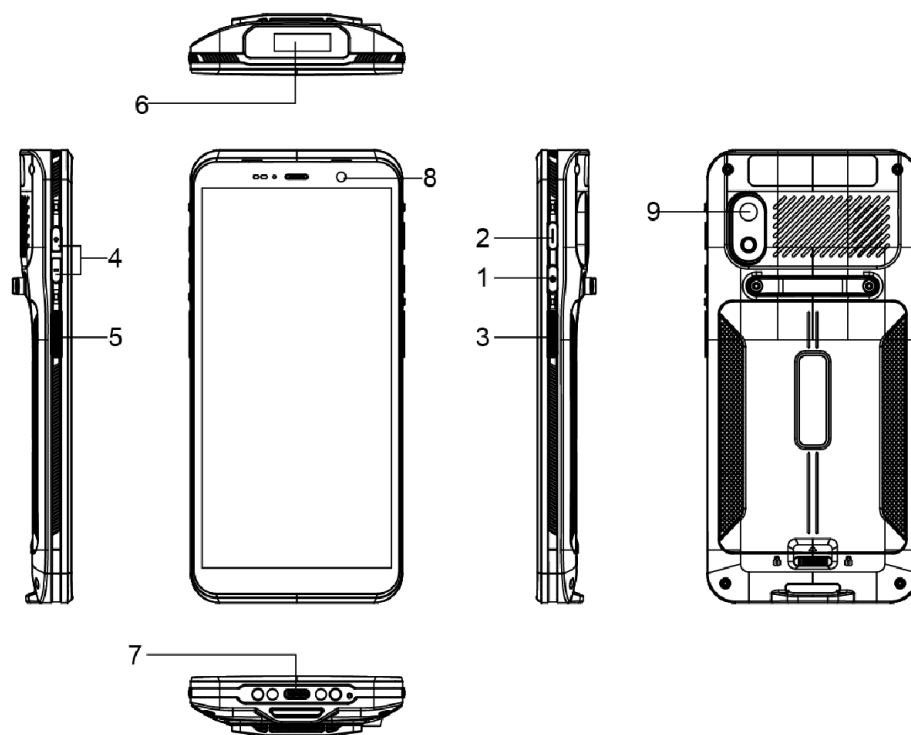

Key Description

1.On/off button	4.Volume +/-	7.Type-C
2.Custom key	5.Scan key	8.Front camera
3.Scan key	6.Scan	9.Rear camera

Key	Function
HOME	Return to the home interface
Task Manager	Enter Task Manager
Return	Return to the previous page
Power button	Switch on/off; sleep/wake up; press and hold for 10 seconds to restart
Volume	Adjust the volume, press the volume key on the camera interface to take pictures (no wake-up function)
Scan Key	Click to start scanning, and the scanning result will be displayed in the corresponding input box

2.6 Screen sleep and wake up

1. In order to save power, prevent the accidental touch screen to start the program, or when cleaning the screen, press the power button to make the screen sleep. Press the power key again to wake up the screen.
2. You need to change the time for the phone to automatically enter the sleep state, go to Settings→Display→Screen Timeout.

2.7 Home screen

The home screen can be customized to add shortcuts, widgets and other applications according to needs.

2.7.1 Adding items to the home screen

You can customize your home screen by adding apps, widgets, folders, and shortcut keys for apps or items.

2.7.2 Moving items on the home screen

1. Tap and hold the item to be moved.
2. After the item is selected, drag the item to the desired position.

2.7.3 Deleting items from the main screen

1. Press and hold the item to be deleted, "Application message" will pop up, tap to enter the application message interface
2. Click Uninstall to delete the project.

2.8 Wireless LAN Settings

Main Menu→Settings→WLAN

- **WLAN:** Enable or disable the wireless LAN function.
- **Network notification:** Set the phone to send a notification when there is a public network nearby.

· **WLAN Networks:** Find wireless networks around you:

1. Press Settings→WLAN
 2. Select WLAN and turn it on. The mobile phone will scan for available WLAN networks, and then list the found WLAN network names in the WLAN network list.
 3. Click a network to connect.
 4. If it is a protected network, the system will prompt you to enter the password.
- For details, please consult the service provider or administrator of the network.

2.8.1 Delete WLAN network

You can prevent the phone from saving remembered Wi-Fi network details.

1. Turn on the WLAN function
2. On the WLAN settings screen, tap and hold the connected network name.
3. In the opened WLAN dialog box, click Cancel to save.

2.9 Mobile phone running status

	4G Vo LTE Network signal strength		4G network signal strength
	3G network signal strength		2G network signal strength
	Battery is in charging		Battery power full
	WLAN signal strength		Mute mode
	Turn on portable Wi-Fi hotspot		Offline mode
	Headphones plugged in		New message
	The alarm is set		Ongoing call
	Missed call		Download in progress

2.10 Admin Notifications

The status bar at the top of the home screen has icons reporting new messages or emails, calendar events, alarms, and ongoing activities such as current call status.

3. Dial

3.1 Dial pad:

Main menu→Dial or click the dial button

3.1.1 Tap the keys on the dial pad to enter a phone number.

If you enter the wrong number, tap  to clear digits one by one, or hold  to clear the entire number.

To make an international call, press and hold the 0 key and enter the international connection code "+".

3.1.2 Click the dial key below the dial pad to dial the number you entered.

3.2 End a call

Click Hangup  or tap the Hangup button.

3.3 Answer and reject calls

When you receive a call, message about the call is displayed on the screen. If you have a missed call, you will receive a notification.

On the incoming call interface, slide the icon  up to answer the incoming call.

Notes: After plugging in the headset, you can also answer the call by pressing the headset remote control button.

On the incoming call interface, slide down the icon  to change the icon  to reject the incoming call.

3.4 Block SMS

On the incoming call notification interface, slide the icon  up to reject the incoming call and send a text message to inform the reason for the rejection.

3.5 Hold the call

During a call, tap the hold icon .

3.6 Mute during a call

During a call, just tap the mute icon .

3.7 Switch between current calls

After connecting 2 calls, tap the call interface to switch.

3.8 Call options

During a call, you can perform the following operations:

1. Click speaker to use the phone speaker.

2. Click Bluetooth to use Bluetooth devices.

Notes: Before using this function, please make sure to establish a connection with the Bluetooth audio device.

3. Click the dial pad to input numbers.
4. Click Add Call to add a new call
5. Click the call recording button to record the call

3.9 Recent Calls

The call log contains all your outgoing calls, received calls or missed calls, etc.

Main Menu→Dial→Recent Calls

1. Tap the desired entry, and tap the dial icon to make a call.
2. Click the required entry, click "Record" below to see the detailed record of this number, and perform other operations.
3. Press the menu key→delete history to clear the list of call records.

3.10 Make emergency calls

Notes: Your network service provider has set up one or more emergency numbers. Different countries have different emergency numbers, so your phone's emergency number may not work in all areas. Sometimes emergency calls may not be made due to network, environmental or interference events.

Main menu→Dial (if the phone is locked, you can tap emergency call).

1. Enter the emergency call number.
2. Click the dial icon to make an emergency call.

4. Contacts

Create and manage lists of personal or business contacts stored in the phone or on the SIM card. It can create, delete contacts and other operations.

4.1 Create a new contact

Main menu → Contacts, click the icon in the lower right corner to create a new contact, a pop-up box for adding new contacts will pop up, and you can choose a phone or SIM card to create a contact.

After entering the contact name and its related message to edit, tap Done.

4.2 Backup contacts

Main menu→Contacts→Correction and management on the right side→Import/Export→Import/export contact box pops up, you can choose to import/export from SIM card, file to file, and confirm the import/export.

Notes: To back up contacts, you need to install an extended memory card in your phone.

4.3 Edit or delete contacts

Main Menu→Contacts

Click the desired contact to enter, then click the edit icon to modify, and click save in the upper right corner after editing.

Press the option menu on the upper right corner→Delete, select the contact to be deleted, and click the OK symbol to confirm the deletion of this contact.

4.4 Add contacts to favorite list

You can add the contacts you communicate with most to favorites.

1. Open your contacts.
2. Click to enter the contact details interface.
3. Click the five-pointed star icon to add to favorites.

4.5 Delete favorite contacts

Main Menu→Contacts→Favorites

After opening the favorites list, enter the contact details interface, and click the five-pointed star icon to delete the contact in the favorites list.

4.6 Using the Contacts tab

The Contacts tab contains the labels you create. You can add members to these tags

4.6.1 View group labels

1. On the main menu interface, click Contacts to enter the contact list
2. Click the option menu on the upper left of the screen, select tags, and enter the contact tag interface to view or manage your tags

4.6.2 Add tags

1. Open the contacts interface;
2. Click the option menu in the upper left corner - create a label;
3. Enter the label name and click OK.

4.6.3 Adding members to tags

1. Open the contact label list interface in the upper left corner of the contacts;
2. Click on a tag name and view tag members;
3. Click the icon in the upper right corner, select modify, add members, enter directly or enter the contacts and select add contacts;
4. Select the contact you want to add from the list and add it directly to the label.

4.6.4 Delete Contacts Tab

1. Open the contact label interface in the upper left corner of the contacts;
2. Click a label name to enter, click the menu in the upper right corner, and select delete label (this menu only appears after the user defines the label).

4.6.5 Renaming tags

1. Open the contact tab interface;

2. In the label details interface, click the menu in the upper right corner → rename the label to modify and edit the name;
3. Re-enter the label name and click OK to complete the symbol;

4.6.6 Search Contacts

1. Open the contact list;
2. Click the search icon and select Search;
3. Enter the name of the contact you want to search for;
4. Click on the matching contact in the list to view its details

5. Message

You can send and receive text messages or multimedia messages containing multimedia files.

5.1 SMS

Main Menu → message

5.1.1 Send SMS

1. Open the message function and view the message list;
2. Click the new message icon in the lower right corner of the screen to edit the new message;
3. Enter the receiver's number in the receiver column, or you can click the icon on the right to select a receiver from the contacts;
4. Click the input message column and enter the content of the message;
5. Click the send icon to send.

5.2 MMS

5.2.1 Create and send MMS

1. Open the message function and view the message list;
2. Click the new message icon in the upper right corner of the screen to edit the new message;
3. Enter the receiver's number or email contact in the receiver column. You can also click the icon on the right to select receivers from your contacts;
4. Click to enter the message editing column to enter message;
5. Press the menu key → add topic to add a message topic.

Notes:

Text messages will be automatically converted to MMS messages after adding topics, attachments and other content. Similarly, MMS will be automatically converted into SMS after deleting the subject, attachments and other contents.

6. Press the icon  to select the required accessories.
7. After editing, click Send.

5.2.2 Read and reply messages

1. Tap a message to open and view the message session;
2. If you need to reply to the message, just open the message and enter the reply content in the column below to type in the message.

5.3 View message details

1. Open the message and view the message list;
2. Directly click on the message to be viewed to open the content of the message session;
3. Hold the message that needs to be viewed in detail;
4. Click the menu in the upper right corner → select View Details in the options bar.

5.4 Forward message

1. Open the message function and view the message list;
2. Directly click on the text message to be forwarded to open the content of the message session;
3. Press and hold the message to be forwarded, select → Forward → select the contact to forward in the menu bar at the upper right corner.

5.5 Delete a message

5.5.1 Delete the entire message with a contact

1. Open the message function and view the message list;
2. Hold this message;
3. Click the delete button.

Notes: There is another way:

1. Open the message list, click the option icon in the upper right corner, and select "Delete" to delete all messages with this contact.

5.5.2 Delete a message

1. Open the message and view the message list;
2. Directly click on the text message to be deleted to open the content of the message session;
3. Hold the message to be deleted;
4. Select the delete icon in the pop-up message option row;
5. Click Delete in the pop-up dialog box;

5.5.3 Change message settings

1. Open the message function and view the message list;
2. Click the option icon in the upper right corner -> Settings, you can set various message.

6. E-mail

You can easily read and send e-mails from your phone. "E-mail" comes with a wizard that allows you to easily configure your e-mail service.

6.1 Setting up an e-mail account

When you first use the e-mail feature, you will need to set up an e-mail account.

6.1.2 From the main menu screen, click Gmail to open the e-mail feature and set up your account.

6.1.3 Enter the e-mail address and password and click Next. The system will automatically connect to the server and check the server settings, or you can click to set it up manually.

6.1.4 Set the e-mail checking frequency, default account, e-mail alerts, etc., and click Next.

6.1.5 Create a name for your mail account and set the name to be displayed when you send outgoing mail, and click Next.

6.1.6 The system will synchronize with the mail server you have set up. Your e-mail will then be displayed on the phone.

6.2 Reading e-mails

6.2.1 After setting up your e-mail account, click Gmail to access your inbox.

6.2.2 Click the e-mail you want to read, and the corresponding e-mail will be displayed on the screen, which will show the sender, subject and other related information, and the content of the e-mail below.

Tip: When you receive a new e-mail, the status bar will also show the corresponding notification, open the notification panel and click New E-mail to read it.

6.3 Composing and sending e-mails

6.3.1 From the main menu, click Gmail to go to your inbox.

6.3.2 Click the compose icon in the lower right corner.

6.3.3 Enter the recipient, you can also click the put away symbol on the far right of the recipient field to add the e-mail address of the sender and the sender.

6.3.4 Click Subject and enter the subject of the e-mail.

6.3.5 Click Content and enter the content of the e-mail.

6.3.6 Click the Attachments icon on the menu bar→Add Attachment, you can add stored photos, videos, audio and other files as attachments to the e-mail.

6.3.7 Click the Send icon at the top right of the screen to send the e-mail.

6.4 Adding a signature to an e-mail

6.4.1 From the main menu click Gmail and go to Inbox

6.4.2 Click the icon in the upper left corner -> Settings

6.4.3 Click the e-mail account you have set up.

6.4.4 Click Mobile Signature

6.4.5 Enter the signature you want and click Confirm

6.5 Adding an e-mail account

6.5.1 From the main menu click Gmail and go to Inbox

6.5.2 Click the icon in the upper left corner -> Settings -> Add Account

6.5.3 New accounts can be added, see Setting up an e-mail account for details

6.6 Editing an e-mail account

6.6.1 From the main menu click Gmail and go to Inbox

6.6.2 Click the icon in the upper left corner -> Settings

6.6.3 Click on the email account you have set up to edit it, and perform general settings, notification settings and server settings.

7. Chrome Previewer


You can use the browser function to view web pages or search for information on the web.

Notes: 1. Use your browser to enable your phone to access the web and web-based applications. If needed, please consult your network service provider on how to connect.


2. Use of this feature may incur data traffic charges, please contact your internet service provider for details of the charges.

Main Menu->Chrome Browser

1. When entering the Chrome previewer for the first time, enter the Welcome to Chrome interface. Use of this app constitutes your agreement to Chrome's Terms of Service and Privacy Notice. You can view the "Terms of Service" and "Privacy Notice", and tick 'Help make Chrome better by sending usage statistics and crash reports to Google' if necessary. And select 'Accept & Continue' to continue.

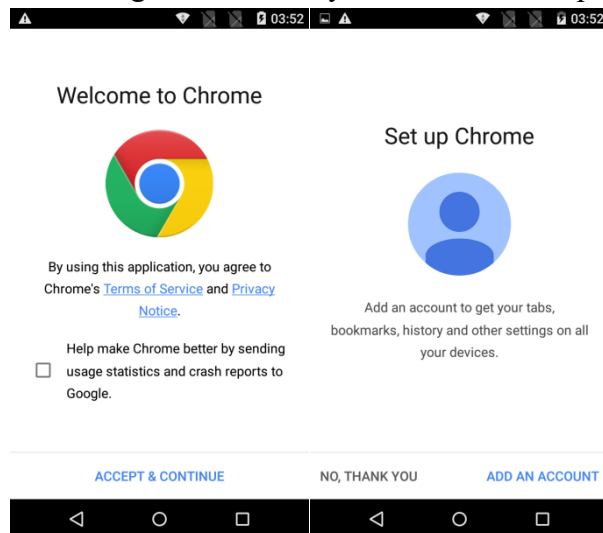

2. Go to the 'Settings for Chrome' page and ask you to add an account to get access to your currently Opened Tabs, Saved Bookmarks, History and Other Settings of your device. If you haven't applied for a Google account, you can also click "No, thank you" to continue using it.

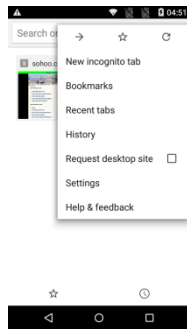

3. The main page shows the bookmarks, click ☆ icon to see the saved bookmarks, mobile device bookmarks; click ⌚ icon to view the history of recently opened and closed tabs and other device information. Note that other devices need to log in to Chrome.

4. Click on the ⋮ icon to the right of the search bar to open the options bar.

The top row of this options bar → ☆ ↺ is for opening the page you just closed and exited, adding a new bookmark and refreshing the current page. The options bar list has "New tab, New incognito tab, Saved bookmarks, Recent tabs, History, Share, Print, Find in web, Add to home screen, Request desktop site, Settings, Help& Feedback" and more.

8. Music

You can enjoy the music stored in your phone through the music player function.

8.1 Copying audio files to your phone

1. Connect the phone to the computer via USB cable
2. The USB setting interface pops up on the cell phone, select File Transfer
3. Copy audio files to your phone storage via your computer.

8.2 Opening the music library

8.2.1 Opening music and viewing music library

From the main menu, click Music and the system will automatically scan the audio files on your phone. The scanned audio files are displayed in a list. When the Music app opens, you will see four tabs: Musicians, Albums, Songs, and Playlists.

Tap any of the viewing methods in the Music section to open the music list in different modes.

8.3 Opening music files

8.3.1 Playing Music

1. Open the Music app and view the list of audio files
2. Click the Musicians/Albums/Songs/Playlists tab to find the music file you need to play.
3. Click it and the music file starts playing

8.4 Using playlists

You can create playlists and organize music files into track sets to play tracks in the order you set or in random order

8.4.1 Creating a playlist

1. Open the Music app and view the list of audio files
2. Select the music file you want to add to the playlist and long press until the shortcut menu pops up
3. Click Add to playlist
4. Click New playlist
5. Enter the name of the new playlist
6. Click Create, the playlist is now successfully created, and the music file you selected has been added to the playlist

8.4.2 Removing tracks from a playlist

1. Open Music and select the Playlist tab
2. Click a playlist to see the tracks in it
3. Press and hold the track you want to remove from this playlist until the shortcut menu pops up
4. Click to remove from playlist

8.5 Playing music

Open the music library and select the music you want.

8.6 Music player control buttons

Function	Description
Play/pause	Tap 
Previous / Next	Tap 
Repeat Play	Tap 
Volume	Press the side volume keys up or down

8.7 Hiding, activating and deactivating the music player

Press the home button to hide the music player and use other applications, your music

will continue to play. When  is displayed in the status bar, the song is playing, swipe down the status bar to view the details, and tap the song name to return to the

music player screen. Press  to pause the music and press home to return to the home screen.

9. Video

When you have video files on your phone, you can open them and enjoy great videos

9.1 Checking video

From the main menu screen, click Albums to open the video library

Videos can be displayed on the SD card or on your phone, including videos you have taken with the camera and videos you have downloaded from the web or other settings

9.2 Playing video

Click Video to see the list of videos

Click on a video to play it

9.3 Sharing videos

Click Video to see the list of videos

Long press on a video file and select share it in the pop-up dialog box

10. Camera

Your phone's camera supports 13 megapixels for taking photos. You can use the camera to take favorite photos and then set them as wallpaper or share them via messaging, Bluetooth, e-mail and other ways. The phone will store the taken photos in the phone memory.

Note: For best results, please wipe your camera lens before taking photos. Please respect the rights of others and observe local laws and regulations and customs when taking photos.

10.1 Taking photos

1. Click the camera icon on the home screen to enter the camera framing interface: slide the screen left and right on the camera framing interface to select various camera modes, the top icon to select the flash mode, camera settings, click the icon to switch between front and rear camera modes. Two-finger zoom preview area can be adjusted for focus.

2. The camera is in camera mode by default, you can switch to camera mode from the sliding screen

3. Aim the lens at the position/object

4. Focus the Take button to take a picture

The thumbnail of the photo you just took is displayed in the bottom left corner of the screen. Tap a thumbnail to view the photo.

-Select **Delete** to delete the photo.

-Press the menu button and select **Details** to view the details of the image.

-Select **Share** to share photos via messaging, Bluetooth, e-mail, etc.

10.2 Recording Video

1. In the camera preview screen, switch to camera shooting mode

2. Focus the lens on the position/object

Press the camera button to start recording video, and press the end button to stop recording video and save it automatically.

3. Press the home button to turn off the camera and return to the home screen.

The thumbnail of the video you just recorded is displayed in the bottom left corner of the screen. Tap the thumbnail for the following:

- Select **Share** to share videos via messaging, Bluetooth, e-mail, etc.
- Select **Delete** to delete the video.
- Press the menu button and select **Details** to view the details of the video.

10.3 Camera settings for each mode

Click the Settings icon on top of the camera to enter the camera settings mode, where you can set the resolution and image quality of the camera according to your needs.

11. Gallery

You can open the gallery to view the photo album

11.1 View albums

From the main menu, click Albums to open the gallery and view albums

Gallery displays pictures from your phone, both those you took with your camera and those you downloaded from the Web or other locations.

11.2 Process images

11.2.1 View and browse images

1. Click Albums to view images
2. Pictures in albums are displayed as thumbnails
3. Click a thumbnail to view a larger image

11.2.2 Delete pictures

View image screen->Delete to delete the image

11.2.3 Play slideshow

1. Open the album and the pictures in the album are displayed as thumbnails
2. Click on the image to view the image screen
3. Click Menu→Slides how to play all the pictures in the album as a slideshow

11. 2.4 Edit

View image interface->Edit to edit the image

11. 2.5 Set photos as wallpaper or contact photos

1. Click Menu key->Set to
2. Select wallpaper in the pop-up window to set the picture as standby wallpaper, and select the address book icon to set the picture as contact photo.

11. 2.6 Details

Click the menu button to view details such as file size, manufacturer, and time of shooting for photos

11. 2.7 Print

Click Menu button->Print to save the photo in pdf format or search for a printer and choose to print.

11.2.8 Share images

1. Open the image you want to share through the gallery

2. Click the bottom left corner sharing icon to share to others via message, Bluetooth, e-mail and other third parties

12. Other applications

12.1 Alarm Clock

1. Access the clock from the main menu interface, click the alarm clock icon to enter the alarm clock settings interface
2. Select the existing alarm clock in the list to enter the editing interface or click the bottom of the screen to add an alarm clock to enter the editing interface
3. Set the corresponding parameters and slide to the right to open

12.2 Calendar

1. Access the calendar from the main menu
2. Click the Date View drop-down button in the upper left corner to view Day View, Week View, Month View, Schedule and Settings, etc.
3. Click the icon  in the lower right corner to select New Activity.
4. Click Menu to refresh the displayed calendar.

12.3 Calculator

1. Access the calculator from the main menu
2. Enter a number and select an operator
3. Click equals sign
4. Click "Science" to go to the advanced panel for more calculations

12.4 Document geek

1. It is possible to view and manage the files stored locally on the mobile phone. You can copy, paste, rename, delete, share and other operations on its files.
2. Long press the file or click the menu button to select one or more files or folders for sharing, copying, deleting, cutting and other operations. Folders can also be reordered by name, size or date.

12.5 Stopwatch

1. Click the clock from the standby interface and select the stopwatch
2. Click the start icon to start timing
3. Click the stop icon to end the timing
4. Click on a lap to count multiple times
5. Click reset to reset the timer

12.6 Recorder

1. From the main menu screen, click Recorder to bring the phone's microphone closer to your mouth

2. Click  to start recording

3. Click  to pause recording

4. Click  to end, select "Discard" to delete the recording, select "Save" to save the recording

5. Click  to view the list of recordings

12.7 Flashlight

Pull down the status bar menu and click the flashlight icon to turn on/off the flashlight

12.8 Radios

Access the radio from the main menu (headphones must be plugged in as antennas to operate the radio).

1. Click  to turn the radio off or on
2. Click  to switch between headphones and speakers
3. Click  to enter the radio search list interface
4. Click  to search for a station in the band before the current station band
5. Click  to search for a station in the band following the current station band
6. Click  to add or cancel favorites
7. Click  to record to the radio. You can view the saved recordings.

13. Settings

You can use the settings application to configure the phone's parameters to set
Click Settings from the main menu

13.1 WLAN

1. Click WLAN to enter, slide to turn on/off WLAN
2. After the WLAN is turned on, you can view the nearby WLAN hotspots, and you can connect to the network through the WLAN after logging in.
3. You can choose to add network, saved network, WLAN preference settings, WLAN traffic usage and other options

13.2 SIM card and traffic management

Enter the mobile network, you can turn on/off mobile traffic and data roaming, set the access point name, select the network type, data preference, call preference and SMS preference.

Access Point Names: View and add access points

Preferred Network Type: Set the network mode of the SIM card

View the mobile data network traffic used by each application module in Sim1 and Sim2

13.3 Bluetooth

Click Bluetooth to enter and swipe to turn Bluetooth on or off.

After Bluetooth is turned on, click "Pair with new device" to search for nearby Bluetooth hotspots. After Bluetooth pairing, files, photos, etc. can be transferred to each other.

13.4 Flight mode

Flight mode can be turned on/off.

13.5 Other wireless connections

1. NFC

Click switch to turn on/off NFC

After NFC is turned on, you can transfer pictures, browser web pages, contact information, read the information of supported types of bus cards, etc. by leaning this device with another NFC-enabled device.

2. Hotspot and network sharing

Wi-Fi Hotspot: You can use your phone as a portable Wi-Fi hotspot and share your phone's data connection with multiple devices at the same time.

USB network sharing: You can connect your mobile phone to USB, use the mobile phone as a USB sharing network, and the PC device can use the data connection of the mobile phone.

Bluetooth tethering: You can use your phone as a Bluetooth tethering hotspot and share your phone's data connection with one device at the same time.

13.6 Applications and notifications

This screen allows you to view and manage the applications and notification settings on your phone.

13.7 The battery

In this screen, you can turn on/off the power saving mode and turn on/off the battery power percentage.

13.8 Display

Brightness: adjust the screen brightness

Automatic brightness adjustment: slide on/off the screen brightness, open to optimize the brightness according to the ambient light conditions

Wallpaper: desktop and lock screen wallpaper can be set

Screen timeout: adjust the delay time before the screen locks automatically

Auto-rotate screen: turn on/off the rotation screen, turn on the screen content direction

Font size: Set the font size

13.9 Sound

In this screen, you can set the sound conditions of your device.

13.10 Storage

In this screen you can view and manage the capacity usage of the internal memory card of your phone. You can view the following: the total capacity of the internal storage device and the used capacity.

13.11 Location

Use of location can be turned on/off.

13.12 Accounts

You can add/remove accounts

13.13 Security

Equipment Safety

1. Screen lock

a. Screen lock method: you can use none, slide, pattern, PIN or password to lock the screen

b. Fingerprint

Set the screen lock method→fingerprint, first set the screen lock method to pattern, PIN code or password before entering. After the fingerprint entry is completed, in the locked screen state, you can unlock it by fingerprint or by entering a password or pattern. If you want to delete the fingerprint, please go to Settings→Security to delete the fingerprint lock.

c. SIM card lock

Set SIM card lock: Turn on or off the SIM card lock, and you can change the SIM card PIN.

13.14 System

1. System update

You can update the software version of your phone by using this function.

Tip: This function must be networked.

2. Language and input method

System language and input method can be set.

3. Hand gestures

a. Quickly open the camera: After opening, press the power button twice on any interface to open the camera.

b. System navigation: gesture navigation and "three button" navigation switching and setting.

c. Stop ringing: After turning on, press the power and volume up buttons at the same time to turn on the vibration mode.

4. Date and time

Date and time can be set.

a. Use the time provided by the network: use the value provided by the network (network support) to support on/off

b. Automatically determine time zone: use the time zone provided by the grid (network support) support to turn on/off

c. Set date: turn off the time provided by the network, you can manually set the date

d. Set time: turn off the time provided by the network, you can manually set the time

e. Select time zone: turn off automatic time zone determination, you can manually set the time zone

f. Use 24-hour system: Turn this on to use 24-hour system

5. Backups

Backup to Google Cloud Drive is available.

6. Reset option

Clear all data: Clear all data on the phone.

13.15 About the phone

1. SIM card status: Check the network, signal strength, mobile network type, service status, roaming and other information of the mobile phone SIM card.
2. Model and serial number: display the phone model and serial number
3. Android version: Display the Android version used by the phone
4. Version number: Display the software version number used by the phone
5. Legal information: view relevant legal information
6. Other information: View WLAN MAC address, Bluetooth address and cumulative boot time

14. Children mode

Click “Children Mode” on the home screen to enter the screen. An account should be created for the first entry. After you enter the children mode interface:

Create an avatar and choose interests (animals, crafts, science, stories, cooking, music, etc.) and building personalized experience.


14.1 Home Page

1. Play: Including the recommended apps and games.
2. Reading: Children's books and recommendations from experts
3. Watch: Creative and fun videos from YouTube Kids
4. Manufacturing: There are videos that encourage children to create and practice skills.


If you want to add specific apps, games, and books that Google doesn't recommend, you can do that from your parents' menu. In addition, you can still set parental controls using the Family Link app.

15. Play store


Click “Play Store” icon on the home screen to enter the app. The first time you enter the Play Store, you will need to create a new account, which you can complete the creation process by following on-screen prompts. When you enter the home page of Play Store with your account, you can see a variety of mobile software, which you can select according to your needs and install them to your mobile phone. You can swipe the screen to Categories, Hot Lists, Events, Paid and other interfaces to find related software.

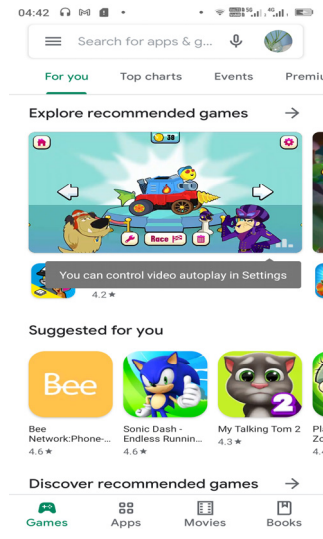


Click the icon of your favorite software in the Play Store interface and enter the installation interface:

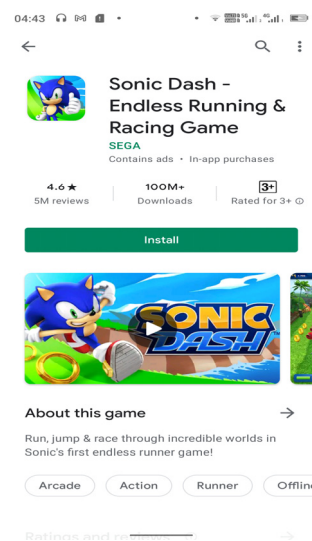


Click [Install](#) to install the software and the phone will automatically download the software. If you want to cancel the download, please click [Cancel](#):

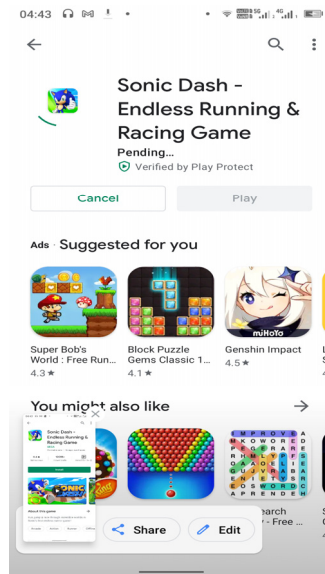

After it is downloaded, click to open it and you can start to apply your newly downloaded software:

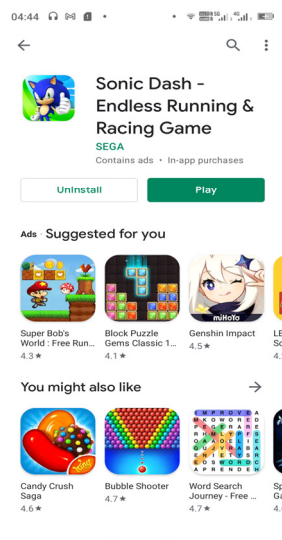

Click the menu key on the home page of Play Store and the following menu will pop up:

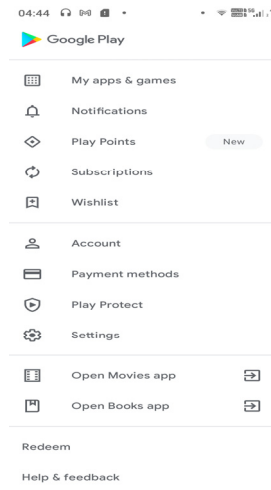

Select “My Apps and Games” and you can view “Installed Apps” and “All Apps”. you can also reset accounts, notifications, automatic app updates, passwords, etc.

If you want to use other Google services, such as GMAIL and Google, you should apply for a Google account and log in to Google services before you can use Google services.

Common Problems and Solutions

If an anomaly occurs when you use the mobile phone, please refer to the following table to correct them.

Common problems	Reasons	Solutions
Poor reception	When mobile phones are used in areas with poor reception, such as near tall buildings or basements, radio waves cannot be transmitted effectively.	Avoid it.
	When the cell phone is used during call intensive periods, such as during commuting hours, line congestion may prevent calls from being connected.	Avoid it.

	It is related to the distance of the transmitting base station built by the network.	You can request your network service provider to provide a service area map from
An echo or noise	This is caused by poor network trunk and this is a regional problem.	Hang up and redial it. The junction line may be replaced with a better line.
	Some areas have bad lines.	
Shorterst and by time	The standby time is related to the system settings.	You are in an area with poor reception. Please turn off the mobile phone temporarily.
	The battery needs to be changed.	Replace the battery.
	When a signal is lost, the phone will keep launching to find base stations, which will consume a lot of power in the battery and shorten the standby time.	Please move to a place with strong signal or turn off your mobile phone temporarily.
Fail to boot up	The battery ran out of power	Check the battery or charge it.
Wrong SIM card	SIM card is damaged.	Contact your Internet service provider.
	SIM card is not well installed.	Ensure that the SIM card is installed properly.
	The metal surface of the SIM card has dirt.	Wipe the metal contact of the SIM card with a piece of clean cloth.
Disconnected network	Invalid SIM card	Connect with your network provider.
	Out of GSM or 3G service area	Check with your network provider for a service area.

	Weak signal	Please try again in areas with strong signals.
Fail to call	The call restriction function is used.	Cancel call restriction settings.
	Fixed dial function is used.	Cancel fixed dial setting.
PIN error	Enter incorrect PIN code for three consecutive times.	Check with your network provider.
Unable to charge	The battery or charger is damaged.	Replace the battery or charger.
	Poor contact	Check whether the plug is properly connected.
Unable to add phone book records	The phone book storage space is full.	Delete some phone book records.
Unable to set some functions	The network provider does not support this function, or you did not apply for this function.	Check with your network provider.

For CE



BE	BG	CZ	DK	DE	EE	IE	EL
ES	FR	HR	IT	CY	LV	LT	LU
HU	MT	NL	AT	PL	PT	RO	SI
SK	FI	SE	NO	IS	LI	CH	TR

In all EU member states, operation of 5150-5250 MHz is restricted to indoor use only.

Manufacturer Information:

GUANGZHOU YOKO ELECTRON CO.,LTD

1 Room301,7th Huanbaosan Rd., Xintang Town, Zengcheng District, Guangzhou City 511340

Transmitter Frequency:

EGSM900: 880-915MHz

DCS1800: 1710-1785MHz

WCDMA 2100: 1920-1980MHz

WCDMA 900: 880-915MHz

LTE Band 1: 1920-1980MHz

LTE Band 3: 1710-1785MHz

LTE Band 7: 2500-2570MHz

LTE Band 8: 880-915MHz

LTE Band 20: 832-862MHz

LTE Band 28: 703-748MHz

LTE Band 38: 2570-2620MHz

LTE Band 40: 2300-2400MHz

LTE Band 41: 2535-2655MHz

Bluetooth/BLE 1M: 2402-2480MHz

BLE 2M: 2404-2478MHz

2.4G Wi-Fi: 2412-2472MHz/2422-2462MHz

5G Wi-Fi: 5150-5250MHz, 5725-5850MHz

NFC: 13.56MHz

Receiver Frequency:

EGSM900: 925-960MHz

DCS1800: 1805-1880MHz

WCDMA 2100: 2110-2170MHz

WCDMA 900: 925-960MHz

LTE Band 1: 2110-2170MHz

LTE Band 3: 1805-1880MHz

LTE Band 7: 2620-2690MHz

LTE Band 8: 925-960MHz

LTE Band 20: 791-821MHz

LTE Band 28: 758-803MHz

LTE Band 38: 2570-2620MHz

LTE Band 40: 2300-2400MHz

LTE Band 41: 2535-2655MHz

Bluetooth/BLE 1M: 2402-2480MHz

BLE 2M: 2404-2478MHz

2.4G Wi-Fi: 2412-2472MHz/2422-2462MHz

5G Wi-Fi: 5150-5250MHz, 5725-5850MHz

NFC: 13.56MHz

BDS B1I, Galileo E1, GPS L1C/A, GPS L1 C, GLONASS G1: 1559-1610MHz

RF-Output Power : (ERP/EIRP/Conducted)

EGSM900: 32.35dBm (GMSK), 27.06dBm (8PSK)

DCS 1800: 28.63dBm (GMSK), 25.35dBm (8PSK)

WCDMA 2100: 24.22dBm

WCDMA 900: 24.36dBm

LTE Band 1: 24.62dBm

LTE Band 3: 25.11dBm

LTE Band 7: 24.32dBm

LTE Band 8: 23.67dBm

LTE Band 20: 24.39dBm

LTE Band 28: 24.18dBm

LTE Band 38: 24.12dBm

LTE Band 40: 24.84dBm

LTE Band 41: 24.09dBm

Bluetooth: 3.21dBm

BLE: 1.31dBm

2.4G Wi-Fi: 17.95dBm

5G Wi-Fi:

5150-5250MHz: 11.73dBm

5725-5850MHz: 8.40dBm

NFC: 19.67dBuA/m @ 3m

For FCC

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each phone are performed in positions and locations as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.