

Packing List

- Host(receiver)
- F9/F52 button (transmitter)
- Lanyard
- Charger
- User Manual

1.Product Introduction



1.1 Host (receiver) Technical Specifications

Physical Dimensions

Unit Only: 266(L)*150(W)*20(H) mm

With Mounting Bracket: 266(L)*195(W)*20(H) mm

Power Requirements

Input Voltage: DC 12V/1A

Standby Power Consumption: 0.6W

Rated Power Output: 2.6W

Wireless Communication

Operating Frequency: 315 MHz

Modulation Type: AM OOK

Control Interface

Tactile Buttons:

▶ Page Up

◀ Page Down

■ Function/Select

● Reset

System Capacity

Paired Transmitters: 319 maximum

Active Call Queue: 20 simultaneous requests

Audio Features

Volume Control: 15 digitally adjustable levels

Speaker Specifications: 25Ω impedance / 0.5W power

Display

Type: 3 × 3.5-inch digital Nixie tubes

ID Management

Addressable Range: 001 to XXX (4095 unique combinations)

ID Format: 0-9 and A-F hexadecimal values

Configuration Menu

Alert Tone Selection (9 preset options)

Scroll Display Duration (000-999s)

Auto-Clear Delay (000-999s)

Transmitter Pairing

Alert Tone Length Adjustment

Voice Alert Scenarios (9 Preset Modes)

Default: "Dingdong + Number XXX" with service type:Order/Call/Checkout/Water

0: "Dingdong + Number XXX (Order/Call/Checkout/Water)" (Default)

1: "Dingdong + Number XXX (Order/Service/Checkout/Water)"

2: "Dingdong + XXX Room Call"

3: "Dingdong + XXX Bed Call"

4: "Dingdong + X Room XX Bed Call"

5: "XX Room X Bed Call" (no Dingdong)

6: "Dingdong" (sound effect only)

7: Airport sound effect

8: Alert sound effect

User Manual

Wireless calling system

JT-362

Please read the user's guide carefully before use
for correct installation and quick use.

1.2 Transmitter (Call Button) Introduction

JT-362-1 Button (Transmitter)

Call Function: Press and hold the "CALL" button to request assistance.

Cancel Function: Press and hold the "CANCEL" button to terminate the call.



JT-362 Button (Transmitter)

Call Function: Press and hold the "CALL" button to send a help request.



2.Menu Navigation & Settings

2.1 Alert Tone Selection [F1] (0-8, 9 Options)

- In standby mode (screen clear of call alerts; press [Reset] to clear if active), press [Function] – screen displays "F1".
- Press [Function] to enter – screen shows current tone "XX".
- Use [Page Up]/[Page Down] to select preferred alert tone (0-8).
- Press [Reset] to save and exit.

2.2 Scroll Display Duration [F2] (000-999 Seconds)

- In standby mode, press [Function] – "F1" appears.
- Press [Page Up] once – screen shows "F2".
- Press [Function] – "XXX" appears (blinking cursor indicates active digit).
- Press [Function] to cycle through digits; adjust values with [Page Up/Down].
- Confirm with [Reset].

2.3 Auto-Clear Timer [F3] (000-999 Seconds)

- Standby mode → [Function] → "F1".
- Press [Page Up] twice → "F3".
- [Function] → edit "XXX" (blinking digit).
- Adjust digits per 2.2 steps d-e.

2.4 Transmitter Pairing [F4] (001-XXX, Hex 0-9/A-F)

- Standby → [Function] → "F1".
- [Page Up] 3x → "F4".
- [Function] → "001/0.0.1" (blinking).
- Cycle digits with [Function]; set values (0-9/A-F) via [Page Up/Down].
- Press transmitter's call button – successful pairing confirmed by:
 - Decimal point (.) next to ID
 - "Dingdong" voice prompt
- Repeat steps d-e for additional transmitters.
- [Reset] to exit.

2.5 Alert Tone Duration [F5] (00-99 Repeats)

- Standby → [Function] → "F1".
- [Page Up] 4x → "F5".
- [Function] → edit "XX".
- Configure per 2.2 methodology.
- [Reset] to confirm.

2.6 Factory Reset

- Navigate to F4 menu (2.4 steps a-b).
- Set ID to "000" via [Page Down].
- Hold [Function] for 3 seconds:
 - Countdown appears
 - "Airport prompt tone" plays
- System reboots to factory defaults.

2.7 Delete Paired Transmitter

- Access F4 menu (2.4 a-b).
- Select target ID "X.X.X".
- Hold [Function] for 3 seconds:
 - Decimal point disappears
 - "Di" confirmation tone sounds
- [Reset] to exit.

2.8 Volume Adjustment (0-15 Levels)

In standby (screen showing "---"):

- [Page Up]: Increase volume
- [Page Down]: Decrease volume

Notes:

- Standby Mode: Required for all settings. Clear active calls with Reset first.
 - Confirmation: Voice/screen cues indicate successful operations.
 - ID Range: "XXX" = 001-FFF (hexadecimal).
- For troubleshooting, refer to the transmitter pairing guide or contact support.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

说明书要求

尺寸：280*110 mm

折页：风琴折

材质：128g铜版纸

本页无需印刷