 


Front View 正面

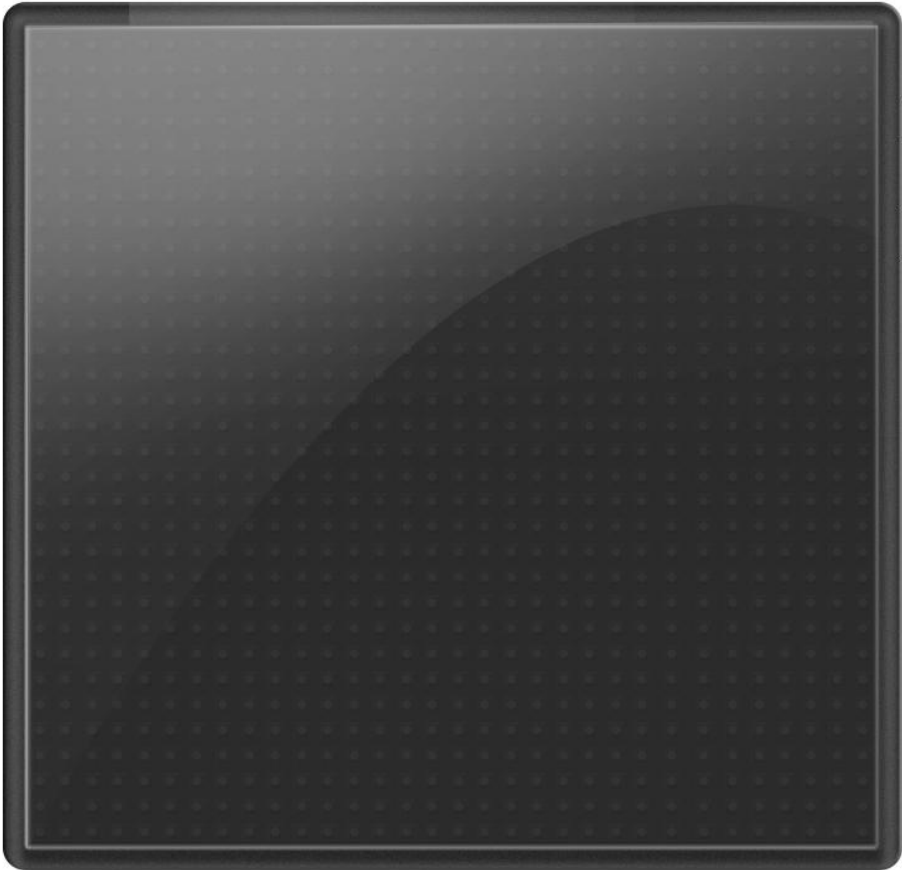

Back View 背面



 
LED pixel Display




User Manual

Full color LED screen / Custom editing

Remote Control Functions

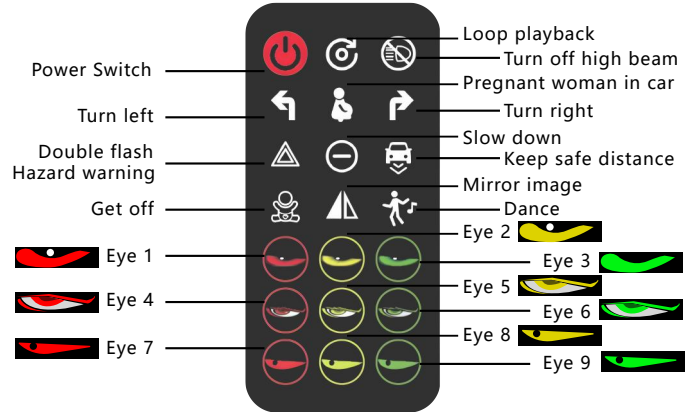

 1. Download & Install App



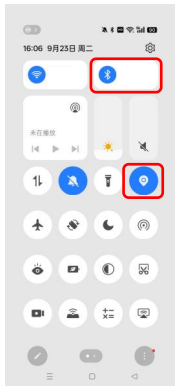


Scan the QR code below to download and install app with your mobile phone, or enter Google Play/App Store and search for "Multic LED" to download



Scan the QR code and download the App

   
If you don't have App Store / Google Play, please click the third one to download from Local Server

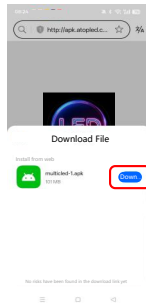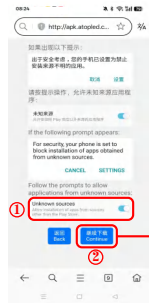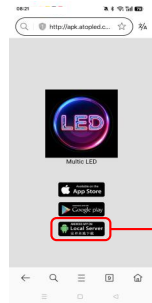


2. App Authorization Permission

Firstly, Turn ON Bluetooth and Location

 
① Allow access to your location information

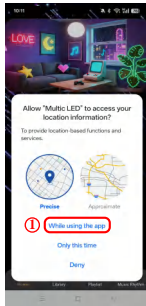

 ② Allow to find and connect to nearby devices

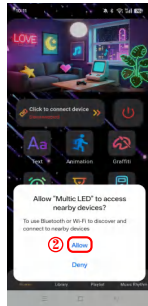

 3. Connect The Device

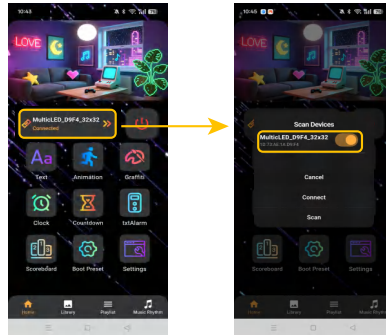



Note :

1: When you open the APP for the first time, Please Allow to all permissions

2 : Please click to connect the device

3 : If Bluetooth cannot be searched on your Android phone, please check if you have turned on the GPS.

  4. Text Editing

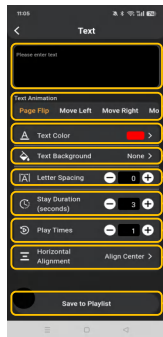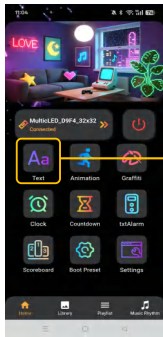

Input Text

Set text animation

Page Flip/Move Left/Move Right/Move Up/
Move Down/Snowfall/Bubbles/Blink

Change Text Color

Modify Text Background

Adjust Letter Spacing

 
Set Stay Duration (Seconds)

Set Play Times

Set Horizontal Alignment

Save to Playlist

5. Special Effects / DIY Color

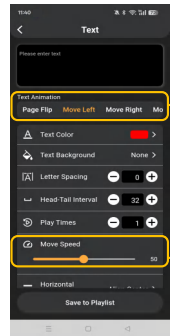

Page Flip

Move Left

Move Right

Move Up

 
Move Down

Snowfall

Bubbles

Blink



Set Move Speed

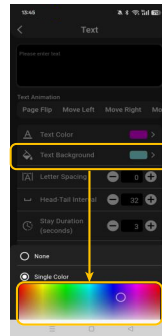

Background color selection

Choose colors freely

  6. DIY Animations

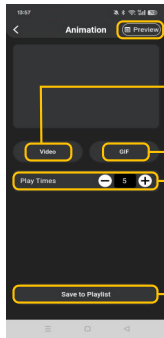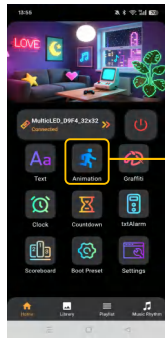

Preview

 
 
DIY Video

DIY GIF

Set playback count

Save to Playlist

7. DIY Graffiti

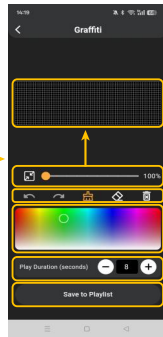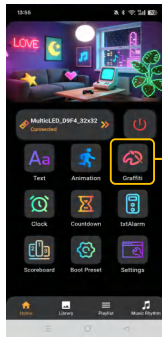

Drawing board

Drawing board zoom in/out

 
Undo Redo Brush Erase Delete

Choose colors freely

Settings Play Duration (seconds)



Save to Playlist

8. Clock

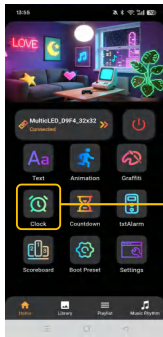

Time System / Date

  9. Countdown

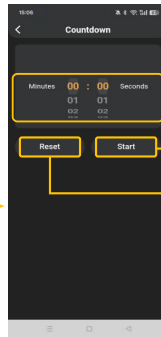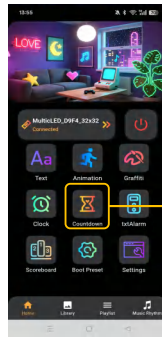


Time Selection

Start



Reset

 10. TxtAlarm

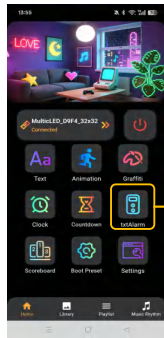


- txtFinish
- txtAddAlarm
- txtMin
- txtHour
- txtAlarm
- txt TimerOn
- txt TimerOff
- AlarmBuzzer OFF / ON
- AlarmDuration

  11. Scoreboard

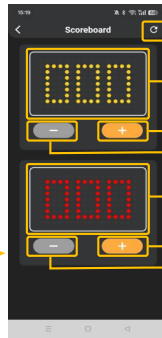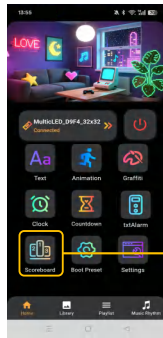


- Reset
- Scoreboard
- Score +1
- Score -1
- Scoreboard
- Score +1
- Score -1

 12. Boot Preset

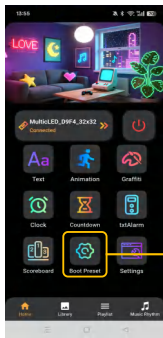

Choice

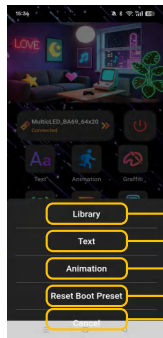 

Library

 
 
Text

Animation

Reset Boot Preset

Cancel

13. Settings

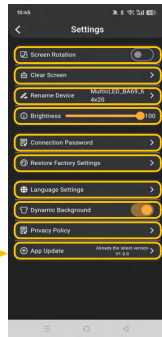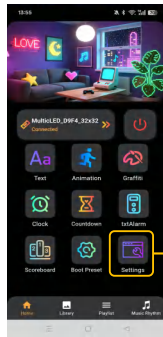

Screen Rotation

Clear Screen

Rename Device

Adjust Screen Brightness

Connection Password

Restore Factory Settings

 
Language Settings

Dynamic Background


Privacy Policy

App Update


14. Library

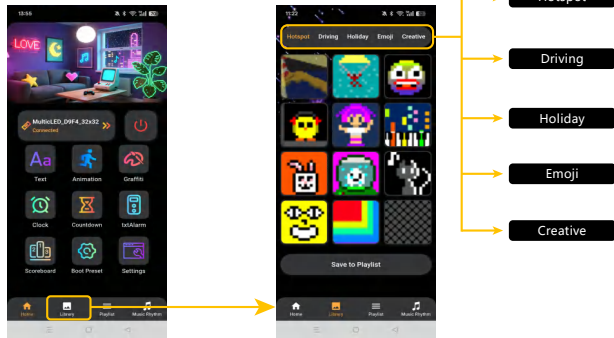

 15. Playlist

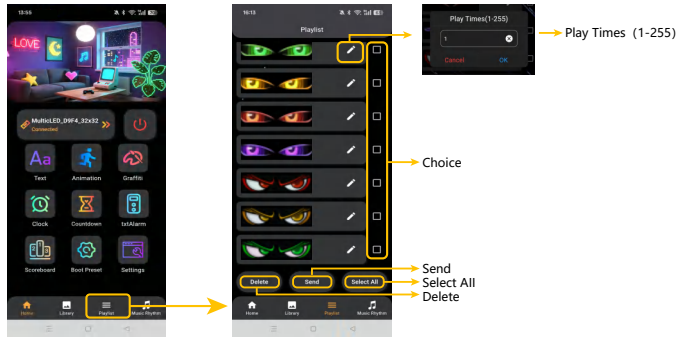

 16. Music Rhythm

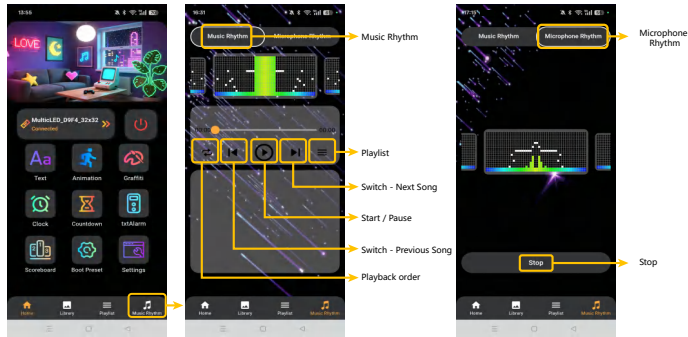

USB Interface Selection

Recommended	Original Android Phone Charger	OK
	Power Bank	OK
	Vehicle USB Interface 5V / 2A Vehicle Charger 5V / 2A	OK
Normal Use	Power Strip USB	Some content display may cause screen shutdown , Bluetooth connection errors, or a yellowish color
	IPhone Charger	
Do not Use	Computer / TV USB	1 . Some content will turn off the screen , the Bluetooth connection is wrong , and the color is yellow . 2 . It will cause damage to the USB interface , or the Voltage does not match .
	Car U Disk Interface	
	Non-Standard Phone Charger	1 . Burn out the chip and permanently damage the screen 2 . Heat , fire and other risks
	Modify USB Interface	

Reminder :

1.Any abnormal phenomena that occur during use may be related to incorrect selection of the USB interface .

2. If the problem still cannot be resolved , please contact customer service .

Operation Instructions for Factory Reset of the Device:

The device can be restored to its factory settings by continuously and quickly unplugging and plugging in the device's power supply or pressing the button switch five times. This is applicable when you forget the password set for the device, which leads to the inability to connect to the device. This method does not require App operation. You only need to unplug and plug in the power supply five times to complete the reset.

Perform the reset operation:

Repeat the following steps continuously for 5 times with an interval of ≤ 1 second.
Off → On → Off → On → Off → On → Off → On → Off → On (5 times in total).

Observing the Device's Response:

If the device is not reset, you can try increasing the number of switch operations to 6 - 7 times.
After the device is automatically reset, the interface will return to the default state, indicating a successful reset.

Precautions:

- * Operation Frequency: The unplugging and plugging interval should be 1 -2 seconds. An interval that is too long or too short may render the operation ineffective.
- * Number of continuous Unplugging and plugging: The number of times should be strictly 5. Too few times will not trigger the reset.

Warning :

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- a) The statement "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."
- b) The statement "Even used batteries may cause severe injury or death."
- c) The statement "Call a local poison control center for treatment information."
- d) A statement indicating the compatible battery type (e.g., LR44,CR2032).(LR44,CR2032). (LR44, CR2032).
- e) A statement indicating the nominal battery voltage, 3.7v."
- f) The statement "Non-rechargeable batteries are not to be recharged."
- g) The statement "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."

- a) The statement "Ensure the batteries are installed correctly according, to polarity (+ and -)."
- b) The statement "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
- c) The statement "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
- d) The statement "Always completely secure the battery compartment. If the battery compartment does not close securely. stop using the product, remove the batteries, and keep them away from children."

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user ' s authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.



 
LED 随贴屏




使用说明书

全彩LED 屏 / 自定义编辑

远程控制功能说明

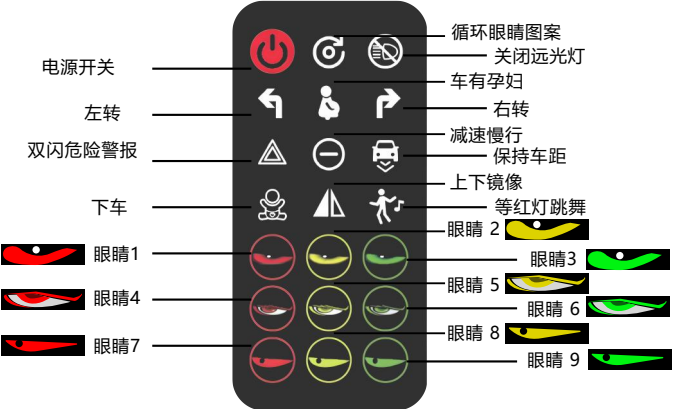

 1. 请打开蓝牙和定位



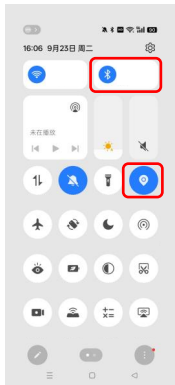


手机扫描下面二维码进行下载安装，
或者进入 Google Play/APP Store
搜索 “Multic LED” 进行下载



扫码下载 APP

   如果你没有APP Store / Google Play,
请点击第三个从本地服务器下载

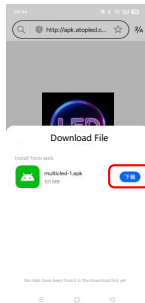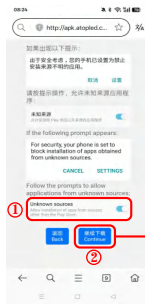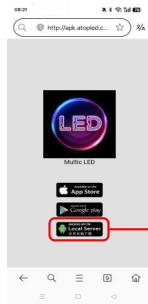

2. APP授权权限

 
① 允许访问地理位置



② 允许查找并连接到附近的设备




3. 连接蓝牙设备

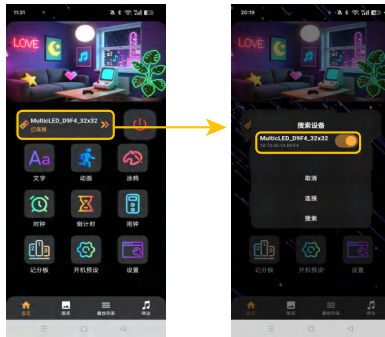

注意:

- 1: 当您第一次打开应用程序时, 请允许所有权限。
- 2: 请点击连接设备。
- 3: 如果在您的安卓手机上无法搜索到蓝牙, 请检查是否已打开GPS。

 
4. DIY文字

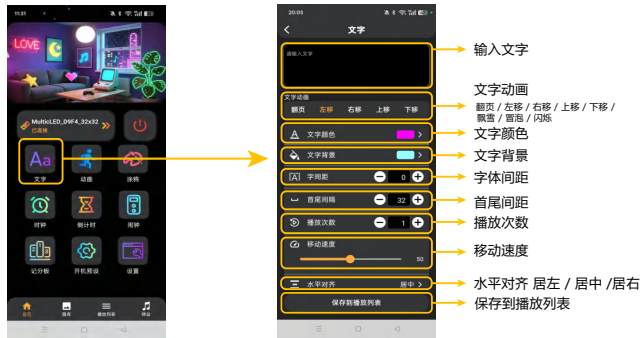


5. DIY 文字特效 / 颜色



 
6. DIY 动画

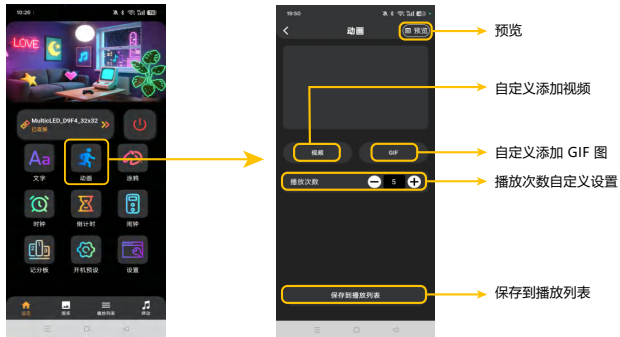

 7. DIY 涂鸦

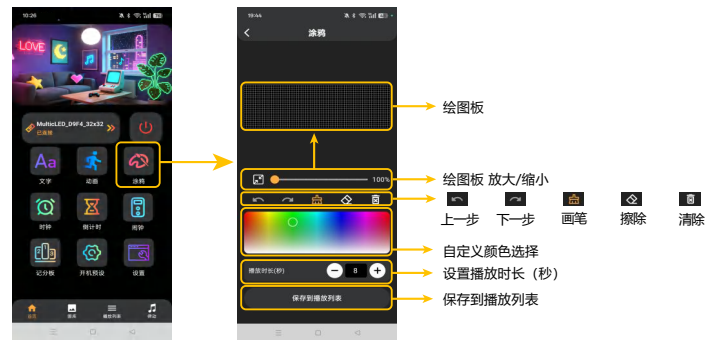


 8. 时钟

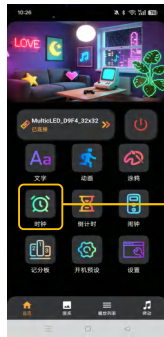

时间制 / 日期

 9. 倒计时

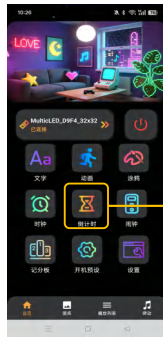


时间选择面板

开始按钮

重置按钮

 10. 闹钟

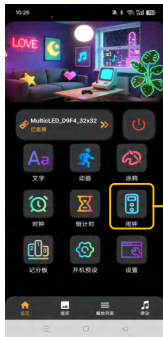

设定完成
添加闹钟

时间设置

时间设置

闹钟设置

定时开机

 
 
定时关机

蜂鸣器

蜂鸣器开关

持续时间调整

11. 记分板

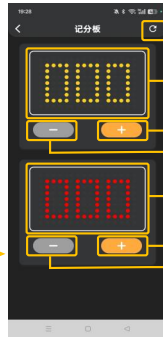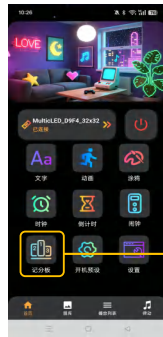

重置按键

记分板

分数 +1

分数 -1

记分板

分数 +1

分数 -1

 
12. 开机预设



13. 设置




14. 图库

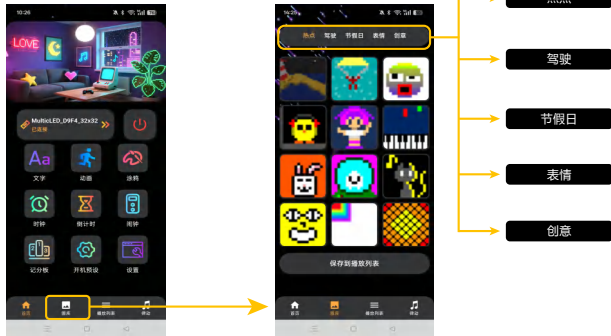

15. 播放列表



 16.音乐律动

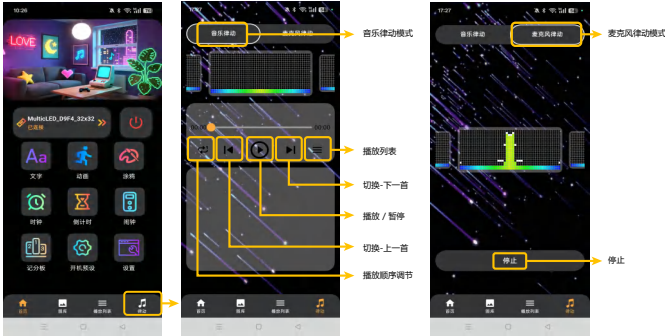

关于USB 接口选择说明

推荐使用	安卓手机原装充电器	功能正常
	移动电源	功能正常
	车载USB接口5V/2A 车载充电器5V/2A	功能正常
可使用	USB 电源排插	某些内容显示会熄屏，蓝牙连接错误，颜色偏黄
	苹果手机充电器	
请勿使用	电脑，电视机 USB 接口	1. 某些内容会熄屏，蓝牙连接错误，颜色偏黄 2. 可能会损坏USB接口，或电压不符 3. 请勿使用低于5V/2A的USB 接口
	汽车U盘接口	
	非标手机充电器	1. 烧坏芯片,永久性损坏屏幕 2. 发热，起火等风险
	改装USB接口	

温馨提示：

1. 在使用过程中出现任何异常现象，均可能与USB接口选择错误有关。

2. 若仍然无法解决问题，请联系客服人员。

设置恢复出厂设置操作说明：

通过连续快速拔插设备电源或按键开关 （五次） 触发设备恢复出厂设置，适用于设备设置密码后忘记密码导致设备无法连接。此方法无需APP操作，进需要通过拔插电源五次即可完成重置。

执行重置操作：

间隔≤1秒，连续重复5次。

关 → 开 → 关 → 开 → 关 → 开 → 关 → 开 → 关 → 开 （共5次）。

观察设备反应：

若设备未重置，可尝试增加开关次数至6-7次。

设备自动重置后，界面恢复到默认状态，表示重置成功。

注意事项：

操作频率：拔插间隔需要1~2秒，间隔过长或过短可能导致操作无效。

连续拔插次数需 严格为5次， 过少无法触发。

警告：

未经负责合规性的一方明确批准，对本设备进行的更改或修改可能会使用户操作该设备的权限失效。

注意事项：

本设备符合美国联邦通信委员会（FCC）规则第15部分的要求。设备运行需遵守以下两项条件：

- （1）本设备不得造成有害干扰；
- （2）本设备必须接受所有接收到的干扰，包括可能导致非预期运行的干扰。

FCC 声明：

本设备已通过测试，确认符合FCC规则第15部分中针对B类数字设备的限值要求。

这些限值旨在为住宅环境中的安装提供合理保护，

防止有害干扰。本设备会产生、使用并可能辐射射频能量，若未按照说明书安装和使用，

可能会对无线电通信造成有害干扰。但无法保证在特定安装环境中不会发生干扰。

若本设备确实对无线电或电视接收造成有害干扰（可通过开启和关闭设备来判断），

建议用户尝试通过以下一项或多项措施纠正干扰：

- 重新调整接收天线的方向或位置。
- 增加设备与接收器之间的距离。
- 将设备连接到与接收器所在电路不同的电源插座。
- 咨询经销商或经验丰富的无线电/电视技术人员以获取帮助。

a)声明“请立即根据当地法规回收或处理废旧电池，并远离儿童。

请勿将电池丢弃在家庭垃圾中或者焚烧。”

b)声明“即使是废旧电池也可能导致严重烧伤或者死亡。”

c)声明“请致电当地毒物控制中心获取治疗信息。”

d)指示兼容电池类型的声明（例如，LR44,CR2032）。（LR44,CR2032）。（LR44,CR2032）。

e)指示标称电池电压的声明。3.7V

f)声明“不可充电电池不能充电。”

g)声明“请勿强行放电，充电，拆卸，加热至（制造商指定的温度等级)以上或者焚烧。

这样做可能会因排气，泄露或者爆炸而导致化学灼伤，从而造成伤害。”

a)“确保电池按照极性（+ 和 - ）正确安装。”

b)“请勿混用新旧电池，不同品牌或者类型的电池，例如碱性电池，碳锌电池或可充电电池。”

c)“根据当地法规，从长期未使用的设备上取出并立即回收或处置电池。”

d)“始终完全固定电池仓。” 如果电池仓无法牢固关闭，请停止使用该产品，取出电池，并将其放在儿童接触不到的地方。”

