 


User's guidance

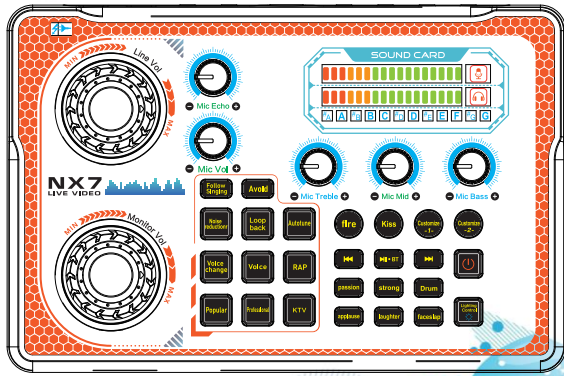

Support major live broadcast apps

Compatible with computer and mobile phone

Multi-function mixer sound card

 
To respected user:

This product is a professional recording live broadcast equipment that is very popular nowadays for web live broadcast, mobile K song and other platforms. The product with a built-in dual-core DSP digital chip can switch multiple scene modes arbitrarily and supports dual microphones, dual live broadcasts, dual headphones. Also, it has adjustable treble and bass, one-key dodge, one-key elimination of original sound, one-key noise reduction, multiple groups of sound change fine-tuning and other functions. It supports most live broadcast software, such as TikTok, Zynn, Singba, Wesing, Love Sing, Yingke, Huajiao, Nonolive and other live platforms.

About the usage guide

Our company has conducted a strict and careful check of the usage guide, but we cannot guarantee that the usage guide is completely free of errors and omissions. The pictures in this user guide are for reference only. If any individual pictures do not match the actual display of the product, please refer to the actual product. In order to provide better services, the company reserves the right to modify the products and content described in this user guide at any time without notice.

Hardware introduction

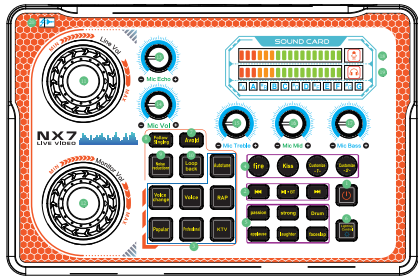

I 、 Main control

- :Press and hold for 2 seconds, all indicators will light up, and the machine will perform self-checking. It has a voice prompt turned on. The switch button light is always on and the machine works normally. Press and hold for another 2 seconds to shut down, and there is a voice prompt for shutdown.
- : After booting up, the default Bt on light flashes, and the light stays on after successfully connecting to Bluetooth "NX7"; Short press the middle button to play/pause; Press and hold the middle button to turn off Bt, and the light will turn off. In Bt mode: can switch up and down.
- Mode key
Autotune: Suitable for singing electronic music songs, lightly press this key in electronic music mode to adjust the electronic music tone, and the "tone indicator light" will display accordingly.

Hardware introduction

Voice Changer: Short press this key to switch to voice mode: the indicator light flashes. Short press in sequence to switch: male, female, monster sound, doll sound; Suitable for chatting, making phone calls, live streaming, or recording to create a humorous atmosphere.
Voice: Short press this button to enter the original sound mode, and the microphone sound will return to the original sound, suitable for chatting with the other party.
RAP:The voice is low and magnetic, suitable for live streaming MC scenes.
Popular:Short press this button to enter the popular singing mode, which has a high reverberation and is suitable for singing scenes.
Professional:Short press this button for professional singing mode, which has low reverberation and is suitable for singing scenes.
KTV:Short press this button to enter KTV singing mode, which has a longer reverberation time and higher reverberation volume, and is suitable for singing scenes.

- Short press one of the buttons to output an ambient sound effect during live streaming.
- Short press one of the buttons to output an ambient sound effect during live streaming.
- Lightly press this button to turn off all unused button lights. When the corresponding button is operated, the corresponding light will turn on; Lightly press the button again to turn on the light.
- Avoid: When the microphone sound input is turned on, the accompaniment sound fades out or decreases, and the accompaniment returns to normal after the microphone sound ends.
- Follow Singing: Eliminate vocals in dual channel stereo songs and convert the original song into accompaniment.

 
Hardware introduction

Noisereductionr: Turning it on can reduce external noise.
10. Loop back: By default, "internal storage" is turned off when turned on. To turn on "internal storage", press this button briefly. This feature is used on the computer. (Turning off the built-in speaker means turning off all sounds on the computer. In the live broadcast room, the other party cannot hear all the sounds on your computer, only the sound of the microphone.)
Dodge: When the microphone sound is input, the accompaniment sound fades out or decreases, and the accompaniment returns to normal after the microphone sound ends.

II 、 Function adjustment area

- Line Vol: Rotate to adjust the accompaniment volume, rotate left to decrease the accompaniment volume, and rotate right to increase the accompaniment volume.
- Monitor Vol: Rotate left and right to control the listening volume, rotate left to decrease the listening volume, and rotate right to increase the listening volume.
- Mic Echo: Rotate left and right to control the volume of reverberation, rotate left to decrease the volume of reverberation, and rotate right to increase the volume of reverberation.
- Mic Vol: Rotate to adjust the microphone volume, rotate left to decrease the microphone volume, and rotate right to increase the microphone volume.
- Mic Treble: Rotate the microphone to adjust the treble volume, rotate left to decrease the treble volume, and rotate right to increase the treble volume.
- Mic Mid: Rotate to adjust the mid-range volume of the microphone, rotate to the left to decrease the mid-range volume, and rotate to the right to increase the mid-range volume.
- Mic bass: Rotate to adjust the bass volume of the microphone, rotate left to decrease the bass volume, and rotate right to increase the bass volume.
- Running marquee: The lighting effect changes with the size of the audio.
- Tone indicator light: In electronic mode, the corresponding tone light flashes.
- Charging indicator light: When charging, the indicator light is red, and when fully charged, the indicator light is green.

Interface Name

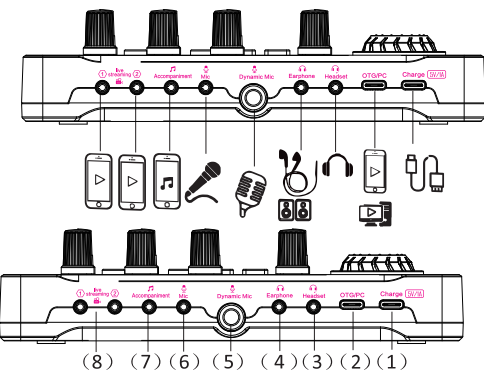

III 、 Interface name

- Charge: Supports connection to Type-C 5V/1A charging cables.
- OTG/PC live interface: Support a USB data cable access to 5V/1A power supply charging, and connect to a computer or mobile phone through USB. Also, it supports live broadcast while charging.
- Headset: Connect headphones with four connectors and a microphone.
- Earpiece: Connect a headphone with a 3.5MM interface or connect to an AUX interface of other playback devices through a 3.5MM cable to provide output for other devices.
- Dynamic Mic: Connect a microphone via a 6.35mm cable.
- Mic: Connect a microphone via a 3.5mm cable.
- Accompaniment: Connect a mobile phone through a 3.5MM audio cable to input music accompaniment.
- Live 1/Live 2 streaming: Connect a mobile phone and sound card through a 3.5MM audio cable for live broadcast and recording.

Product specification

IV 、 Product parameters

Signal to noise ratio: 106dB

Output Power: 600mW

Whole machine power consumption: 5W

Rated input: 5V/1A

Recording: 16bit/48KHz, 90dB signal to noise ratio

Replay: 16bit/48KHz, 100dB signal to noise ratio

Distortion: 0.1%(recording), 0.005%(replay)

Battery capacity: 1200MA

V 、 Interface type

Mic interface: 3.5mm	Musical instrument interface: 6.35mm	Live interface: 3.5mm
Line interface: 3.5mm	Earpiece Interface: 3.5mm	
Earphone interface: 3.5mm	OTG interface: Type-C	Charging interface: Type-C

- This product is suitable for use in tropical climates.
- The altitude area applicable to this product is determined by the power adapter finally selected.
- If consumers use a power adapter to supply power, they should purchase a power adapter that has obtained CCC certification and meets the standard requirements.

Common problem troubleshooting

[1] The device does not work when it is turned on.
1) Please check if all cables are connected correctly.
2) Please check if the device has enough power, please charge it and try again [with battery version].

[2] There is noise or no sound when using the headset.
1) Please try to re-plug the headset, and plug the headset before turning on the sound card.
2) Please check if the monitor switch is on.
3) Please use the original headset of the phone.

[3] Noise is heard during live broadcast.
1) Turn down the microphone volume appropriately.
2) Check if the microphone and headset are fully inserted in the opposite position.

[4] No accompaniment can be heard during live broadcast.
1) Turn up the accompaniment volume.
2) Check if the accompaniment cable is fully inserted into the device and the accompaniment phone.

[5] They cannot hear the reverb and accompaniment during the live broadcast.
1) Turn up the accompaniment volume.
2) Check if the accompaniment cable is fully inserted into the device and the accompaniment phone.

[6] The sound of the microphone cannot be monitored.
1) Check if the microphone or headphones are connected properly.
2) Please check if the monitor switch is on.

[7] The computer cannot recognize the sound card.
1) First connect the sound card to the computer, then restart the computer.
2) Change another USB interface connection.

After purchasing this product, please read the following three guarantees regulations carefully to ensure that the product is effectively protected.

. Unless otherwise noted, the user can enjoy a warranty period of 12 months for the purchased product due to its own quality problems (not product software failure) from the date of purchase.
. If users encounter product quality problems, they can request three guarantees from the designated service department of our company. If they need to be shipped, the user must bear the related costs of transportation.
. User must take the initiative to provide this valid warranty service certificate when requesting the three guarantees service.
. Additional services beyond the three-guarantee service of the product shall be charged in accordance with relevant regulations. The product warranty period after repair is three months from the date of pickup.
. The three-guarantee service provided by our company is limited to products with quality problems, and does not include compensation for losses caused by user accidents and any other indirect or direct losses.
. The user should take the initiative to fill in this voucher as required by the seller of purchase and keep it properly. Our company does not assume the consequences of not filling in this voucher as required, nor does it assume the seller's commitment to users beyond the warranty service regulations.

The following situations do not belong to the scope of the three guarantees. Our company reserves the right to provide services for products outside the scope of the three guarantees.

. The product's valid warranty certificate, original purchase certificate cannot be presented, or beyond the specified warranty period.
. The random information of the product is missing, such as the use guide, warranty card, data cable, product packaging and other accessories.
. Product failure or damage caused by operation that does not follow the instructions.
. Repair, disassemble, add or replace the original components without permission.
. The original serial number label is altered, worn, replaced, torn, etc.
. Product hardware damage, wear, and indirect software failure caused by the transportation process.
. Compatibility issues with current and future operating systems or product malfunctions or damage caused by this.
. Product performance failures and damages caused by force majeure such as normal wear, aging, improper placement, humidity, wrong connection, unstable voltage, external force, etc.
. The user personally has subjective requirements or objections to the quality, performance, function, feature, etc. listed or not listed in the user guide.

Warranty information

Dealer information

◆ Dealer's signature: *

◆ Selling price: _____

◆ Sale date: _____

User information

◆ Customer's name: _____ Tel: _____

◆ Address: _____

Repair record

◆ Fault description: _____

Note: Please fill in in detail. * is required, missing or false information will be deemed invalid.
This certificate is only used as a basis for providing three guarantees of services and does not have other legal effects. The maintenance record shall be subject to the maintenance certificate of the authorized service organization.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction