

INSTRUCTION MANUAL



MODEL: CG1

Read this booklet thoroughly before using and save it for future reference

● IMPORTANT SAFEGARDS

When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. Before using, always check that the electrical rating of the power socket corresponds to that of the appliance.
4. To protect against fire, electric shock and injury to persons, do not immerse cord, plug, or the grill in water or other liquid.
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Close supervision is necessary when any appliance is used by or near children.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may

result in fire, electric shock or injury to persons.

10. Do not use outdoors.

11. Do not let cord hang over edge of table or counter, or touch hot surface.

12. Do not place on or near a hot gas or electric burner, or in a heated oven.

13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

14. To disconnect, turn off any control, then remove plug from wall outlet.

15. Do not use appliance for other than intended use.

16. The appliance must not be used by an external timer or remote control system. Don't use an accessory not recommended by the manufacturer.

17. Don't wrap food with plastic film, polythene bags or metal foil. You'll damage the grill and may cause a fire hazard. Don't leave food to cool on the grill. Remove food while hot.

18. Don't use metal or sharp utensils on the grill. They'll damage the non-stick cooking surface. Use wooden or plastic spatulas or tongs.

19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

20. Children should be supervised to ensure that they do not play with the appliance.

21. **WARNING:** charcoal or similar combustible fuels must not be used with this appliance.

22. **CAUTION-'hot surface'.** The appliance generates heat and escaping steam during use. Take proper measures to prevent injury, burn or fire.

23. Never transport the appliance with handle.

24. This appliance is intended to be used in household and similar applications such as:

– Staff kitchen areas in shops, offices and other working environments;

– Farm houses;

– By clients in hotels, motels and other residential type environments;


– Bed and breakfast type environments

25. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

26. Save these instructions.

KNOW YOUR BARBEQUE GRILL

UPPER RELEASE BUTTON

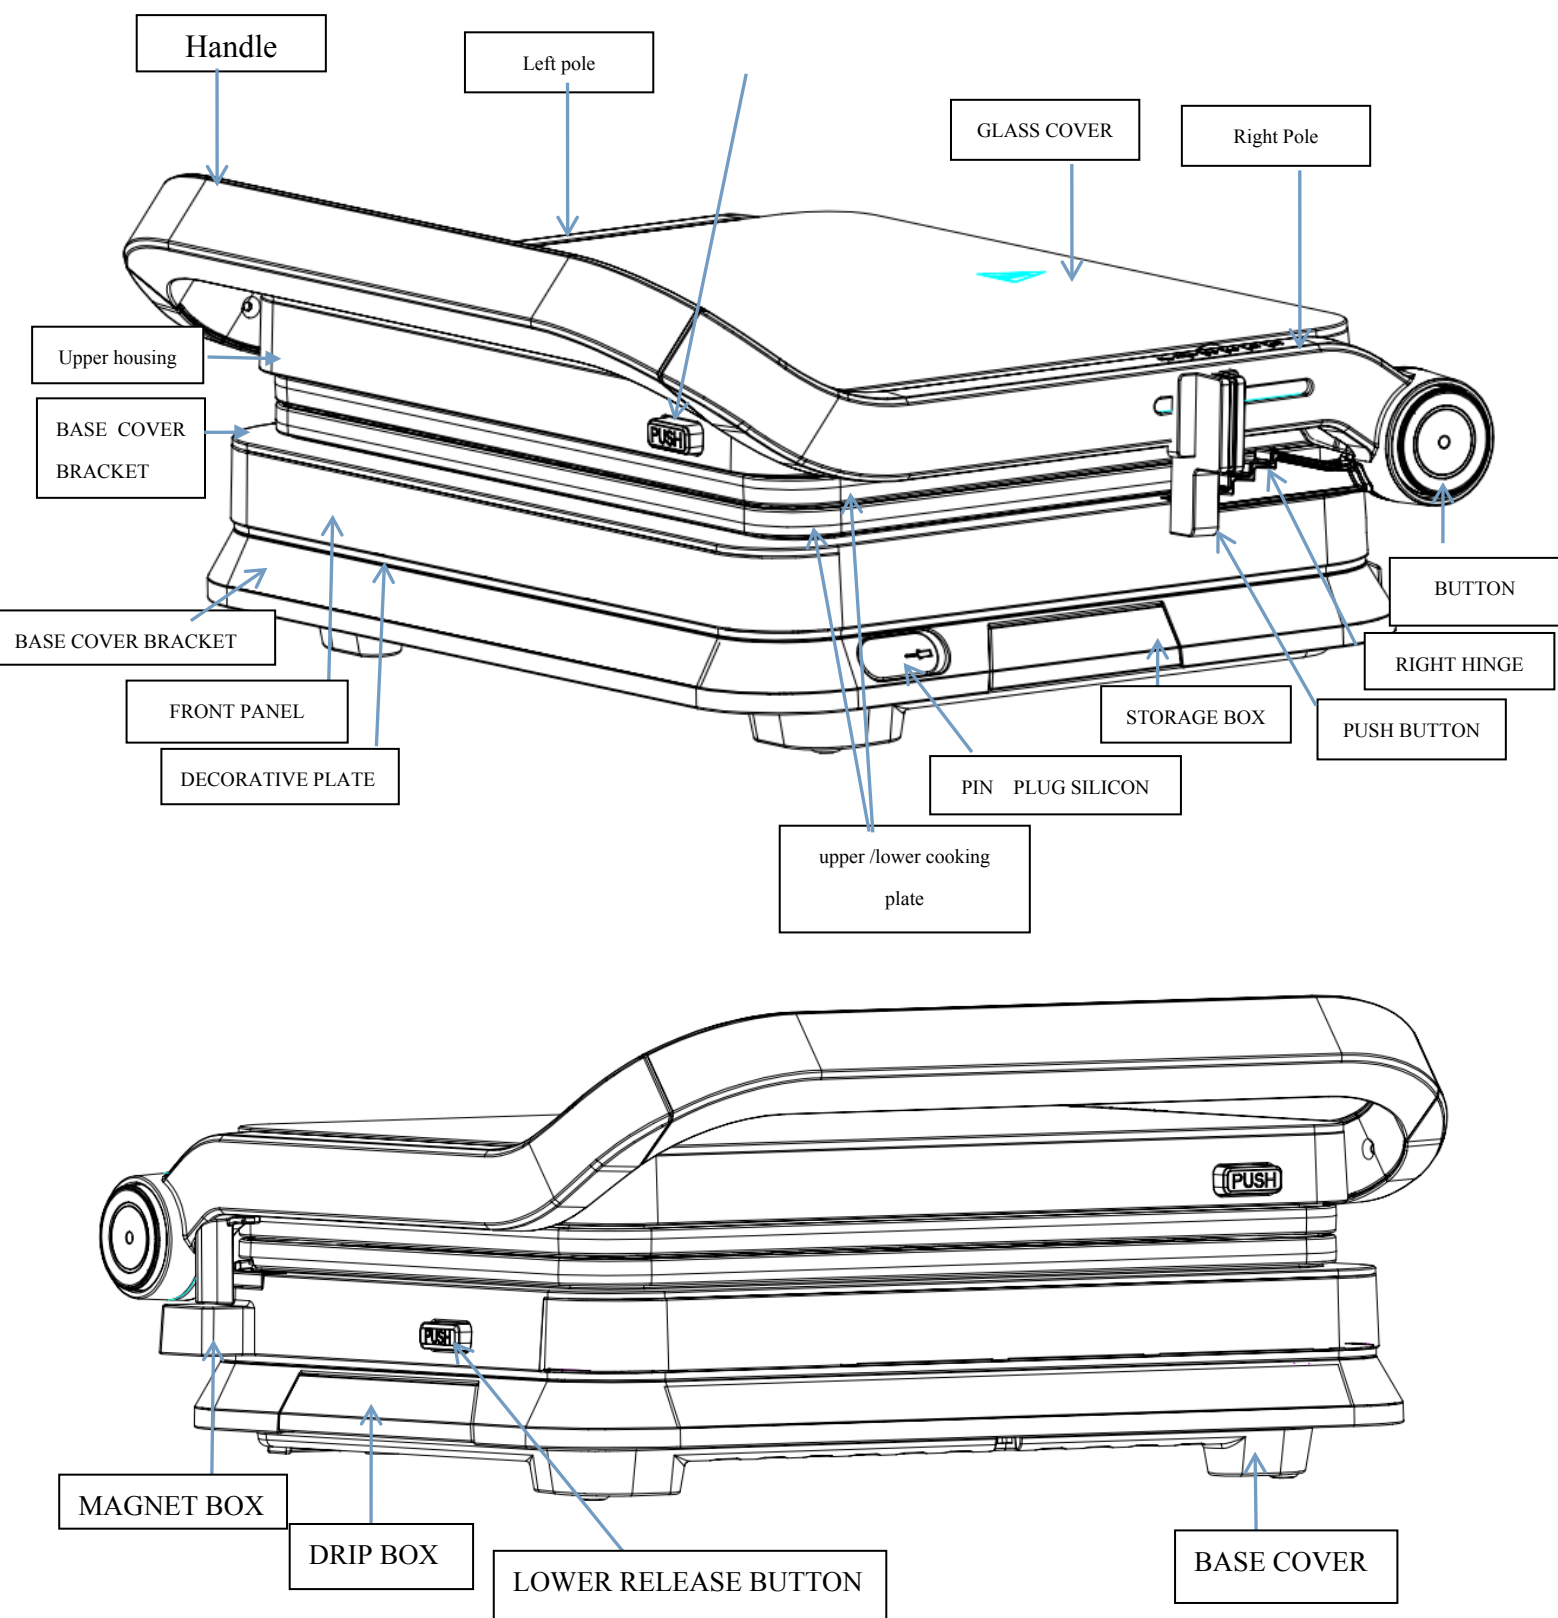

● INITIAL USE

Unpack the package, take out all the accessories and clean them according to the section of “CLEAN AND MAINTENANCE”.



● ASSEMBLE THE ROASTING TRAYS

Normally, the grill is opened at an angle of 105 degree .The top roasting tray can be level with the bottom roasting tray to create a large cooking surface and assemble the top roasting tray.

First open the grill to a angle which is less than 105° , then push the pushing knob upward with the other hand and hold the handle with one hand to open the grill to 180° . Insert the trays into the clamps near the hinge and push down the front end of tray with a little force to snap the tray into place. Then close the grill, just pull the handle toward you directly.

Control Panel Description:

See figure below

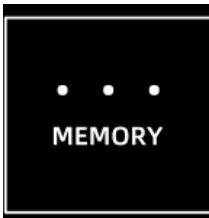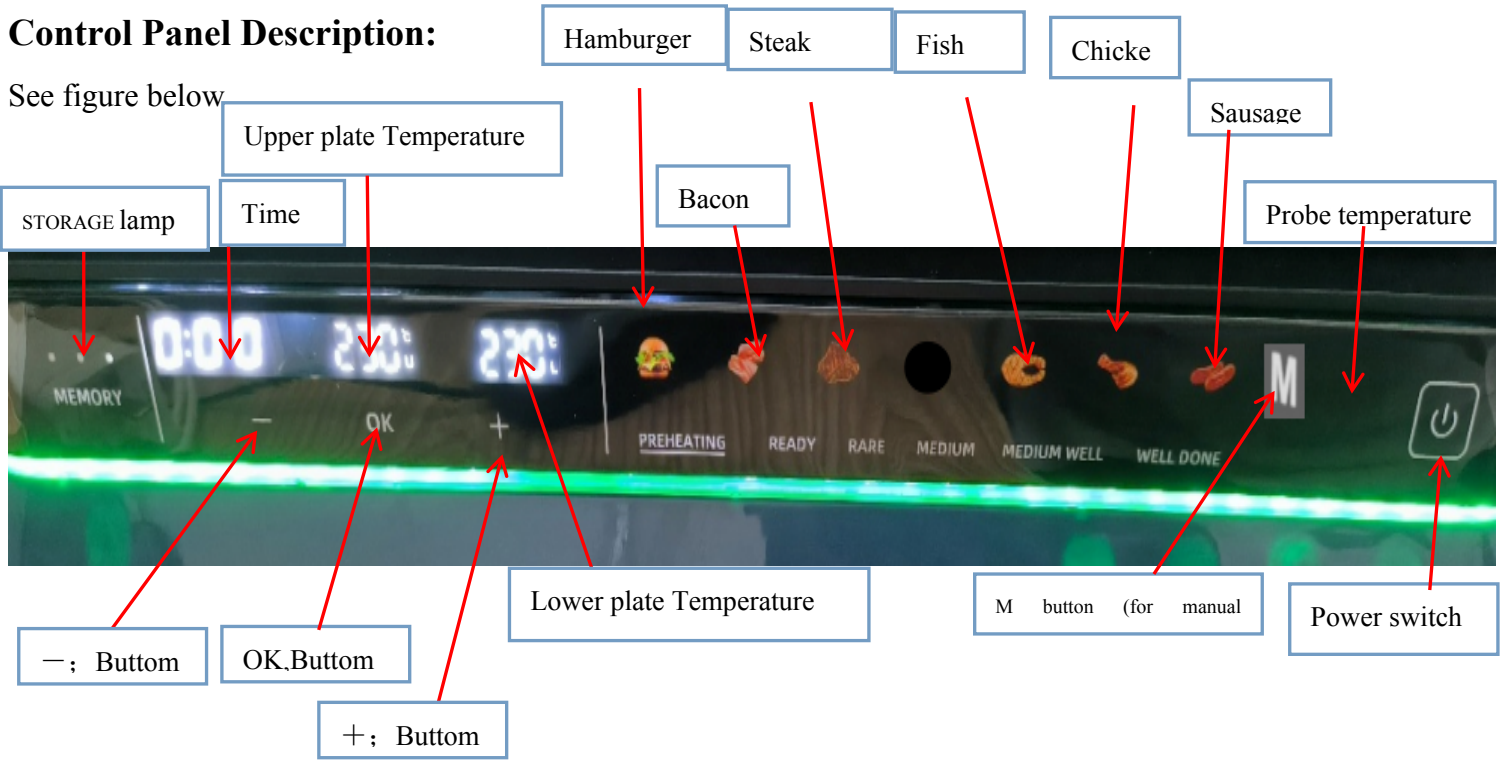

-----Memory button: Mainly used for manual mode grilling, users are satisfied with the previous grilling effect. Pressing this button can record three grilling parameters. During the process, it is possible to continuously update the parameters of the last roasted food needed. When saving for the second time, the previous parameters will be overwritten and the most recent parameters will prevail. And only three grilling parameters can be saved, Memory 1/Memory 2/Memory 3.



-----The buttons for increasing and decreasing the machine time and temperature, the confirm/pause heating button, and the OK button for 2 seconds will automatically enter standby mode.

Operation Description:


- 1.Close the entire machine and plug in the power plug. (Buzzer beeps once)
- 2.Press the power button to turn on: (Buzzer beeps once)



Operation mode: intelligent grilling mode and M grilling mode (normal mode);

M grilling mode:

1.The panel is a touch screen, which can be selected by tapping the corresponding menu on the panel. After turning on, the red light below will light up, continuously displaying gradient colors and food categories. The default M menu logo light will light up.

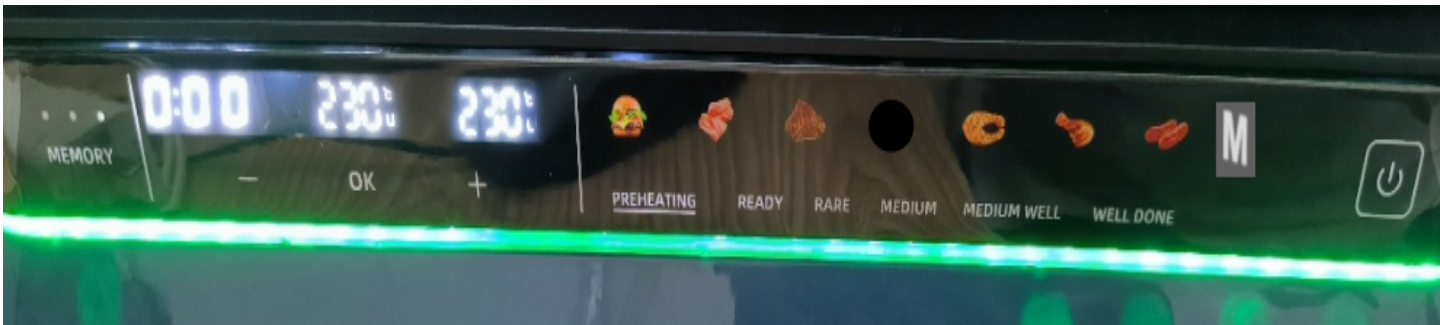

- 1) Close the lid and operate in M mode. When turned on, it defaults to M mode. Press the OK button to adjust the temperature of both the upper and lower plates simultaneously. The temperature indicator will flash when the light is on. You can press the “-” or “+” button to adjust the temperature. After adjusting the temperature, press the OK button to start preheating the whole machine. PREHEATING, the light starts flashing, and the light strip below turns orange. After the temperature reaches, the PREHEATING light stays on. The light strip below turns green, and the time adjustment area defaults to slow flashing from 10:00. Users can adjust the time by tapping the “-” or “+” button. After adjusting, press the OK button to start the countdown. When the countdown is 0, the whole machine will sound 3 times and return to the initial default state when turned on; If the user is satisfied with the grilled food this time, they can press the first asterisk button on the right side of the MEMORY button, and the icon light will turn on. Then press the OK button again to record the previous grilled food, temperature, and time parameters. For the next grilling, there is no need to reset. Simply press the power button and lightly tap the Memory button to select one of the options recorded: Memory 1/Memory 2/Memory 3. Press the OK button to start the machine preheating directly.
- 2) Open the M mode for 105 ° and 180 ° operation:

Open at 105 °: After pressing the power button, the temperature display box on the upper panel will flash




. At this point, lightly tap the “-” or “+” button to adjust the temperature, then press OK, and the



temperature display box on the lower plate will flash. Lightly tap the “-” or “+” button to adjust the temperature, then press OK. At this point, the whole machine starts to warm up, and the PREHEATING

light starts flashing. The light strip below turns orange. After the temperature reaches, the PREHEATING light stays on. The light strip below turns green when the whole machine is preheated and can be used to grill food. The M-mode requires someone to watch nearby to prevent food from burning; The whole machine starts timing from pressing the power button, and after 2 hours, it will automatically shut down and the buzzer will sound 3 times. If you need to use it again, you need to press the power button again to restart the whole machine; During the baking process, pressing the OK button will pause/start the machine. Press and hold the OK button for 2 seconds before releasing it, and the whole machine returns to the initial scrolling light state. Consumers can choose M-mode or smart menu again to grill food.

Open at 180°: Press the 180 ° button on the right hinge position, then open the lid 180 ° and place it flat. The machine operation is the same as opening 105 °.

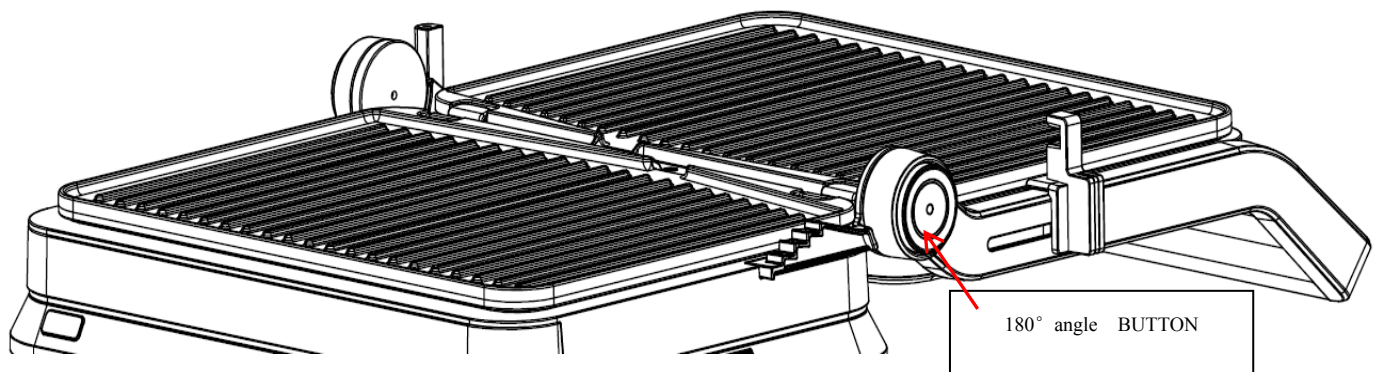

3)After the whole machine is powered on, press the power button to turn it on. The whole machine will be in standby mode. If the OK button is not pressed to start the whole machine within 15 minutes, the whole machine will be powered off and the buzzer will sound 3 times.

Intelligent grilling mode:

- 1) The machine can only select the menu on the panel for intelligent baking when the lid is closed. It cannot be started by opening 105 ° or 180 °, and can only use the M mode.
- 2) After the power plug is plugged in, (buzzer beeps once), lightly touch the power button (buzzer beeps once), the light below will turn red, and the default M menu logo light will turn on. Lightly touch the menu on the panel, and the corresponding menu icon will remain lit. Other menu buttons will turn off. Press the OK button, and the entire machine will start heating up at the set menu temperature.

During the preheating process, the light below is orange. When the temperature of the baking tray reaches the set temperature, the buzzer starts to sound 3 times, and the light below is green. Prompt the user to put in food, close the lid, and when the program recognizes the thickness of the food, the green light strip changes to blue. When the RARE countdown time is up, the light strip begins to change to purple. When the MIDEUM countdown time is up, the purple color begins to change to yellow. When the MIDEUMWELLDONE countdown time is up, the light strip begins to change to pink. When the WELLDONE countdown time is up,

the grilling is completed and 6 sounds are heard. The whole machine enters standby mode after power on.

- 3) When the user selects beef, the buzzer will continuously sound a prompt sound every time the countdown to RARE, MEDIUM, and Medium Well reaches 0. (Except for the beef griddle, which has a prompt sound, there is no prompt sound for other intelligent modes such as rare, medium, and medium well. The rest only sound when the WELL DONE is fully cooked.)
- 4) After the food is grilled, the whole machine will sound an alarm, but it will not shut down, and the whole machine will automatically switch to the initial start up state.

Note:

1. For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.
2. Close up the plates when preheating. After the preheating is done, if you do not lift up the upper plate to put in food, the appliance in the intelligent mode will automatically turn off after a few minutes, but in manual mode, the appliance has no detection function so it will keep running for about two hours till the appliance turns off automatically.
3. When the food is cooked, use the handle to open the lid. Remove the food with a plastic heat-resistant spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cooking plates.
4. There is beep sound for "RARE" and "MEDIUM" "MEDIUM well" only when you use beef function. And for other functions, there only is beep sound for "WELL DONE".
5. Intelligent mode can only be entered when the lid is closed;
6. In intelligent mode, after preheating is completed, there will be a prompt sound to remind you to put in food. If no food is put in, it will prompt again after 5 minutes, and after waiting for another 2 minutes, it will prompt again. Then it will automatically shut down and the machine needs to be restarted by pressing the power button again.
7. The whole machine starts timing from pressing the power button and will automatically power off after 2 hours. To reuse, press the power button again and restart the whole machine.

CLEAN AND MAINTENANCE

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Before cleaning, disconnect the grill and let it cool down completely.

Note: The grill is still very hot. It will take quite a while to cool down.

2. Press down release button and take apart the roasting trays.
3. After disassembling the trays, wash the roasting trays in warm soapy water or in a dishwasher. Dry the roasting trays before replacing them on the grill.
4. Remove the drip trays with gloves, empty the drip tray into a heat-proof bowl, rinse them in warm soapy water or in the top rack of the dishwasher and then dry them thoroughly.

Note: before removing the drip box, make sure the temperature of oil or oil residues in the drip box must be lower than 40°C, otherwise it may burn person for high temperature.

5. Wipe other surfaces of the grill with a clean damp cloth. Use a paper towel moistening with a little cooking oil to remove the stubborn stain.

6. Reassemble the roasting trays into grill.

- Do not immerse the appliance into water or other liquid.
- Do not use harsh or abrasive cleanser or solvent.
- Never use scourers, wire wool or soap pads.

● **STORAGE**

1. Before storing the grill, make sure the grill is clean and dry thoroughly.
2. Close the grill. And rest it flatly.
3. Store the grill in a cool dry area out of the reach of children. The grill can not be rested vertically.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to
an appropriate waste disposal center.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body