 


Little Koi

ZOOYO Little Koi
ANC Wireless Earbuds

Shenzhen Zooyo Electronic Technology Co., Ltd
WWW.ZOOYO.CLUB

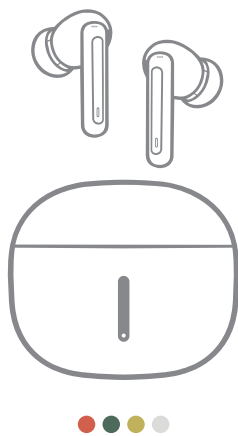

PACKAGE LIST



Wireless Earbud ×2
Charging Case ×1



Ear Tips ×3 (S/M/L)



Type-C Charging Cable ×1

 


User Manual ×1



Musician Poster

BLUETOOTH PAIRING



- First-time use**
Open the charging case, keep the earbuds in it, the earbuds will automatically enter pairing mode.



 
 
- Pair with your phone**
Enable Bluetooth on your phone, search for "ZOOYO-FC02", select it, and complete the pairing.

- Auto-reconnect (after initial pairing)**


When the earbuds are in the charging case, open the case, the earbuds will automatically reconnect to the last paired device.

IMPORTANT NOTES



- Before using the ZOOYO Little Koi wireless earbuds, please charge both the case and earbuds.
- We provide three pairs of rubber ear tips. Please choose the best fit for you.

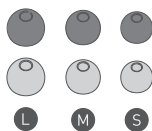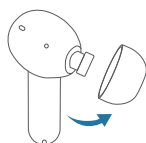

 - If both earbuds don't sync together, please reset the earbuds.



  - If the earbuds don't charge, please clean the charging slot on the case and the contact surface on the earbuds.



- If the sound becomes low without control, please clean the net inside the earbuds.

TOUCH CONTROL

 
- Play/Pause**
Tap twice (R)
- Answer a call**
Tap twice (L or R)
- End a call**
Tap twice (L or R)
- Wake up the voice assistant**
Tap twice (L)
- Answer a third-party call (during an active call)**
Tap twice (L or R)
- Previous track**
Tap 3 times (L)
- Next track**
Tap 3 times (R)
- Reject a call**
Press and hold for 3 seconds (L or R)
- Noise Cancelling/Ambient Sound/Normal**
Press and hold for 2 seconds (L or R)



- Wake up the voice assistant**
Tap twice (L)

- Next track**
Tap 3 times (R)

HOW TO RESET THE EARBUDS

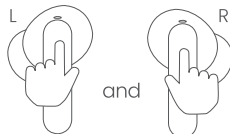


- When using both earbuds**
Press and hold BOTH earbuds for 5 seconds to clear all pairing records with previously connected devices.
- When the earbuds are unpaired (not connected as a pair)**
Press and hold BOTH unpaired earbuds for 5 seconds, to clear TWS pairing records and automatically re-pair them as a left-right pair.

CHARGING

- Power Display**

 
a. Close the case



Indicator light


Battery > 25%: The white light stays on for 10 seconds and then turns off.
Battery < 25%: The orange light flashes for 10 seconds and then turns off.

 b. Charging State




Charging: the orange light will turn on for 20 seconds and then turn off.
Fully charged: the white light will stay on.

 - Charging the Earbuds**



Place the earbuds into the charging case and close the case to start charging.

 - Charging the Case**



Charge it with the included Type-C cable.

 
FAQ

Q: Why does signal interruption occur in some places, such as along the railway and the airport?

A: There are usually lots of underground cable lines along the places mentioned above, which might cause electromagnetic interference and result in the signal interruption.

Q: My earbuds don't charge, what can I do?

A: Please try to follow the below steps:



1. Clean the charging slot on charging case.



2. Clean the charging connector on earbuds.

Q: Why won't my earbuds power on/off automatically?

A: The earbuds would not power on/off automatically when the case is at low battery or out of power. Please recharge the case.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.