

TouHeart

Assembly & Safety Instructions



Please keep this booklet in a safe place for the life of your AUTO SWING CHAIR.

Product Contents

Product Introduction	3
Product Specification	3
Product Features	3
Parts Instruction	4
Installation	4-7
Assemble Instructions	4-5
Install the base bracket	4-5
Assembling & Disassembling	5-6
For Pillow and Seat Pad	6
For Toy Bar with Toys	7
User Instruction	7-13
Button Description	7-8
Lighting instructions	8-9
Motion Lock	9
Seat disassembly	10
Charging port	10
Safety Belt Instruction	10-11
Remote Control	12
Power Supply	12-13
WARNING	14-16
Clean & Maintenance Instructions	16-17
Base Bracket and Seat Frame	16
Removable and Washable Fabric components	17

Maintenance	17
Troubleshooting	18
WARNING	19-20
After-sales Service	20-21

Product Introduction

● Product Specification:

Product Name:	Baby swing
Model Number:	S8031
Input Voltage:	100-240V
Output Voltage:	5V
Output Current:	1A
Frequency:	50/60HZ
Application:	Children up to a weight of 9kg .
Main Material:	100% polyester fiber, aviation aluminum base bracket

● Product Features:

1. Swinging from side to side, with five gears mimicking human movement.
2. Five different vibration frequencies for soothing massage.
3. Power supplied by safe 6V low voltage adapter.
4. One-button installation and disassembly, simple and convenient to use.
5. Seat cover made of environmental-friendly super soft fabric and nontextile, cozy, breathable and safe. Removable and machine washable.
6. Made of aluminum alloy base with light weight and strong hardness guaranteeing safety for baby.
7. Controlled by front panel or remote controller, easy to operate.
8. With motion lock and safety belt for protection.
9. With built-in soft nature sounds & Bluetooth enabled for music.

Parts Instruction

Make sure that all of the following parts listed are included in the box. If any part is missing, please contact us before operating. No tools are required for assembly.



- 1 Mosquito Net
- 2 ToyS
- 3 Crotch Harness Cover
- 4 Seat Pad
- 5 Touchscreen Control Panel

- 6 Seat Frame
- 7 Base Frame
- 8 Lock Button
- 9 Detach Button
- 10 Power Port

Installation

● Assemble Instructions

Install the base bracket


1. Insert the left and right tubes into the base bracket. Ensure that the foot tube is aligned with the screw hole on the bottom of the main engine.
2. Fix 4 screws into the foot tube.




Warning

Always supervise your child. Do not allow children to play with or handle accessories to prevent injury or swallowing hazards.


● **Assembling & Disassembling**

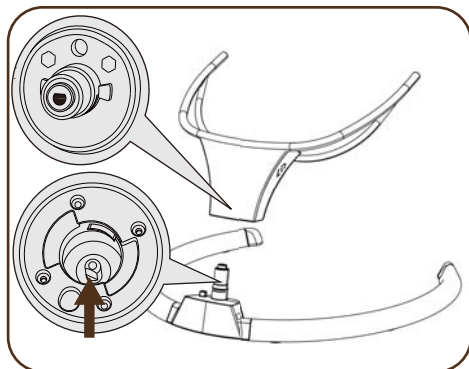


1. Install the seat frame. (Note: If one end cannot be fitted, reverse the direction and push hard)

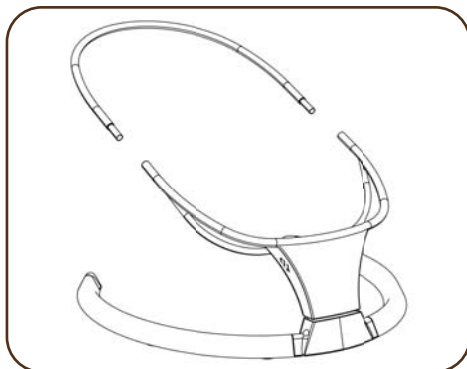

2. Assembling: Put the frame in the base with "U" shape components aligned.

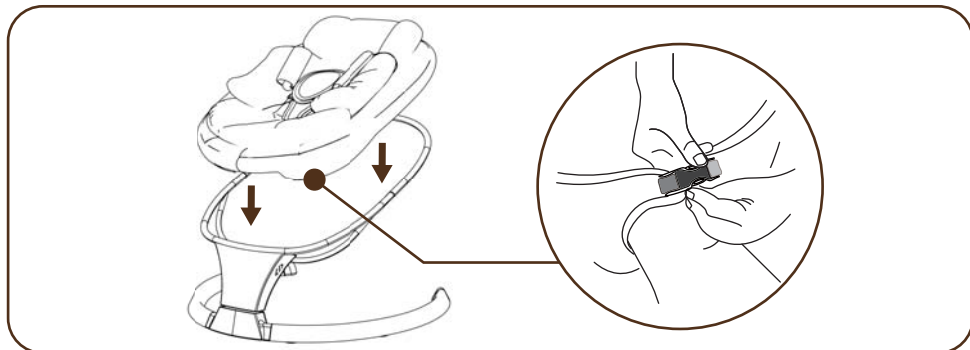

3. Wrap the seat cushion around the seat frame and secure the lock.

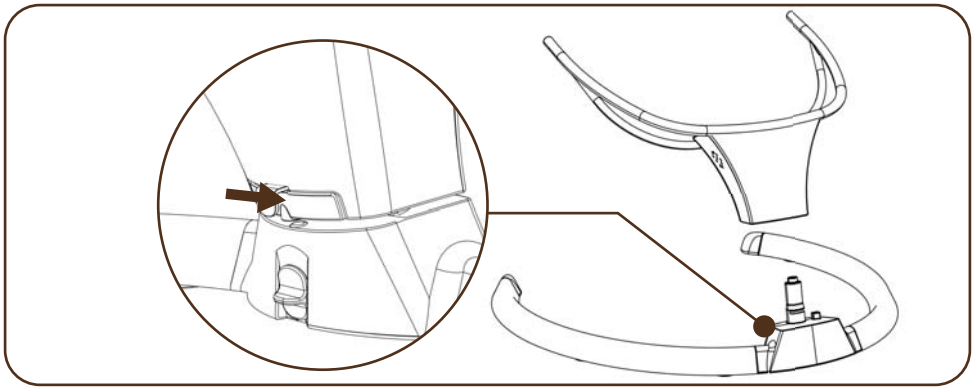

4. Disassembling: Press the button inward.

● For Pillow and Seat Pad

Installation:

Place the seat pad onto the seat frame.



Pull the five-point seat belt across the pad and fasten the buckle.

Attach the pillow to the top retaining ring of the seat frame and secure it with the Velcro.


Removal:

Detach the pillow by opening the Velcro.


Unfasten the five-point buckle by pressing the center button.

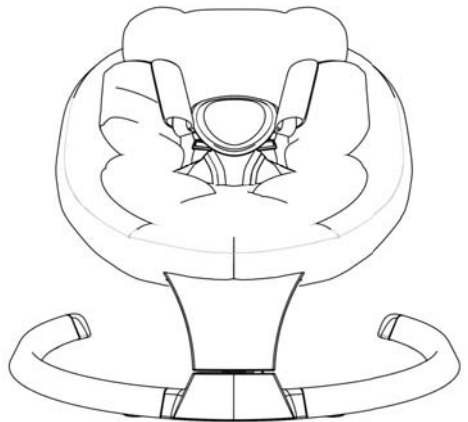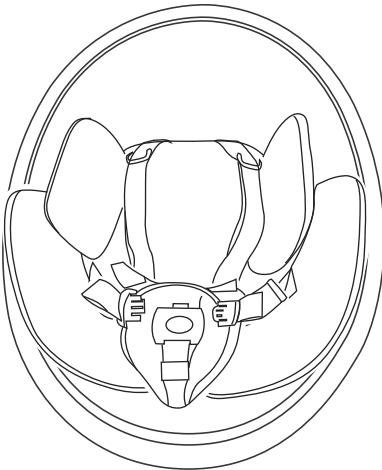

● For Toy Bar with Toys

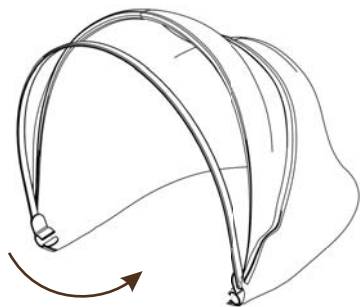

Please clamp the brackets on both sides when installing the mosquito net.

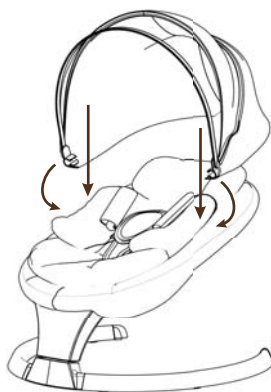

Attach the toys on canopy and fasten the clasps to the pipe of the seat frame.

User Instruction

● Button Description



On/Off/Swing Control:

Connect the power adapter and tap this icon to start program.

Tap the icon repeatedly to cycle through the five swing speeds. The number shown on the display corresponds to the current speed level (1–5).

Press and hold the icon for more than two seconds to turn off all functions.



Vibration:

Click this icon to cycle through the five vibration levels. The selected level (1–5) will be shown on the display.



TIMER:

Touch the button to set the time. The first touch will have the swing chair swing for 8 minutes. The second touch will have it swing for 15 minutes, and the third will have it swing for 30 minutes.



MUSIC: Touch the button to play the built-in music.

Click the next song.

Bluetooth music: After connecting, you can play music on your phone.

Click on the screen to switch to the next song.

Long Press: Play/Pause.

- * Turn on the bluetooth on smart phone and connect with "TTbaby".


The swing beeps, and then bluetooth is now connected well. Then the music from cellphone plays.

- * Music priority: Bluetooth > Built-in music.




VOLUME+/-: Click: Volume Up (Three Gear Loop).


● Lighting instructions

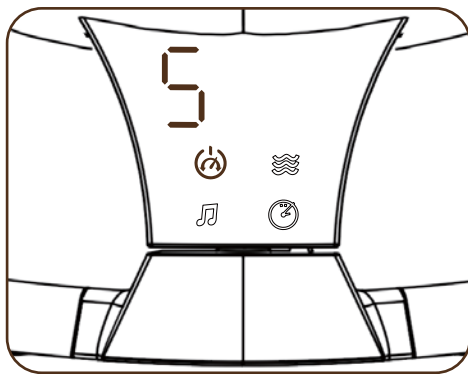


There are a total of 5 swing modes

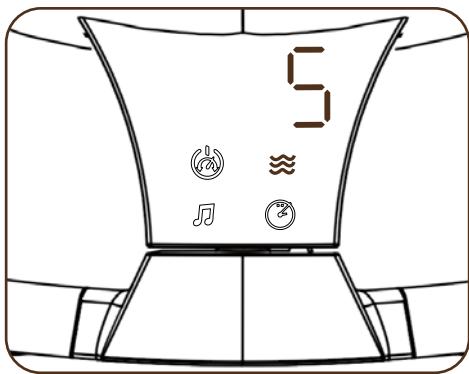

There are a total of 5 vibration modes

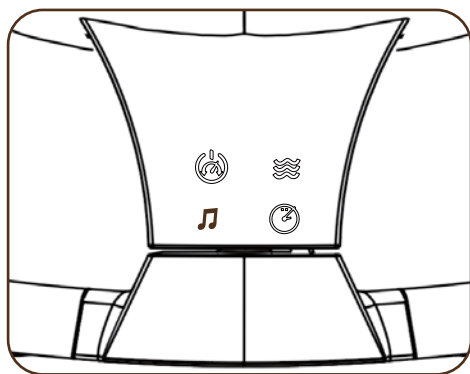

Touch to switch music and
hold down to stop

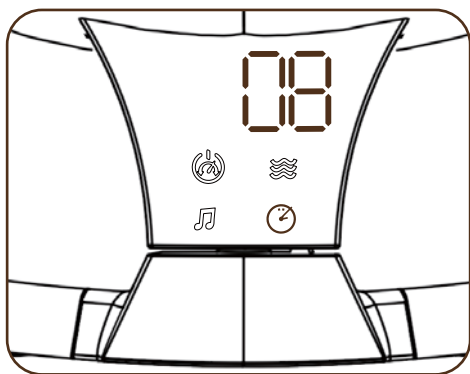


It can be set to 3 Settings: 8 min,
15 min and 30 min.

● Motion Lock


To secure the seat in place, slide the lock downward to the "Lock" position. To release the seat, slide it upward to the "Unlock" position.

Note: The motion lock should only be used when the automatic swing mechanism is turned off.

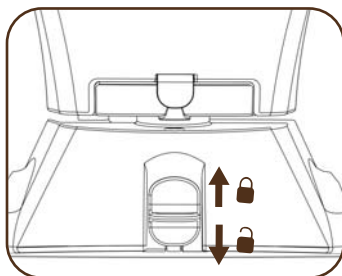


● Seat disassembly

To detach the seat frame from the base, pull the detach button then pull out the seat frame.

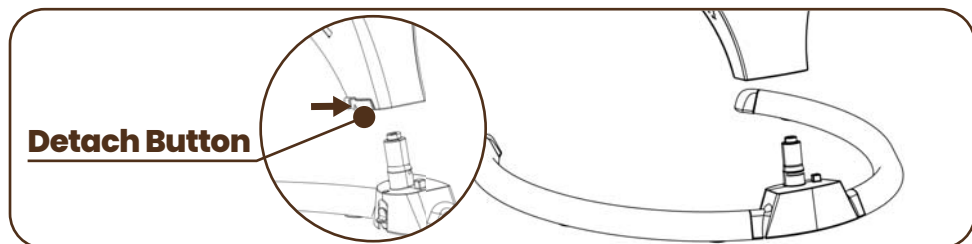

● Charging port

Just plug in the charging cable and it will start charging

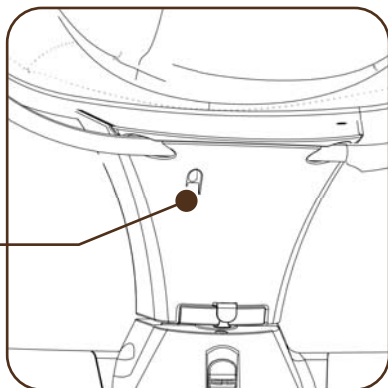


● Safety Belt Instruction

Placing Your Baby in the Swing:

- 1.Place your baby into the swing seat.
- 2.Gently guide their arms through the shoulder straps and their legs around both sides of the crotch support.
- 3.Fasten the five-point buckle until it clicks securely.
- 4.Flip up the crotch support cover and attach the Velcro to secure it.


Removing Your Baby from the Swing:

Press the center button of the five-point buckle to release the straps, and gently lift your baby out.

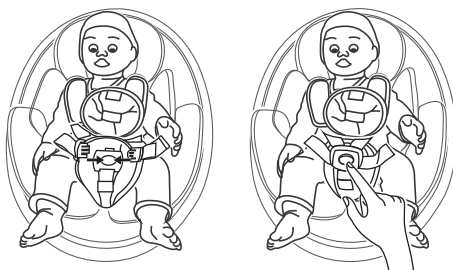

Important Safety Note:

Always secure your child using the safety harness whenever they are in the swing. Adjust the straps to a snug and proper fit to ensure your baby's safety.


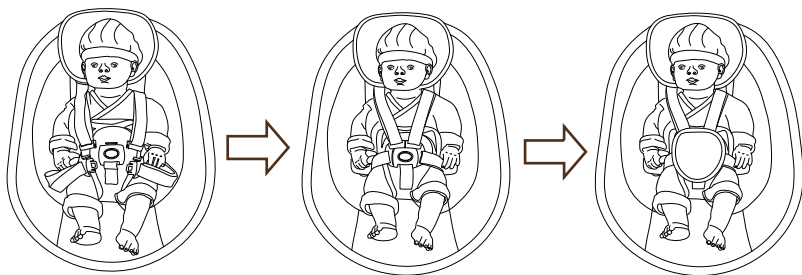


Thread the harness belt through the top hole first, then through the bottom hole. Fasten the buckle securely until you hear a click. Adjust the straps to ensure a snug and comfortable fit.




● Remote Control

To avoid using problems with the remote control, please aim it at the touch panel of the baby swing chair, and the best effective distance within 16.4 feet.

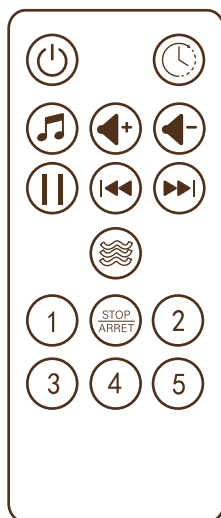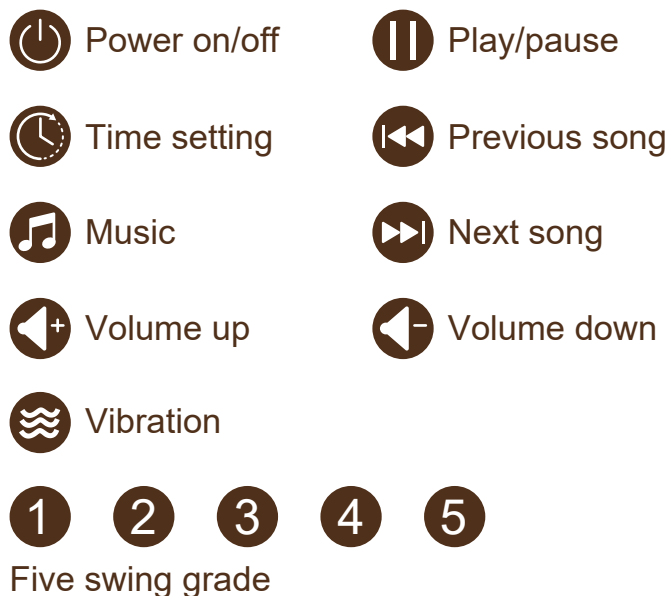

● Power Supply

1. DC plug can be inserted into 100-240V 50/60Hz AC power supply.
2. Adapter output parameters: voltage is 5V and current is 1000mA.

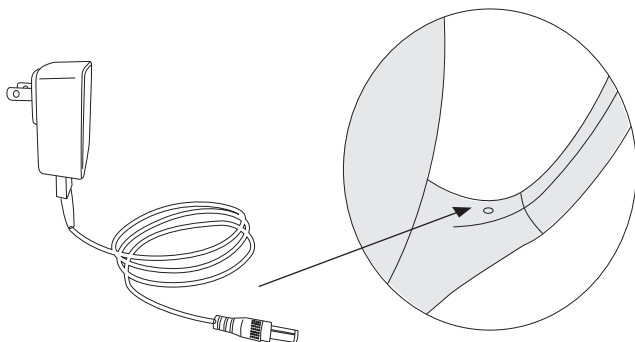

Warning

- The power terminals must not be short-circuited
- Do not use adapters other than those supplied with this product to power the product.
- Keep children away from working adapter.
- Check the adapter cable connection regularly.
- Overheating or fire keep the swing away from heat sources such as radiators stoves or other heat-producing appliances. Do not use extension cords with the AC adaptor. Do not use the swing near water (i.e.: bathtub sink, or laundry tub etc.) The product must only be used with the included AC adaptor. The AC adaptor is not a toy. Disconnect the AC adaptor from the swing before cleaning.



WARNING

- FALL and STRANGULATION HAZARDS:** Infants have suffered head injuries falling from swings and have strangled in straps.
- ALWAYS** use restraints. Adjust to fit snugly.
- STOP** using product when infant attempts to climb out (approximately 9 months)
- Stay** near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.
- ALWAYS** place swing on floor. Never use on any elevated surface.
- SUFFOCATION HAZARD:** Young infants have limited head and neck control. If the seat is too upright infant's head can drop forward and compress the airway.
- ALWAYS** keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.
- Never** leave the child unattended.
- Do** not use this product once your child can sit up unaided or weighs more than 9kg (20 lbs).
- Do** not move or lift this product with the baby inside it.
- When** the product is connected to a music player, ensure that the volume of the music player is set to a low value.
- To** avoid injury ensure that children are kept away when unfolding and folding this product.

- Do** not let children play with this product.
- Transformers** used with the infant swing are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used.
- The** infant swing shall only be used with the recommended transformer.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and the receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

-Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

The device can be used in portable exposure condition without restriction.



Clean & Maintenance Instructions

● Base Bracket and Seat Frame:

Clean with a damp cloth and mild detergent. Allow to dry thoroughly. Do not use corrosive or abrasive cleaners.

● Removable and Washable Fabric Components:

Seat Fabric:

Wipe with a damp cloth and mild detergent, then air dry completely.

Pillow:

Detach by opening the Velcro fasteners. Hand wash gently using a small amount of mild cleaner, then rinse thoroughly with clean water. Hang to dry away from direct sunlight.

Seat Pad:

Unbuckle the safety belt to remove the pad. Machine wash as instructed. Air dry or tumble dry on low heat.

● Maintenance

- 1.Regularly inspect the baby swing to ensure all parts are securely connected and properly installed. If any components are loose or improperly fitted, discontinue use immediately and reattach or reinstall as needed.
- 2.This product contains electronic components and must not be used in water or humid conditions. Always ensure the product is completely dry before use, and store it in a cool, dry place away from prolonged direct sunlight.
- 3.To extend the product's lifespan, unplug the power adapter when the swing is not in use for extended periods.

Troubleshooting

Fast self-inspection solution below.

NO.	Issue	Solution
1	Not energized	1. Check that the adapter and DC cable are firmly connected. If loose, reconnect them securely. 2. If the DC cable appears damaged, please contact customer service for a replacement.
2	The power indicator light is flashing, indicating a high voltage alarm.	Please use the provided compatible power adapter with an output of 6V, 1A.
3	Motion lock stuck	Check the motion lock. Pull it up to unlock the seat frame.
4	Overstring/Strike	Power off and restart it again

Note: For any other issues, please contact our customer service for assistance.

Do not attempt to disassemble or repair the swing yourself.



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **internal Chemical Burns** in as little as **2 hours**.
- **Seek immediate medical attention** if a battery is swallowed or inserted into any part of the body.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- This product contains a CR2025 ,DC 3V coin battery. A coin battery can cause serious internal chemical burns if swallowed.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 132°F(60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).

- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

After-sales Service

Thank you for purchasing our product. If you encounter any quality issues, please contact our customer service.

Note:

1. From the date of purchase, regular users are entitled to one year of free maintenance for circuit board components and one year of free maintenance for the entire machine.
2. Other consumables and accessories are not covered by the warranty.

Non-warranty Coverage:

1. Damage resulting from improper use.
2. Damage caused by natural disasters or other force majeure events.

Test Requested	Result
ASTM F2088-24	PASS
CPSC 16 CFR Part 1223	PASS
ASTM F963-23	PASS
For compliance with the test requirement of ASTM F963-23 Standard Consumer Safety Specification on Toy Safety.	PASS
ASTM F963-23 Standard Consumer Safety Specification for Toy Safety	PASS
For compliance with test requirement of the Physical & Mechanical, Flammability testrequirement of Title 16, Code of Federal Regulations, Chapter II – Consumer Products SafetyCommission of U.S.A (Except chargers & tools and controllers)	PASS
Physical and mechanical tests consisting US CPSC 16 CFR 1500.48, US CPSC 16 CFR 1500.49 and US CPSC 16 CFR 1501:	PASS



MADE IN CHINA

THANK YOU!

For purchasing from us

Thank you for your purchase. If for any reason your order is missing any items, is incorrect, or does not meet your expectations, please contact us first at:

touheartcare@outlook.com

We guarantee to respond and begin resolving your issue within 24 hours.

To help us serve you better, please provide the following information when contacting us:

Platform where you made the purchase.

Your order number.

Despite our reinforced packaging, shipping mishandling can occasionally occur. In the rare event that your product arrives damaged, we are here to help. If your product arrives in perfect condition, you may disregard this message.

If you discover any damage upon receiving your package, please immediately notify our after-sales team.

To help us process your claim quickly, we kindly ask that you provide the following photos to assist in filing a claim with the shipping carrier:

Complete Shipping Label: A clear image of the entire shipping label on the package, including all text and barcodes.

Exterior Packaging Damage: A full view showing any damage to the outer box or packaging.

Interior Product Damage: Close-up photos clearly showing the damaged areas of the product.

Your cooperation is essential and greatly appreciated. We are committed to resolving any issues promptly—your satisfaction is our top priority.

Thank you for your understanding and support.

Best regards,

TouHeart Customer Support Team

Mail: **touheartcare@outlook.com**



TouHeart Customer Support Team
Mail: touheartcare@outlook.com