

BABY SWING



Manufacturer: DONGGUAN SENLING TECHNOLOGY CO LTD

Address: ROOM 301, BUILDING NO. 4, HUANGYONG AVENUE, ZHONGTANG TOWN, DONGGUAN CITY, GUANGDONG PROVINCE
MADE IN CHINA Rev1.1 EN

M. del: 8039

userManual

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT! READ ALL INSTRUCTIONS BEFORE USE
AND KEEP FOR FUTURE REFERENCE,

⚠ WARNING

FALL and STRANGULATION HAZARDS: Infants have suffered head injuries falling from swings and have strangled in straps.

- ALWAYS Use restraints. Adjust to fit snugly.
- STOP Using product when infants attempt to climb out (approximately 9 months).
- stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

⚠ WARNING

- Adult assembly required. Keep unassembled parts out of reach of children.
- NEVER leave the baby unattended.
- DO NOT move or lift this product with the baby inside it.




Always use the restraint system provided.

- NEVER Use on a bed, sofa, cushion, or other soft surface.
- NOT intended for prolonged periods of sleeping.
- DO NOT Use if any parts are broken, torn or missing.
- DO NOT Use accessories or replacement parts other than those approved by the manufacturer.
- DO NOT place near water and moisture. DO NOT Use near possible wet areas, such as a bathtub, shower, washbasin, sink, laundry tub, swimming pool, wet basement, etc.
- DO NOT Use the power adapter if it has been exposed to liquids, has been dropped, or is damaged.
- DO NOT immerse the power adapter or base in water or other liquid or allow moisture to come into contact with these parts.
- DO NOT Use with an extension cord.
- NEVER Use the canopy to carry the product.
- NEVER Use as a car seat.
- strings can cause strangulation. DO NOT place items with a string around a child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over the product or attach strings to toys.
- cable can cause strangulation. keep power adapter cable away from baby.
- use only the power adapter provided by the manufacturer.
- keep all packaging material away from babies and children to prevent suffocation.

Applicable Age	0-9 months	power Adapter	Input: 100-240v~50/60Hz
Max weight	20lbs /9 kg		output: 5v1A

EXPLORING BABY CARRIER


In the Box

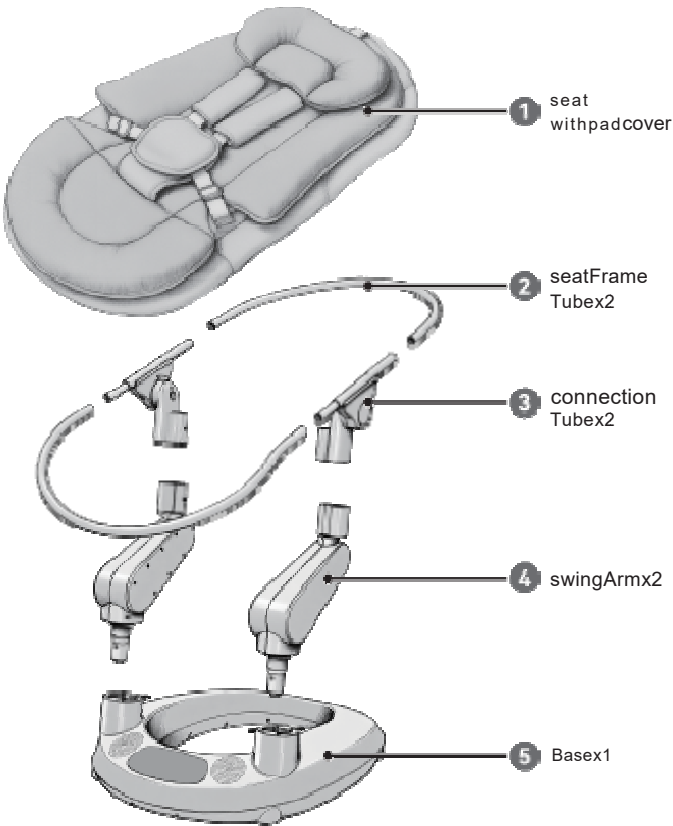

check if all parts and accessories are included.
contact us via email: support@cozibb.com if
there is any part missing or damaged.



 6 canopy with Mosquito Net x1

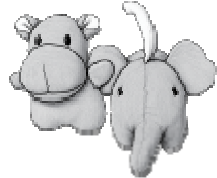


7 T. yx2



8 Remote C. ntrl x1





 
9 power Adapter x1

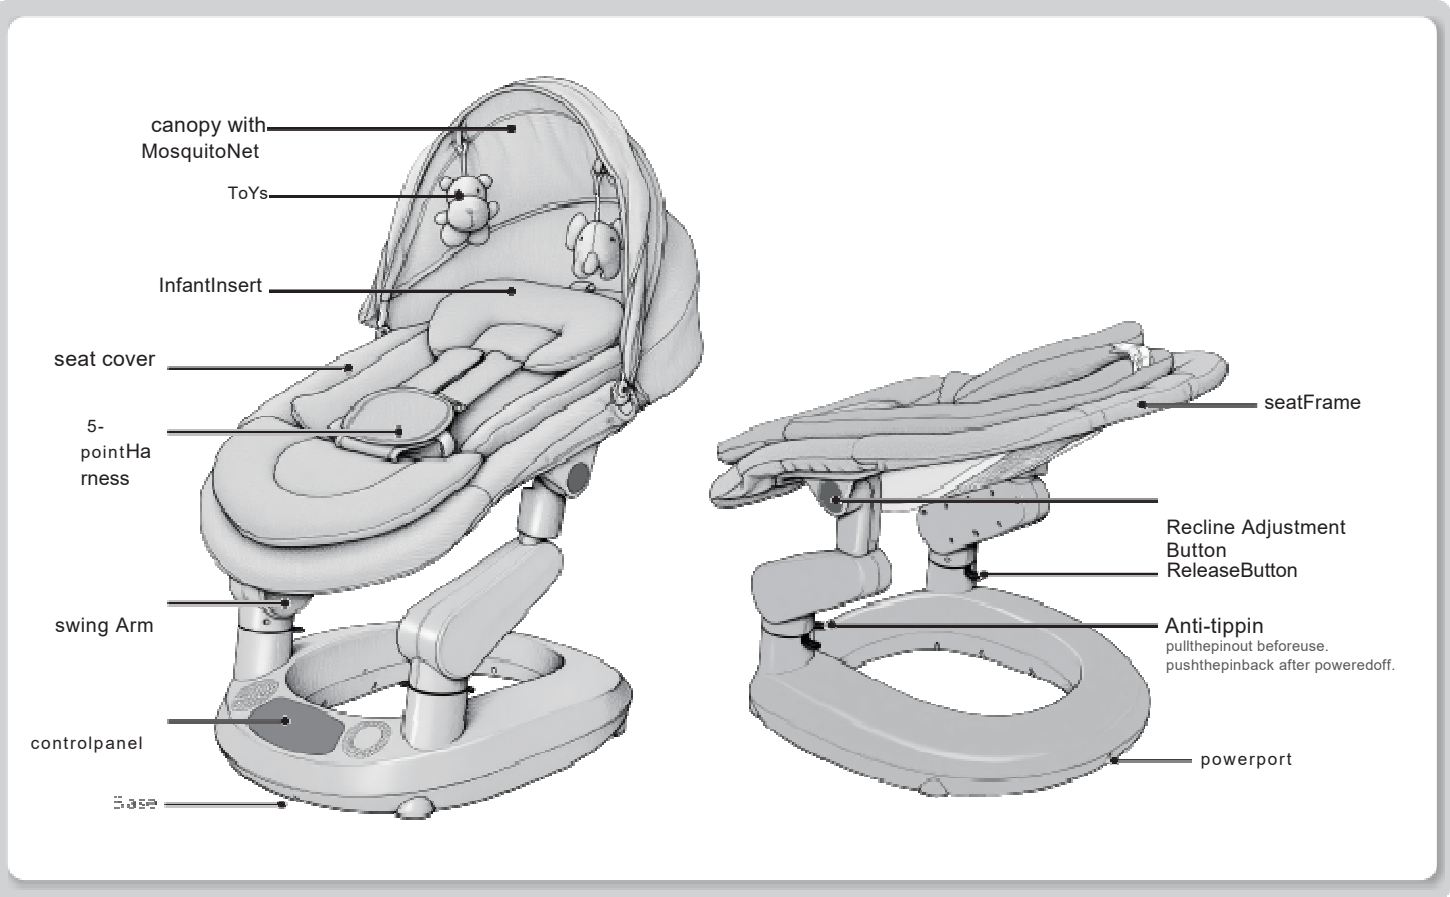

ASSEMBLINGBABY SWING

   
 -Adultassemblyrequired. keepunassembledpartsofreachofchildren..Always ensure that the seat is**locked**securely onto thebasebeforeuse.

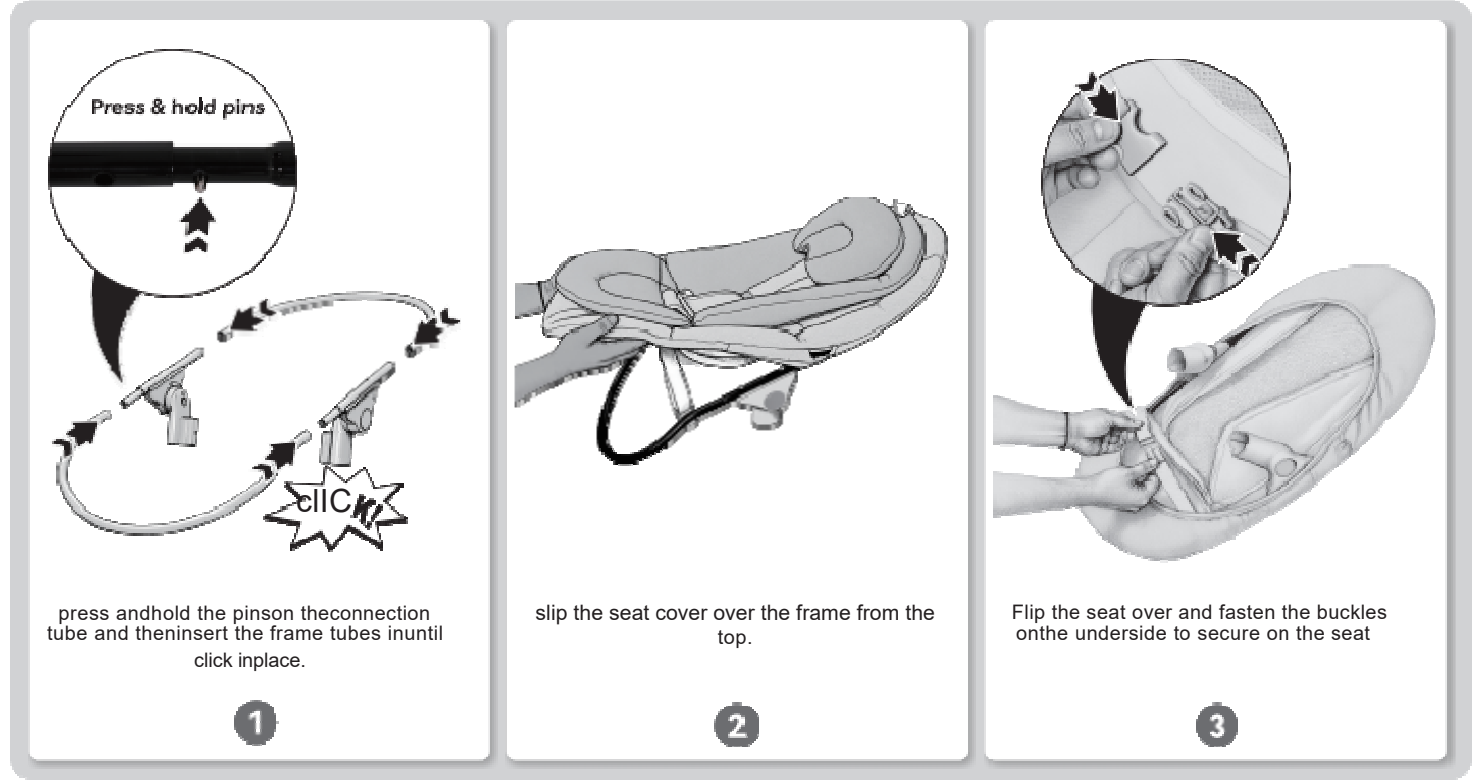

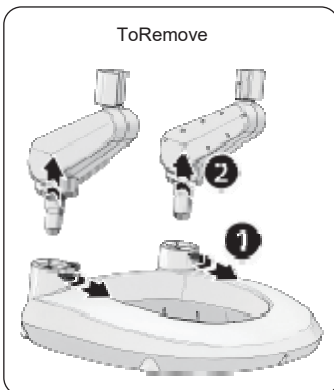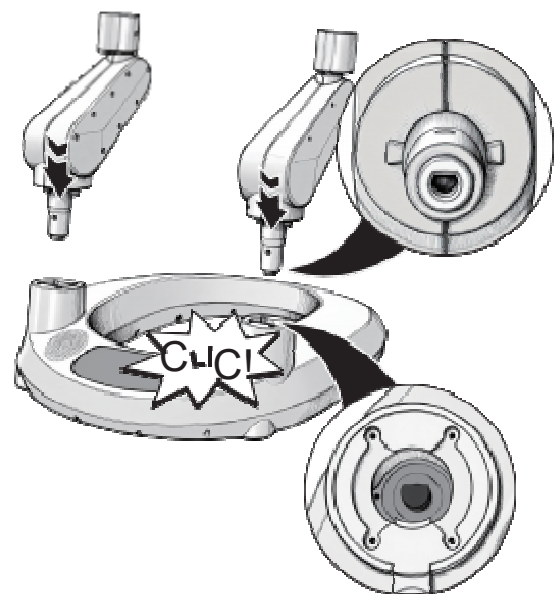

Align and slide the swingarms onto the support posts of the base. The D-shaped anchor shall fit into the D-shaped port in the support posts. To remove, pull the release buttons and then pull both rocker arms out at the same time.

 4

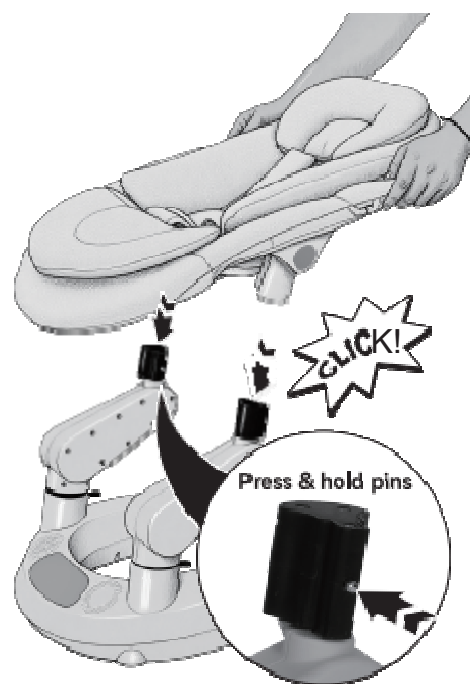

press and hold the pin on the connection tube and then insert the frame tubes in until click in place.

5




Align and clip the canopy with mosquito net onto the exposed frame on both sides.

6



Attach the toys to the loops on the canopy and secure by pressing the hooks and loops together.

7

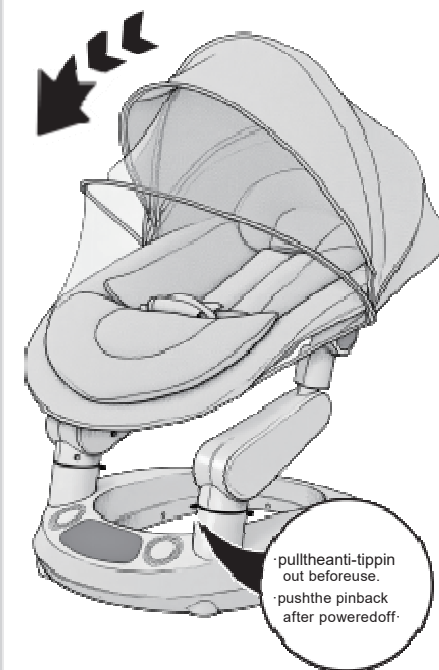

Touse the mosquito net, simply deploy it from the top of the canopy. pull the anti-tip pin out before use. push the pin back after powered off.

8

USINGBABYSWING

securingBaby in swing

 **WARNING** Always use the restraint system properly. Adjust the fit according to the instructions.




1

Flip the fabric crotch pad up and press the center buckle to release all the straps.



2

position the baby in the seat and fasten the harness. Gently tug to confirm the harness is securely fastened then flip the pad down.

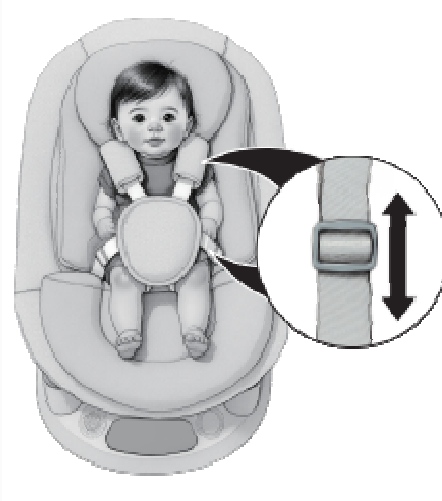

3

Lengthen or shorten the straps by pulling on the strap adjusters. All straps should be snug, but not too tight so that the child is secure and comfortable.


Adjusting Backrest



Reclined position
0-6 months




seated position
5-9 months

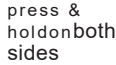

press & hold on both sides


Reclined / seated position

controlling swing

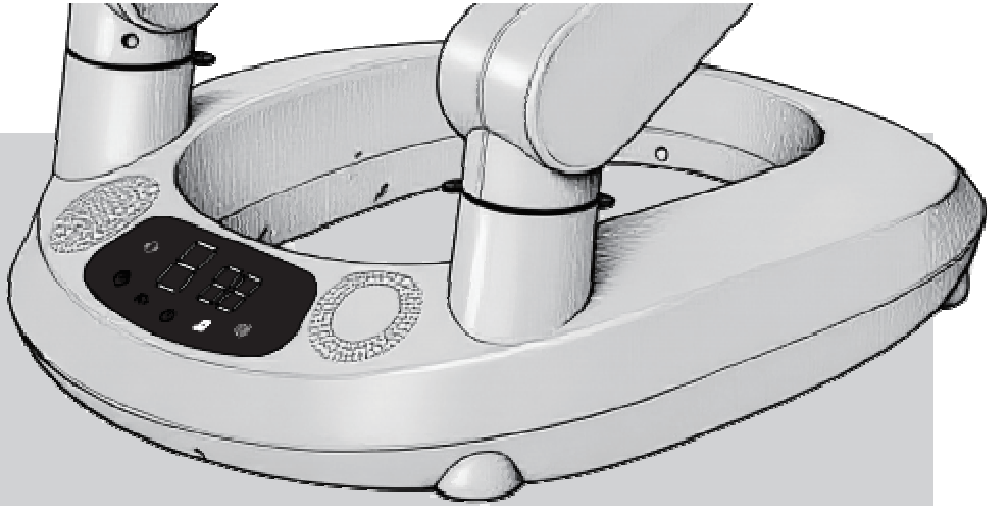

-  **ON / OFF**
Tap to turn the swing on or off.
-  **Motion Detection**
With swing on, tap to activate motion detection mode. The swing will automatically start a 3min swing cycle (at level 3) upon detecting your baby's movement. This cycle will repeat until you turn the mode or
-  **Timer**
With swing on, tap to set the swing time: 8, 15 or 30 minutes.
-  **swing**
With swing on, tap to adjust the swing motion speed (5 levels of speed): 1 - 2 - 3 - 4 - 5.
-  **Music**
 - With swing on, tap to play the built-in music. Tap twice to pause.
 - Tap and hold to switch to Bluetooth music. Turn on Bluetooth on your smart device and connect to "Cz-Kko1". Bluetooth music will always take priority over built-in music.
-  **volume + / -**
With music on, tap to raise or lower volume.

 
connecting to power supply

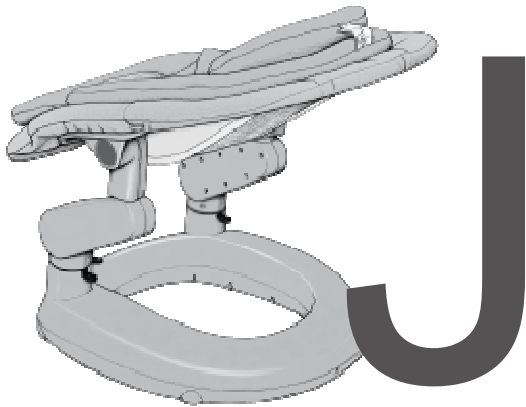

- 1 plug into 100-240V-50/60Hz AC Power supply
- 2 Power adapter output: 5V = 1A

using with Remote control

  Remove the plastic tab underneath battery before use.
For added convenience, the buttons are functioned the same as the control panel.

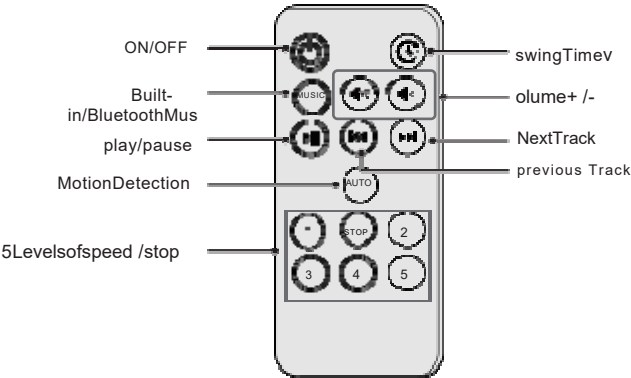

 WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- As swallowed button cell or coin battery can cause internal chemical burns in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH** OF CHILDREN.
- **seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

 


ReplacingBattery



·Replacewithnewbatteryofthesametype (CR2025, 3v) whennecessary·

·whennotusingtheremotecontrolforanextendedperiodoftime, takeoutthebattery.

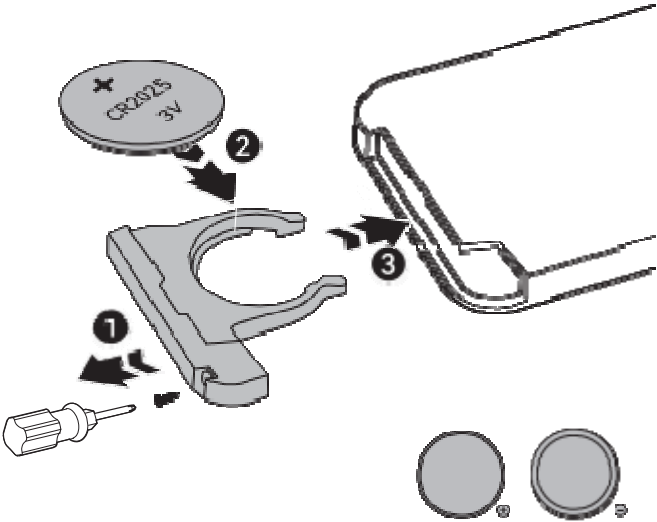

1

Loosenthefixingscrewandthenholdtopullthebattery compartment cover out.

2

Replace the batterywith the same type,making sure the(+)
sidefacingup.

3

pushin the cover back untilsecurely lockedintoplace.

Batterysafety

·Remove andimmediately recycle or dispose of
usedbatteriesaccording tolocalregulations andkeep away
fromchildren.DONOT dispose of batteries inhousehold trash or
incinerate.

·Evenusedbatteriesmay cause severe injury or death.

·callalocalpoison controlcenter for treatment information.

·useorreplacewithnewbatteryofthesametype (CR2025, 3v).·Non-
rechargeable batteries are nottobe recharged.

·DONOTforcedischarge,recharge, disassemble,heatabove140°F/60°C
orincinerate.Doingsomayresultinjuryduetoventing,leakage or
explosionresultinginchemicalburns.

·Ensure the batteries are installed correctly according topolarity(+
and-).

·DONOT mix old andnew batteries, different brandsor types
ofbatteries, such as alkaline, carbon-zinc,or rechargeablebatteries.

·Remove andimmediately recycle or dispose of batteries from
equipmentnotusedforanextendedperiodoftimeaccordingto
localregulations.

·Alwayscompletelysecurethebatterycompartment.Ifthebattery
compartment doesnot close securely, stopusing theproduct,
remove the batteries, andkeep themaway from children.

CAREINSTRUCTIONS



·IMPORTANT:Before eachuse,check the swingandits components tomake sure they are in goodconditionand workingorder..we
recommend spot cleaning the seat cover as needed witha soft clothand coolwater.

·Donot use chlorine bleachor fabric softener.

·Avoidprolonged exposure to direct sunlight as this may cause materials andfabric to fade.

·whennot inuse,push the anti-pinback inplace and store the baby swingaway from direct sunlight.

Base&Frame

·Turn the swing off andunplug from the electricaloutlet.

·wipewithasoft, slightlymoistclothtoremoveanydirtordust.Donot immerse
in water allowwater to come in contact with these parts.

 
seatFabric&ToYs

Refer to the care labelattached for washingand
dryinginstructions.·Machine washcold,gentle cycle

·Hang
todry.Donot
bleach

·Donot tumble
dry.Donotiron

·Donotdryclean

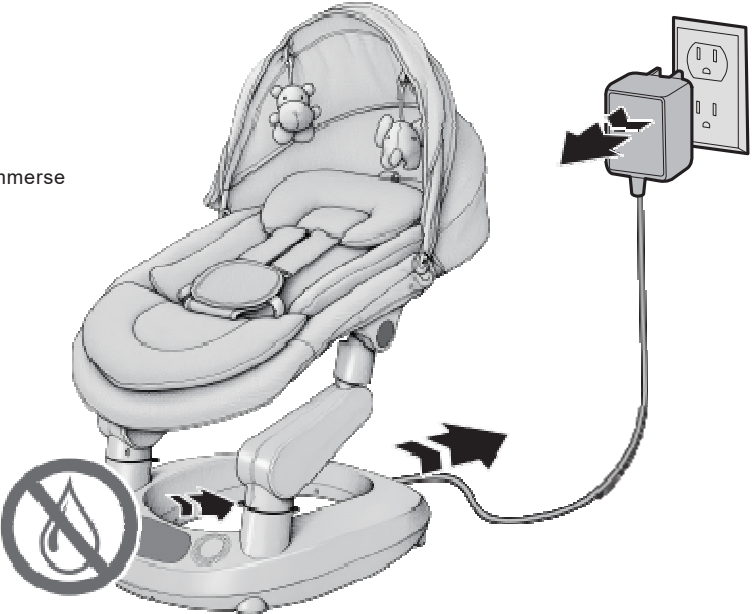

1213

FCC COMPLIANCE

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

The antenna used with this transmitter must be installed to provide a minimum separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.