



User Manual

SGG-06

This guide will help you get started with your T1 (SGG-06) device.

Contents

Getting Started.....	1
Phone Features.....	2
Charging the Battery.....	4
Inserting Nano SIM and Micro SD Card.....	5
Turning the Phone ON/OFF.....	9
Using On-Screen Gestures.....	9
Locking and Unlocking the Phone.....	11
Calls and Messages.....	12
Setting Up Email	13
Camera.....	14
Connecting to Wi-Fi.....	16
Google Play.....	16
Installing the Apps.....	17
Uninstalling the Apps.....	18
Improving Accessibility.....	19
FCC Regulations.....	20
FCC SAR.....	22

 
Getting Started

T1 (SGG-06)

Device Components:

Your device includes features like a Touch Screen, Front and Rear Cameras, Flash, Volume Keys, Power Key, Fingerprint sensor, Microphone, Speaker, USB Type-C/Charging Port, SIM Slot, Wireless Charging, and NFC (Near Field Communication).

Phone Features

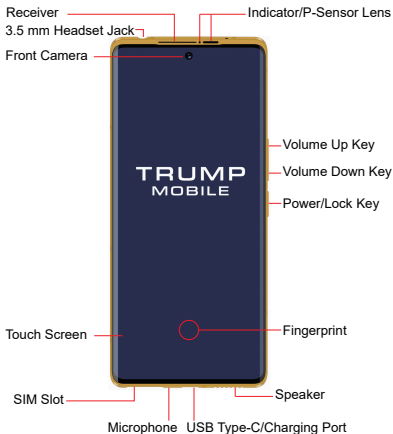



Charging the Battery

 
Fully charge the battery (100%) before use.

1. Insert the USB Type-C charging cable into the device and the adapter.
2. Plug the charger into an easily accessible electrical outlet.


Warning: Only use approved chargers, incompatible chargers may damage the device and void the warranty.

Inserting Nano SIM and Micro SD Card


1. With the phone facing up, insert the tip of the included card holder eject tool (or a straightened small paperclip) into the card holder eject hole. Once the card holder is ejected, carefully pull it out.

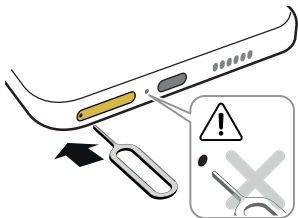

 
2. Place the primary Nano SIM card into the holder with the metal contacts facing up. Be sure to align the cut corners of the SIM card with the grooves in the holder. When the Nano SIM is properly inserted, a small rubber tab will press against the card to secure it.

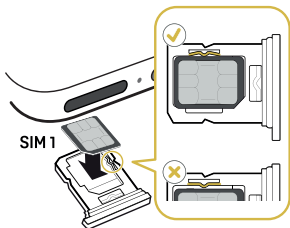

 3. Flip the holder over to insert a second Nano SIM card or Micro SD card, with the metal contacts facing up. When the Nano SIM or Micro SD card is inserted correctly, a small rubber tab will press against the card to secure it.

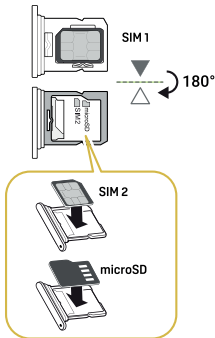

 4. With the mount facing up, insert it back into the phone's SIM card slot. Make sure the slot cover does not protrude from the side of the phone.

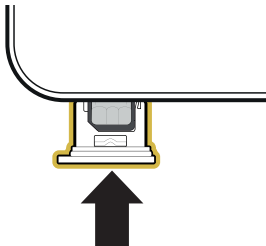

Turning the Phone ON/OFF

ON: Press and hold the **Power/Lock Key**.

OFF: Simultaneously press and hold the **Power** and **Volume Up Key**, then follow the prompts and select **Power Off**.

Using On-screen Gestures

These gestures help you navigate.

1. **Tap:** Used to open an app, select a menu item, press an on-screen button, or enter a character.
2. **Touch and Hold:** Touch and hold an item or the screen for more than 2 seconds to access available options.
3. **Drag:** Touch and hold an item and move it to a target position.

4. **Double-Tap:** Double-tap on a web page or image to zoom in, and double-tap again to return to the previous view.

5. **Swipe:**

- Swipe left or right to scroll sideways.
- Swipe upwards or downwards to scroll through a web page or a list.

6. **Spread and Pinch:**

- Pinch open on a web page, map, or image to zoom in.
- Pinch the screen to zoom out.

Locking and Unlocking the Phone

Locking the Screen: Press the **Power/Lock Key** to prevent accidental key presses.

Unlocking the Screen: Press the **Power/Lock Key** and then swipe up on the screen.

NOTE: You can also set other screen lock methods. Open the application list, select Settings → Security & Privacy → Set Screen Lock, choose the screen lock method and complete the setting.



Calls and Messages

Making a Call:

1. From the Home screen, tap the Phone icon , then tap the Dial Pad icon .
2. Enter the number or the first letter of the contact's name and select the contact.
3. Tap the Call icon  to place the call.

Receiving a Call:

1. Swipe to answer an incoming call.

Sending a Text Message:

1. From the Home screen, tap the Messages icon , then tap the New Message icon  to compose a new message.
2. Enter the recipient's name or number in the To field.
3. Enter the text message.
4. To add an attachment, tap the add icon .
5. Tap the Send icon  or  to send your message.

Setting Up Email

1. Tap the **Home key** > swipe up for **Apps** > **Settings** > **Passwords, passkeys & accounts** > **Add account**.
2. Tap the type of account you want to add.
3. Enter your email address and password.
4. Follow the on-screen instructions to finish setting up the account.

Camera: Photos and Videos

Taking Photos:

1. From the Home screen, tap the Camera icon .
2. Aim the camera at the subject.
3. Pinch the screen to zoom out or pinch open to zoom in.
4. Before taking a photo you can tap on the screen icons to access various camera options and settings, if required.
5. Tap the Capture button  to take a photo.

NOTE: You can also use the volume keys to take a photo.

Recording Videos

1. From the Home screen, tap the Camera icon .
2. Tap **Video** on the screen to switch to video mode.
3. Aim the camera at the subject.
4. Pinch the screen to zoom out or pinch open to zoom in.
5. Tap the Record button  to start recording a video.

Connecting to Wi-Fi

1. Tap **Home key** > swipe up for **Apps** > **Settings** > **Network & internet** > **Internet**.
2. Make sure the **Wi-Fi** is turned **ON**.
3. Select a network shown, enter its password, and select **Connect**.
4. If your network is not listed, tap + **Add Network**, enter the network **SSID** and other information, and tap **Save**.

Google Play

This is where you can find and download your favorite apps, movies, music, and more.

Google Play and Android are trademarks of Google LLC.

Installing the Apps

Your device comes pre-installed with several applications, and you can download many more on Google Play.

NOTE: The Google Play is an application that comes preinstalled on Android™ devices.

To install applications on Google Play:

1. Search or browse for applications.
2. Select the desired app, download, and install.
3. Follow the on-screen instructions to complete the installation.
4. You can also update and manage your downloaded apps.

Uninstalling the Apps

1. Touch and hold the app icon you wish to remove.
2. Tap **App info**, then select **Uninstall** and follow the prompts.
3. Tap **OK** to confirm.

NOTE: Some pre-installed apps cannot be uninstalled.

Improving Accessibility

These options are special features to make the device easier for people with physical disabilities.

1. Tap **Home key** > swipe up for **Apps** > **Settings** > **Accessibility**.
2. Tap a category and set the options you need.

NOTE: Images, icons and colors in this manual are for reference only.

FCC Regulations

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: Operation of transmitters in the 5.925-7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems.

FCC RF Exposure Information (SAR)

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage near the body. Although the SAR is determined at the highest certified power level, the actual SAR level of the while operating can be well below the maximum value.

The exposure standard for wireless employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines.

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

Head 0mm: 1g 1.19W/kg

Body worn 10mm: 1g 1.19W/kg

Hotspot 10mm: 1g 0.79W/kg

Product specific 0mm: 10g 2.82W/kg

There are two ways to view the FCC ID on the phone:

Method 1: Select Settings > About phone >

Certification.

Method 2: Open Settings and type **Certification** into the search bar.

Trade Mark: T1

Model Name: SGG-06



FCC ID: 2BSZG-SGG06SM8661

WARRANTY CARD

Model Name:

Model Code:

S/N:

IMEI No./MEID NO.:

Date Of Purchase:

Dealer's Name:

Dealer's Address:

Customer Name:
