

STARBEDIA

WIRELESS CONTROLLER HEATED BLANKET

- User Manual -

WARNING

**IMPORTANT INSTRUCTION
DO NOT DESTROY**

INTRODUCTION

Thank you for purchasing the heated blanket . Please read this user manual carefully and keep it in a safe place for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

INCLUDED

1x Heated Blanket

1x Wireless Controller

1x User manual

(Note: Please check first to make sure the product is complete without any damage. If you have anydoubt, please do not use and contact us.)

Product Specifications

Model	TH-2473U&8490	TH-2473U&90100
Name	Heated Blanket	Heated Blanket
Input voltage	120V AC / 60Hz	120V AC / 60Hz
Heat settings:	01-02-03-04-05-06	01-02-03-04-05-06
Rated power	100W per side	130W per side
Time setting	2H-4H-6H-8H-10H	2H-4H-6H-8H-10H
Materials	Polyester	Polyester
Product dimensions	84fin*90in	90in*100in

Symbol Explanation			
	Read all the instructions.		Gentle wash cycle in water at 30°C.
	Do not puncture.		Do not bleach.
	Do not use if folded or creased.		Do not tumble dry.
	Not suitable for very young children (0-3 years).		Do not iron.
	Dispose of the packing in an eco-friendly manner.		Do not dry clean.
	WARNING: Warning of risks of injury or health hazards.		
	CAUTION: Safety information about possible damage to appliance/accessories.		

IMPORTANT- INSTRUCTIONS- DO NOT DESTROY

READ INSTRUCTIONS CAREFULLY

1. Be sure to read carefully the accompanying instruction booklet before using this bedding.
2. Do not use this bedding with an infant, a helpless person, or anyone insensitive to heat, such as a person with poor blood circulation.
3. Do not tuck in the wired area of this bedding.
4. Do not route electrical cords between the mattress and box spring. Do not allow the cords to be pinched.
5. Keep the control away from drafty areas that may become damp or wet such as an open window.
6. Do not use pins-They may damage the electric wiring.
7. Be sure that this bedding is used on an alternating-current supply circuit of the proper voltage.
8. Turn off or unplug when not in use.
9. Excessive heating may result from folding bedding, other than a mattress, when in actual use.
10. If improper operation of this bedding is observed, discontinue its use immediately and consult the manufacturer or the dealer regarding its repair
11. Do not use with rocking chairs, recliners, chairs with casters or wheels, or other furniture subject to movement.
12. Do not tuck the blanket or supply cord in a sofa or other furniture.
All portions of the blanket or controller should be visible at all times.
13. Wrapping of cord around the controller may damage the cord Loop loosely when storing.
14. Do not use dry-cleaning fluid on this bedding, cleaning solvents may have a deteriorating effect on the insulation of the heating element.
15. Wash -Do not dry clean.
16. Household use only.
17. Save these instructions


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


NORTH AMERICAN MODELS WITH POLARIZED PLUGS: POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

PRODUCT DIAGRAM

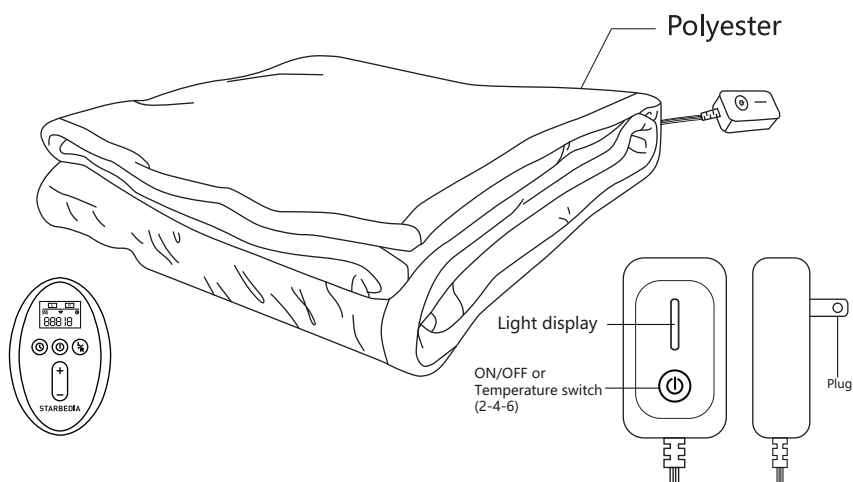

Wireless Controller Interface

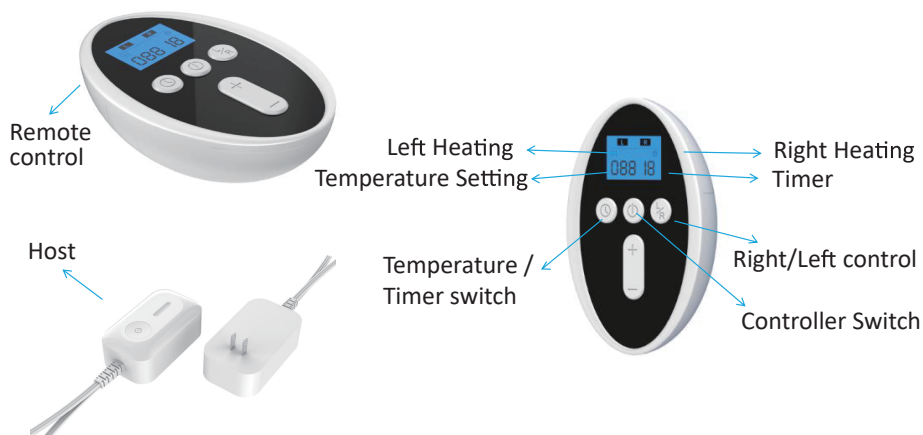

How to pair the remote control with the Host:

1. Install batteries in the Remote control
2. Insert the Host coupler into the electric blanket coupler, plug in the Host, press and hold the Host power button, and three LED lights will flash
3. Press the Remote control power button, and the Host LED light will stop flashing, indicating that the Remote control and the Host are paired successfully

Wireless Blanket Operational Manual

Host

1. After plugging , the three LEDs flash and the buzzer beeps.
2. The host and the remote control have been matched before leaving the factory, and the host can be directly controlled by the remote control; when the host is in the remote control control mode once turned on, the middle LED of the host lights up, and the host receives the remote control signal, and the middle LED of the host will flash quickly; when the host is turned off, user can turn on the host with the remote control, and the host will emit a long beep
3. The host can be turned on solely. When the remote control is out of power or temporarily cannot be found, press the host ON/OFF button and adjust the left and right gears (OFF-2-4-6) in a cycle, The default timer is 8 hours. One LED light represents the 2nd setting, two LED lights represent the 4th setting, three LED lights represent the 6th setting, and all LED lights are off for OFF.

4. When the host is turned on with the remote control mode, you can also press the host ON/OFF button to turn it off. All LEDs are off, and the left and right electric blankets are turned off at the same time.

5. If an error occurs, the buzzer will emit an intermittent beeping alarm; the heating electric blanket is turned off; the host cannot receive the signal from the remote control; the host ON/OFF button is invalid; the host must be unplugged immediately; LED (L1/L2/L3) flashes to display the corresponding error code:

F1 (L1 flashes): heating wire is open, electric blanket is separated from controller connector

F2 (L2 flashes): sensing wire is open

F3 (L1/L2 flashes): heating wire and sensing wire are short-circuited

F4 (L3 flashes): power supply is a modified square wave

F5 (L1/L3 flashes): voltage is unstable, zero-crossing signal

F7 (L2/L3 flashes): thyristor is short-circuited

F8 (L1/L2/L3 flashes): controller internal temperature is too high (over 65 degrees)

6. Pair the host with the remote control: When the host is turned off, press and hold the host ON/OFF button, the three LEDs light up in turn, and the buzzer beeps at the same time, the host is in a pairing mode, turn on the remote control, the host emits a flute sound, indicating that the pairing is successful

Wireless Blanket Operational Manual

Remote Control

1. When installing the battery for the first time, the LCD will be fully displayed and the backlight will be on, and will go off after 1S
2. When the device is turned on, the screen will go off and sleep after 30S after all buttons are stopped; if you press the power button, it will return to the state before sleep
3. Gear setting: When L/R are displayed at the same time (when the left and right temperature gears are set differently, the highest gear of the left and right setting gears is displayed), press the +/- button to adjust the gear settings of the left and right sides at the same time (00-1-2-3-4-5-6); when L or R is displayed alone, the gear temperature of the left and right can be set independently; when L/R is displayed at the same time, once the adjustment +/- button is pressed, the left and right sides are adjusted at the highest gear of the set gear at the same time
4. Press the L/R button to switch the L/R-R-L cycle sequence
5. Timing can only be set for the left and right electric blankets at the same time. Press the timing button, the timing time and the clock symbol flash at the same time, and press the adjustment +/- button to adjust the timing (2h-4h-6h-8h-10h). There are three ways to return to the normal gear display mode (a. Do not press the adjustment button for 3s b. Press the timing button again c. Press the L/R switch)
6. When the battery voltage is lower than 2.4V during power-on self-test, "LO" is displayed.

CAUTION

1.Do not plug into the wall outlet until you have connected the controller cord to the product.
2.Caution: the cord must be completely connected a risk of fire could occur with a loose connection.

2.Caution: the cord must be completely connected a risk of fire could occur with a loose connection.

WARNING: This product is equipped with a SAFETY SYSTEM. This sensor technology prevents the blanket ace from getting overheated entirely and would automatically switch off it when there is a malfunction. Please note that for safety, the product could not be operated any longer after the malfunction. If the overheat protection is activated, please contact us.

QUESTIONS & ANSWERS

Problem	Cause	Solution
The product does not produce enough heat or does not work.	heating products provide safe heat and protect consumers' skin within temperature range based on international safety standards, which helps avoid low temperature burns. Therefore, the temperature setting is for keeping warm	If you don't feel heat, you can fold the product and test it for 30 minutes to see whether it works or not (But please make sure that the product is placed flat without being folded for normal use). If you still can't feel the heat after the test, please contact the
The product does not work upon arrival.	There exist product malfunctions.	When receiving the product, please take it out from the packing and place it flat (don't fold). Check the coupler and mains plug have been connected properly, then switch on to check whether the product works normally or not. For products unable to work normally, please contact our customer service.
The product does not heat uniformly.	The product is folded or the heating wire is coiled during the use;	Please place the underblanket flat for using. The temperature of the body areas that contact the heating zones is higher than the areas do not, which is a normal
The product no longer works after being used for a period of time.	The product is not used or washed properly.	Please contact our customer
If the above suggestions could not solve the problems, this might result from the permanent switch-off protection via the safety system. In this case, please contact our customer service.		

CLEANING AND MAINTENANCE

Warning

1. Before cleaning, always remove the mains plug from the outlet first.
2. Disconnect the controller from the product,
3. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
4. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CLEANING

1. Soak the product for 15 minutes in mild soap and cool water
2. Machine wash on gentle cycle in water at 30°C(86F) for 2 minutes or hand wash
3. Rinse with fresh, cool water.
4. Machine dry on gentle, cool cycle or hang to dry.
(Immediately after washing, reshape the product to its original dimensions and spread it out flat on a clothes horse or clothesline.)

MAINTENANCE

1. Store the product only after it cools down completely and it is dry completely.
2. Loop the cord loosely.
3. Store in an airy, dry environment.

WASHING INSTRUCTIONS

Wash by hand or as follows in automatic washer using slow agitation and normal spin speed:

Fill washer with warm water. Add minimum amount of all-purpose detergent, agitate to dissolve. Measure bedding before washing. Add bedding and soak five minutes. Agitate two minutes. Spin. Fill for cool rinse, agitate one minute then spin.

Dry in automatic dryer on high heat, five minutes only, or line dry. Remove damp bedding from dryer. Block to original size, and drape to finish drying. Do not iron your bedding.

CAUTION

- DO NOT SUBMERGE THE CONTROLLER IN WATER. THE CONTROLLER MUST NEVER CONTACT WATER OR OTHER LIQUIDS DIRECTLY. TO CLEAN THE CONTROLLER USE A DRY LINT-FREE CLOTH .

- DO NOT DRY CLEAN AS DRY CLEANING SOLVENTS MAY DAMAGE THE WIRES
- DO NOT CHEMICALLY CLEAN (WITH BLEACH OR CLEANING FLUIDS)
- DO NOT USE A WRINGER
- DO NOT USE CLOTHESPINS.
- DO NOT IRON OR WRING OUT.
- DO NOT USE MOTHBALLS OR SPRAYS OF ANY KIND.
- DO NOT RE-CONNECT OR USE UNTIL COMPLETELY DRY.
- DO NOT WASH THE CORD OR PUT THE CORD INTO WATER.
- PLEASE NOTE THAT FREQUENT WASHING OF THE PRODUCT HAS A NEGATIVE EFFECT.
- DO NOT USE COMMERCIAL DRYERS OR THE DRYERS AT YOUR LOCAL LAUNDR- OMATS, AS THEY WOULD GET TOO HOT AND CAN DAMAGE THE WIRING OF THE PRODUCT.
- THIS APPLIANCE HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE. THIS PLUG WILL FIT INTO A POLARIZED OUTLET ONLY ONE WAY IF

THE PLUG DOES NOT FIT FULLY INTO THE
OUTLET, REVERSE THE PLUG IF IT STILL DOES
NOT FIT, CONTACT A QUALIFIED
ELECTRICIAN.

DO NOT AT-TEMPT TO DEFEAT THIS SAFETY
FEATURE.

Storing: If the product is not to be used for a long time, please disconnect the controller from it. It's recommended to store in the original packaging.

Warning: Make sure that the product has completely cooled down before folding, otherwise it might be damaged. During storage, do not place any objects on the folded product.

Disposing: For eco-friendly reasons the product should be disposed of separately instead of being disposed of as unsorted municipal waste at the end of its service life. Please dispose of properly at the local waste collection site.

WARRANTY AND CUSTOMER SUPPORT

If you need help regarding product issues, after-sales service, or other relevant problems, please contact us Customer Phone Service +1 888 891 2855 Email: support@garvee.com

STARBEDIA