



1 键：开锁键
1 key:Unlock key

2 键：尾箱键半开
2 key: Trunk key

3 键： 闭锁键
3 key: Lock key

4 键：寻车键，用于寻车
4 key: Panic key, used to
looking for car

6 键： 尾箱全开
Trunk key

5 键： 启动键
5key: Start key

Company:

Address:

Name: Remote Key

Model:

Operation instructions

1. 把钥匙匹配到车子上之后，按 1 键开锁键 2 秒可打开车门，按 3 键闭锁键 2 秒可关车门。
2. 点火钥匙用于手动开锁以及启动汽车
1. After matching the key to the car, press 1 the unlock key for 2 seconds to open the door and press 2 the lock key for 2 seconds to close the door.
2. The ignition key is used to manually unlock and start the car.

产品参数

Product parameters

额定电压	Rated voltage	DC 3V
工作电流	Working current	<6mA
工作电压	Operating voltage	1.8V~3.6V
发射功率	Transmit power	>-20dbm
按键操作力	Key operation force	400±50g
工作温度	Operating temperature	-5° C +45° C
待机电流	Stand-by current	<1uA
发射频率	transmitting frequency	433M±75KHZ
调制方式	Modulation	ASK

电池 Battery	CR2032
按键耐久次数 Key durability	70,000 次以上 More than 100,000 times

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.