

Veravoxes

RECORDABLE CASSTTE PLAYER WITH WIRELESS

CAS-8810

USER'S MANUAL

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 28T3X-CAS-8810

MADE IN CHINA

01 IMPORTANT SAFETY TIPS

- ⚠ Please read this User's manual instructions carefully and try to learn its specific performances and operations before use. After your reading, please properly keep it for future reference.
- ⚠ Please beware of sharp edges, uneven surface, metal parts, accessories and packaging, so as to avoid any possible damage.
- ⚠ Please keep this unit, battery and accessories away from children, so as to avoid danger when children play it as a toy.
- ⚠ Do not wipe the product with oil and other volatile, corrosive liquids.
- ⚠ Do not use or store this product at too high a temperature or too humid, which may cause the machine life to be shortened.
- ⚠ Do not open or repair this product without permission. This may cause electronic breakdown or even completely damage the product, with are not covered by the warranty.

02 COMPONENTS

01

Problem	How to check
REC button cannot press down	1. Check if blank recording tape. 2. Open cassette door, press the play button, check if the left guide wheel rotates normally; 3. Check if the protective cover at the tape bottom is exist; 4. Put the tape and hold it against the REC protector.
Bluetooth cannot connect	1. Turn off and on Bluetooth switch again; 2. Replace other Bluetooth devices.
The cassette door cannot close	Take out the tape and put in properly.
Cannot delete tape content completely	1. Check the tape specifications; 2. Check if the eraser is dirty.
Sound come with loud noise and trembling	1. Check if the magnetic head and guide wheel are dirty; 2. Check if the tape is loose; 3. Check if the battery is low power.
Can not record from AUX	1. Insert the AUX cable properly; 2. Check if the audio device is play normal.

14

01B

02A

02B

03A

03B

04A

04B