

Resonance

A U D I O W O R K S



TrueSonos

High Fidelity Belt-Drive Turntable System

Product Manual



WELCOME!

Thank you for choosing your new **TrueSonos record player** by **Resonance Audio Works**. We designed this unit with precision and care to deliver the warmth, depth, and clarity that vinyl enthusiasts value most. Whether you are rediscovering your favorite albums or starting a new collection, we are confident it will provide you with years of enjoyment and exceptional sound.

To get the best performance from your record player, we encourage you to read this manual carefully before use. Inside, you will find step-by-step instructions for setup, operation, and maintenance, along with helpful tips to preserve both your vinyl records and the player itself. Following these guidelines will ensure reliable operation and optimal sound quality.

Please keep this manual in a safe and accessible place for future reference. It will serve as a valuable resource whenever you need guidance on features, troubleshooting, or care. On behalf of the Resonance team, we thank you again for your purchase and look forward to being part of your listening journey

PACKAGE INCLUDES

TrueSonos Record Player
12V / 2A Power Adapter
Felt Slip Pad
User Manual

SPECIFICATIONS

Power Input: AC 100–240V

Tweeter Power: 5W × 2

Mid-Bass Speaker Power: 10W × 2



Product Dimensions: 18.3 × 15.2 × 7.0 in

Net Weight: 17.9 lbs

Functions: Turntable, Bluetooth, USB, Turntable Output

NOTE: Specifications and included items may change without prior notice.

UNIT AT A GLANCE

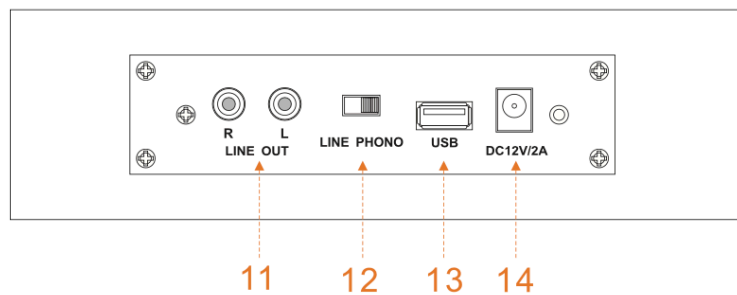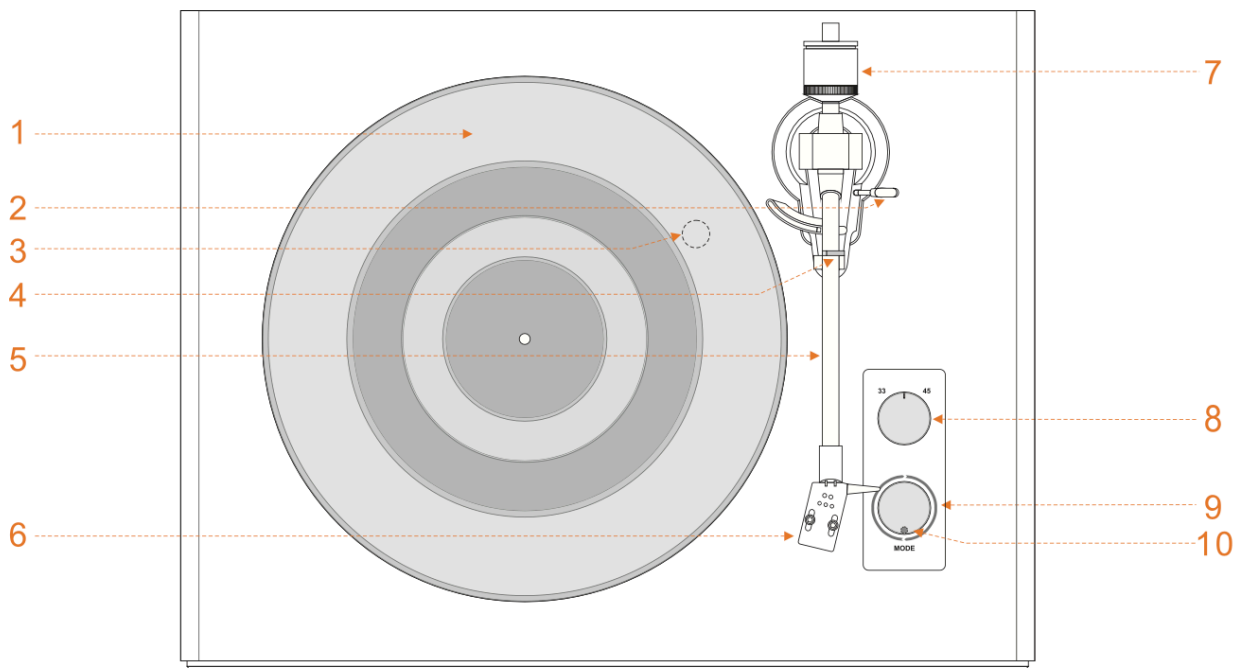

- | | | |
|-----------------------------|----------------------------|-----------------------|
| 1. Platter | 6. Cartridge | 10. Indicator Light |
| 2. Tonearm Lift Lever | 7. Cartridge Counterweight | 11. Output Jacks |
| 3. Platter Transport Screws | 8. Speed Selector Switch | 12. Phono/Line Switch |
| 4. Tonearm Lock | 9. Function/Volume Switch | 13. USB Port |
| 5. Tonearm | | 14. Power Input |

POWER INPUT

Connect the supplied power adapter to a standard wall outlet and plug it into the turntable. Briefly press the **MODE** button to power on the unit, then rotate the **Volume Knob (9)** to the right to adjust sound level. To power off the turntable when not in use, press the **MODE** button again.

Important: This turntable is designed to operate on **AC 100–240V** with the included adapter output of **DC 12V/2A**. Using an adapter with different specifications may cause damage to the turntable. Such damage is not covered under warranty.

VINYL RECORD OPERATION INSTRUCTIONS

Remove the Transport Screws

Begin by removing the platter. Unscrew the transport screws (3) located beneath the platter by turning them counterclockwise. Once removed, reattach the platter for normal use. Press the Function Switch (9) until the yellow light indicates **PHONO** mode. The platter will begin to rotate, activating vinyl playback mode.

Place the Record

Set your record on the Platter (1). Use the Speed Selector Switch (8) to choose the correct speed—most records play at **33 RPM** unless otherwise indicated.

Prepare the Tonearm

Carefully remove the white protective cover from the cartridge, pulling straight out parallel to the surface. Release the Tonearm Lock (4) to free the tonearm.

Start Playback

Raise the Tonearm Lift Lever (2), move the tonearm gently over to the edge of the record, and lower the lift lever to allow the stylus to descend smoothly onto the vinyl. Playback will begin automatically.

Stopping Playback

The turntable will automatically stop about 3 minutes after the record has finished playing. To stop playback immediately, move the Speed Selector Switch (8) to the middle position between 33 and 45.

*Note: When using the built-in speaker, ensure Switch (12) is set to **PHONO** mode. Otherwise, no sound will be heard.*

After Use

When finished, reattach the cartridge's protective cover, secure the Tonearm Lock, and power off the unit if it will not be used for an extended period.

BLUETOOTH FUNCTION OPERATION INSTRUCTIONS

Power On

Ensure the turntable is connected to power and switched on.

Activate Bluetooth Mode

Briefly press the **MODE** button until the indicator light turns **blue**, signaling that Bluetooth mode is active.

Pairing

On your smartphone, tablet, or other Bluetooth-enabled device, open the Bluetooth settings. Select the device name "TrueSonos" (or as labeled) from the list of available devices. Once paired successfully, the indicator light will remain steadily lit.

Play Music

Stream audio wirelessly from your paired device. Sound will play through the built-in speakers or connected external system, depending on your setup.

Disconnecting / Reconnecting

To disconnect, turn off Bluetooth on your device or press the **MODE** button to switch to another input. The turntable will automatically attempt to reconnect to the last paired device when powered on in Bluetooth mode.

USB FUNCTION OPERATION INSTRUCTIONS

Insert USB Mode

Plug your USB drive into the USB port (13) located on the back of the device.

Activate USB Mode

When USB mode is active, the indicator light will turn **green**, and playback will begin automatically.

TURNTABLE OUTPUT CONNECTION

Connect to External Speakers/Amplifier

For enhanced sound quality, you can connect the turntable to active speakers or an amplifier. Use an audio cable and set the Sound Switch (12) to **LINE** mode.

Setup Connections

Attach the red plug to the **R (Right)** channel output and the white plug to the **L (Left)** channel output (11).

Note

You will need to purchase the appropriate audio cable separately. Adjust the playback volume using your connected amplifier or speakers.

SAFETY REMINDERS

Avoid Heat and Sunlight

Do not expose the product to direct sunlight or place it near heat sources such as radiators or stoves.

Keep Away from Moisture

Do not use the product in bathrooms, swimming pools, or other damp environments. Avoid exposing it to water or high humidity.

Power Safety

To save energy and ensure safety, disconnect the power completely when the unit will not be used for an extended period.

Use the Original Adapter

Always use the supplied power adapter. Using adapters with incorrect specifications may damage the unit and void the warranty.



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

