

IMPORTANT TIPS:

After the mobile phone successfully binds the door lock, the mobile phone has become the administrator identity, the default main code "123456" has failed. Need to set a new administrator code on the APP, (the first number password set on the APP is the administrator code) . You can change the settings on the door lock later through the Administrator Code set on the APP.


4. Add user and fingerprint, password,card

a. Add members


As shown in (figure 5) below, click on the added locks to enter the lock Operation Interface, as shown in (Figure 6) below, click on "Membership management" to enter the interface of (Figure 7), click on the top right corner "+" can be prompted to add the management of the door lock operators.




5

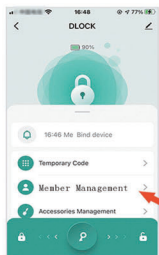

6

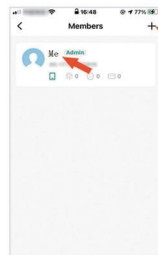


7

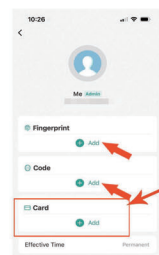

8

Note: Model B does not have this function

5. Mobile phone unlock/ Lock

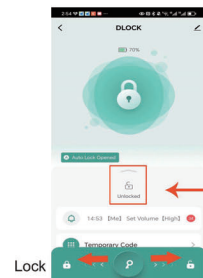


9


Current status of the door lock

6. Temporary password

As shown in (Figure 10) below, click "Temporary Password" and follow the prompts to set and share a time password.

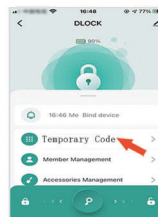

10

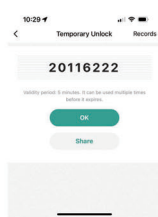


11

13

7. Power and record

After waking up the door lock, you can display the battery level of the door lock and view the unlocking record on the mobile phone, as shown in (Figure 12) below.

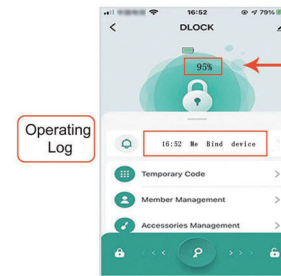


12


Battery level indication: When the battery level is lower than 30%, can't operate via APP. Please replace new batteries in time.

8. Other function settings

As shown in Figure 13, click "Settings" to enter the function menu, set more functions, such as "automatic locking, locking time, silent" and so on.

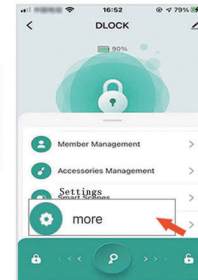

13

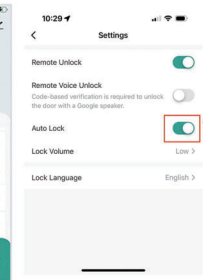


14


Default On

9. Restore factory settings

a: Click the button in the upper right corner as shown in (Figure 15) below, then click "Remove Device" as shown in (Figure 16) below, and then click "Unbind and Clear Data" to restore the factory successfully.

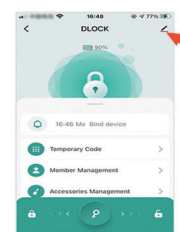


15

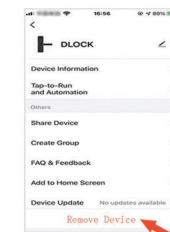

16

b: Keep the lock open. After holding the reset button for 3 seconds, there will be a "beep" sound, keep holding it intermittently without releasing and there will be a prompt sound to restore the factory settings after 9 seconds. Release and then press the ✓ key on the keyboard to confirm the restoration of the factory design.

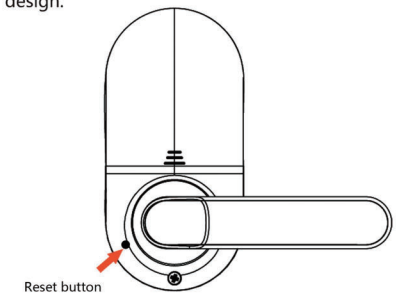

14

Quick set up



The default master code is 123456. It's required that you change it to a code of your own before programming

