

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2)This device must accept any interference received, including interference that may cause undesired operation.

Maintenance

- ★Please wipe with a dry cloth.
- ★Do not use thinner, aniline, or similar substances for cleaning, as it may cause deformation and discoloration.
- In case of the following abnormalities, please stop using immediately and contact the purchasing store or our company:
 - ★Unable to charge normally.
 - ★Deformation or abnormal deformation of the main body.
 - ★Unpleasant odor.
 - ★Other abnormalities or malfunctions.

Usage & Safety Precautions

To prevent harm to users and others, please strictly adhere to the following guidelines

⚠ WARNING: Improper use may result in serious injury.

- Immediately stop using the product if it emits smoke, overheats,produces unusual odors, or makes abnormal noises.
- Do not attempt any non-professional modifications or repairs, as this may cause electric shock or fire hazards.
- Avoid dropping, strong impacts, or excessive vibration, as these may lead to malfunction or damage.
- Do not use the product if it is cracked or damaged in any way.
- This product is not waterproof. Avoid contact with water, and do not wash or use in humid environments.
- Do not touch with wet hands.
- Avoid using or storing near heat sources, open flames, direct sunlight, or in high-altitude areas (e.g., inside a parked car under the sun).
- Do not adjust the Neck Light Speaker Pro to an unreasonable angle or over-twist it, as this may damage the product.
- Do not shine light directly into eyes.

Product Warranty User Card

Thank you for your support and preference to our product. According to the national "Three Guarantees" service regulations:

- 1.Within 7 days from the date of purchase, if there is a performance failure of the product, consumers can choose to return the product (under the condition that it does not affect secondary sales), exchange it for a new one, or have it repaired.
- 2.Within 15 days from the date of purchase, if there is a performance failure of the product, consumers can choose to exchange it for a new one or have it repaired. (Artificial damage and physical damage to the appearance are not covered by the above three guarantees.)
- 3.The main unit is warranted for one year from the date of purchase, and accessories are not covered by the warranty.
- 4.Artificial damage such as dropping or water seepage is not covered by the warranty. If this card is not provided during warranty service, our brand reserves the right to treat it as a non-warranty case.

Purchase Date	
Place of Purchase	

Purchase DatePlace of Purchase

Remark: Please fill in each item clearly and do not modify it without authorization. Keep this warranty card properly to safeguard your legal rights. If you need service or have any questions, please contact us.


⚠ Additional Notes

- Contains lithium-ion battery.
- Dispose of properly: Follow local environmental regulations. Do not dismantle or discard batteries carelessly—take them to designated recycling points.

Product Specifications


Product Name: Neck Light Speaker Pro
Model: MF-D10
Age Range: 3+ years old
Manufacturer: Foshan Tianyi Culture Communication Co., Ltd.
Address: Room 1105, Building 1, No. 12 Tongji West Road,Chancheng District, Foshan City, Guangdong Province, China
Made in China
※This product complies with FCC radiation exposure limits for anuncontrolled environment.

KooBinKoo

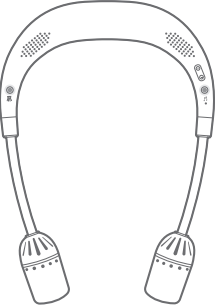

MF-D10
Neck Light Speaker Pro
User Manual

Product illustration

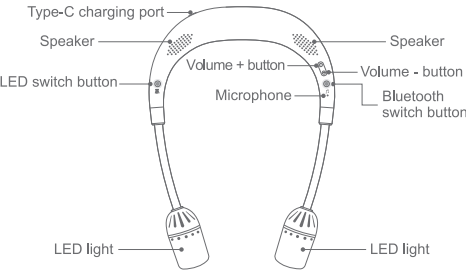

Product and Accessories

1. Neck Light Speaker Pro	1 Piece
2. Type-C charging Cable	1 Unit
3. User manual	1 Copy
4. Quality certificate	1 Piece

Instructions for Using the LED Light

- 1.Turn On:** Press and hold the LED switch button for 1 second.
- 2.Turn Off:** While the light is on, press and hold the LED switch button for 1 second to power off.
- 3.Brightness Adjustment:** After turning on the light, briefly press the LED switch button to cycle through the five modes: High, Medium, Low, Flash, and SOS. (The default mode at startup is High.)
- 4.Indicator Light:**
 - When the device is on, the blue light remains steadily on.
 - When the battery is low, the red light flashes (please charge promptly).
 - While charging, the red light remains steadily on.
 - The light turns off when the device is fully charged.

※Charging Instructions:

- Please use a charging cable connected to a power adapter and insert it into the Type-C port to begin charging. (The recommended output for the power adapter is 5V = 1A).
- Please use a certified power adapter that complies with national safety standards. Note that the power adapter is not included with this product.
- It is normal for the device to become slightly warm during use or while charging.

Bluetooth Connection

Press and hold the Bluetooth switch button to power on Bluetooth and automatically enter pairing mode. The indicator light will alternate between blue and red. Enable Bluetooth on the device you wish to connect, search for the Bluetooth name "MF-D10", and then tap on the name to connect. Upon successful connection, the blue indicator will stay solidly lit. While music plays, the blue light will slowly flash.

※Note: Using the Bluetooth function does not require the LED light to be turned on. Simply activating the Bluetooth switch is sufficient.

Bluetooth Function Operation Guide

- 1. Turn On Bluetooth:** Press and hold the Bluetooth switch button for 2 seconds.
- 2. Turn Off Bluetooth:** Press and hold the Bluetooth switch button for 2 seconds.
- 3. Play Music:** Press the Bluetooth switch button once when music is paused.
- 4. Pause Music:** Press the Bluetooth switch button once when music is playing.
- 5. Answer Call:** Press the Bluetooth switch button briefly when there is an incoming call.
- 6. End Call:** Press the Bluetooth switch button briefly during a call.
- 7. Reject Call:** Press and hold the Bluetooth switch button when there is an incoming call.
- 8. Disconnect Bluetooth:** Press the Bluetooth switch button twice quickly.
- 9. Volume Up:** Press the Volume + button briefly.
- 10. Volume Down:** Press the Volume - button briefly.
- 11. Previous Track:** Press and hold the Volume - button.
- 12. Next Track:** Press and hold the Volume + button.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MF-D10