


Size : 105 mm x 105 mm



SB923906 • GAMEPAD S2™

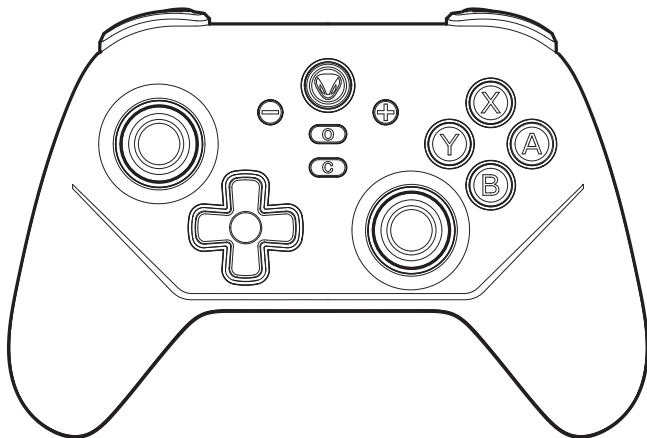


Quick start guide • Guide de démarrage rapide
Guía rápida • Schnellstartanleitung • Guida rapida


Recharge

Recharger • Recarga
Aufladen • Ricarica

1.

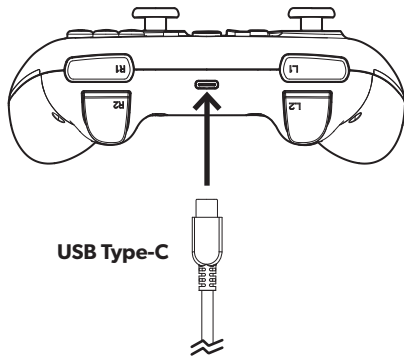


2.

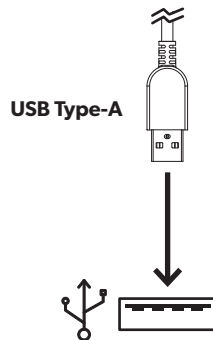


Switch 2 Connecting

Switch 2 Connexion • Switch 2 Conexión
Switch 2 Verbinden • Switch 2 Collegamento

1.

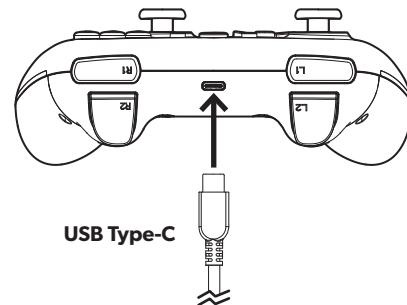


2.

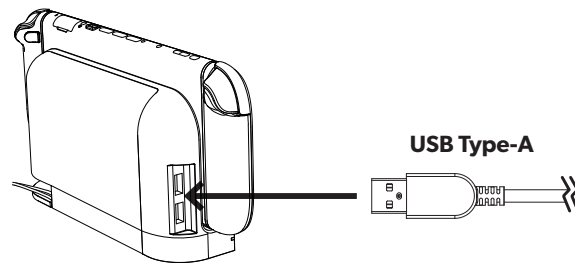

3.




4.

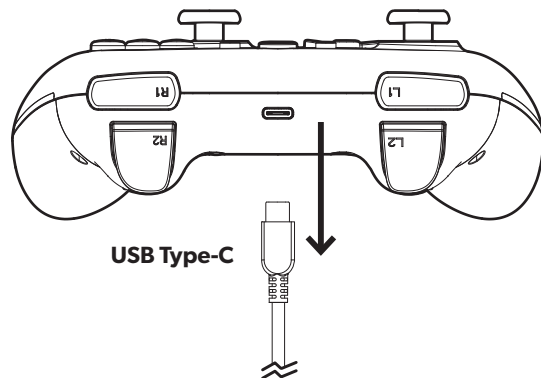

Dongle connection

Connexion par dongle • Conexión mediante dongle
Dongle-Verbindung • Connessione tramite dongle

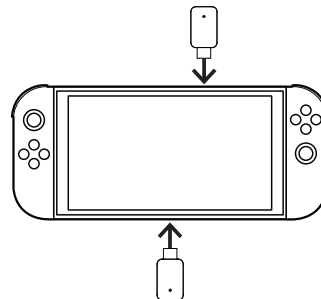


OR

1.




2.

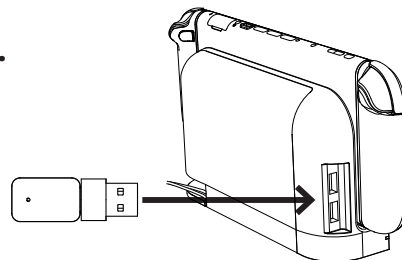


Dongle connection

Connexion par dongle • Conexión mediante dongle
Dongle-Verbindung • Connessione tramite dongle

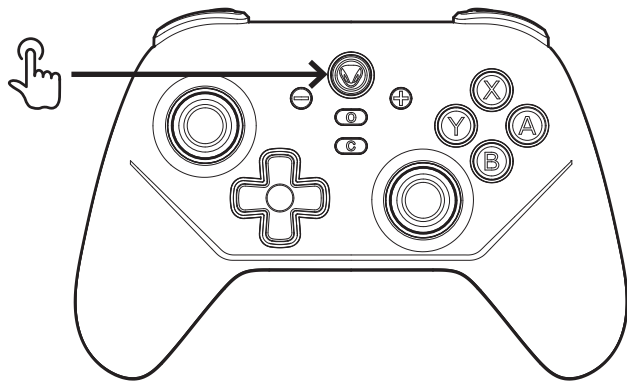


Trigger stops

Trigger verrou • Bloqueo del gatillo
Schultertastenwegs-Verkürzung • Blocco del grilletto

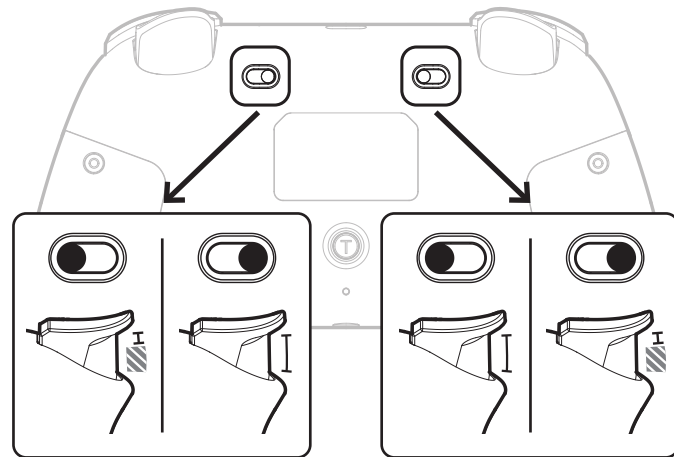

Back button lock

Verrou du bouton arrière • Bloqueo del botón trasero
Sperr der Rücktaste • Blocco del pulsante posteriore

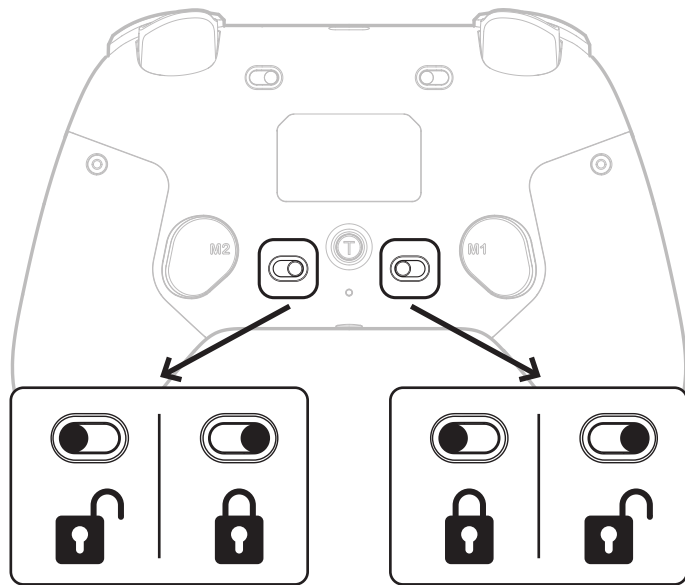

RGB lighting modes for SB923906 • GAMEPAD S2™

Modes d'éclairage RGB • Modos de iluminación RGB
RGB-Beleuchtungsmodi • Modalità di illuminazione RGB



Change mode (4 modes) • Changer de mode (4 modes) •
Cambiar modo (4 modos) • Modus wechseln (4 Modi) •
Cambia modalità (4 modalità)



Change colour • Changer de couleur • Cambiar color •
Farbe ändern • Cambia colore



Lighting brightness (100/70/50/25%) •
Luminosité de l'éclairage (100/70/50/25%) •
Brillo de la luz (100/70/50/25%) •
Beleuchtungshelligkeit (100/70/50/25%) •
Luminosità dell'illuminazione (100/70/50/25%)




Switch ON/OFF lighting •
Activer/Désactiver le mode lumineux •
Activar/Desactivar el modo de luz •
Lichtmodus ein-/ausschalten •
Attivare/Disattivare la modalità luce •

RGB lighting modes for SB924163 • GAMEPAD RGB S2™

Modes d'éclairage RGB • Modos de iluminación RGB

RGB-Beleuchtungsmodi • Modalità di illuminazione RGB

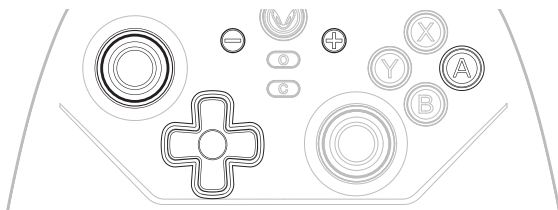

Change mode (3 modes) • Changer de mode (3 modes) •
Cambiar modo (3 modos) • Modus wechseln (3 Modi) •
Cambia modalità (3 modalità)



Change colour • Changer de couleur • Cambiar color •
Farbe ändern • Cambia colore



Lighting brightness (OFF/25/50/75/100%) •
Luminosité de l'éclairage (OFF/25/50/75/100%) •
Brillo de la luz (OFF/25/50/75/100%) •
Beleuchtungshelligkeit (OFF/25/50/75/100%) •
Luminosità dell'illuminazione (100/70/50/25%)





Switch ON/OFF lighting •
Activer/Désactiver le mode lumineux •
Activar/Desactivar el modo de luz •
Lichtmodus ein-/ausschalten •
Attivare/Disattivare la modalità luce •

Standard/ Turbo/ Auto-Fire modes

Modes turbo (Standard/Automatique) • Modos turbo (Estándar/Automático)


Turbo-Modi (Standard/Automatisch) • Modalità Turbo (Standard/Automatico)

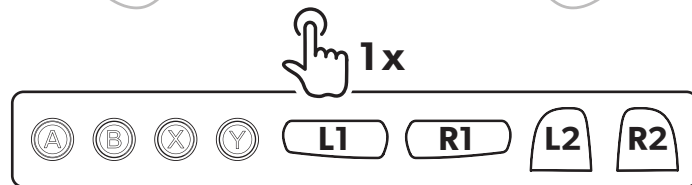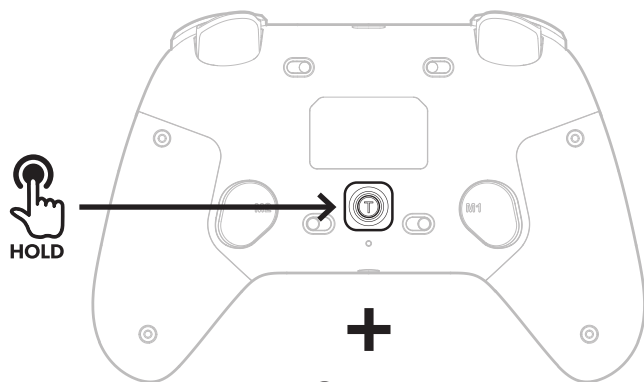

Standard > Turbo > Auto-Fire modes > Standard


Adjust Turbo speed (global)

Régler la vitesse du turbo (global) • Ajustar velocidad Turbo (global)
Turbo-Geschwindigkeit einstellen (global) • Regolare la velocità del turbo (globale)

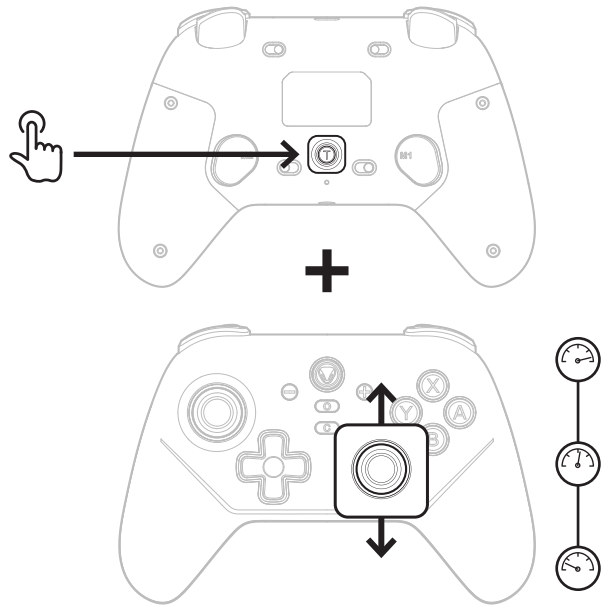

Motor vibration adjustment

Réglage de la vibration du moteur • Ajuste de la vibración del motor
Motorschwingungseinstellung • Regolazione della vibrazione del motore

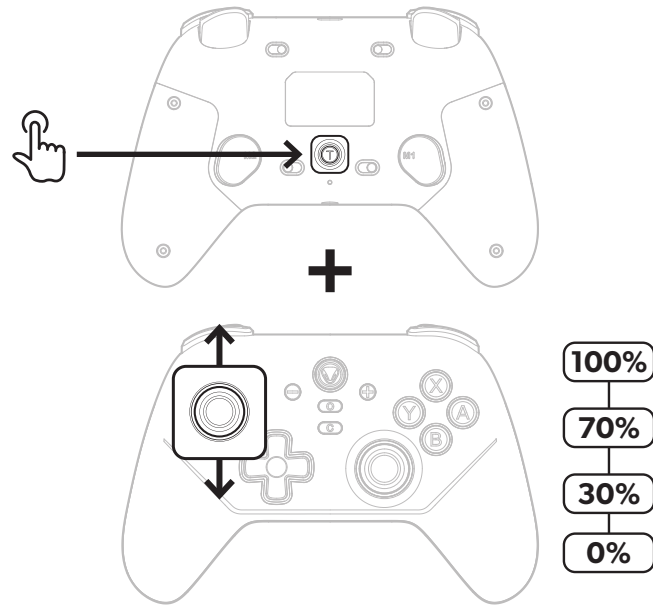

Battery Status

État de la batterie • Estado de la batería

Batteriestatus • Stato della batteria



Charging •
En charge •
Cargando •
Wird geladen •
In carica




Low battery •
Batterie faible •
Batería baja •
Schwacher Akku •
Batteria scarica

Reset

Réinitialisation • Restablecer

Zurücksetzen • Reimpostazione

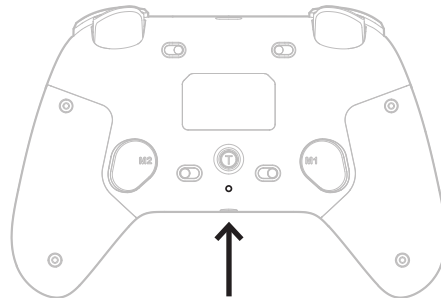

Information • Informations • Información • Informationen • Informazioni

If you experience functional issues using GAMEPAD S2™ / GAMEPAD RGB S2™, please download the latest firmware installer from <https://snakebyte.com/pages/downloads>, then run the installer program and follow the on screen instructions. •

Si vous rencontrez des problèmes de fonctionnement avec la manette GAMEPAD S2™ / GAMEPAD RGB S2™, veuillez télécharger le programme d'installation du dernier firmware depuis <https://snakebyte.com/pages/downloads>, puis exécutez le programme d'installation et suivez les instructions à l'écran. •

Si experimenta problemas de funcionamiento al usar el GAMEPAD S2™ / GAMEPAD RGB S2™, descargue el instalador del firmware más reciente desde <https://snakebyte.com/pages/downloads>, luego ejecute el programa de instalación y siga las instrucciones en pantalla. •

Wenn bei der Verwendung des GAMEPAD S2™ / GAMEPAD RGB S2™ Funktionsprobleme auftreten, laden Sie bitte das neueste Firmware-Installationsprogramm von <https://snakebyte.com/pages/downloads> herunter, führen Sie anschließend das Installationsprogramm aus und folgen Sie den Anweisungen auf dem Bildschirm. •

Se riscontrano problemi di funzionamento con GAMEPAD S2™ / GAMEPAD RGB S2™, scarica l'ultima versione del programma di installazione del firmware da <https://snakebyte.com/pages/downloads>, quindi esegui il programma di installazione e segui le istruzioni visualizzate sullo schermo.



Manufacturer/APAC Import:

snakebyte technologies Limited • Unit 907-908 • Lu Plaza • 2 Wing Yip Street •
Kwun Tong • Kowloon • Hong Kong

North/Latin America Import:

snakebyte usa Inc. • 8799 Balboa Ave No. 265 • San Diego • CA 92123 • USA

UK Import:

Snakebyte UK Limited • Suite 106 Denning House C/O Know Tax • 1a George Street •
Wolverhampton • WV2 4DP • United Kingdom

EU Import:

snakebyte distribution GmbH • Konrad-Zuse Strasse 13 • 58239 Schwerte • Germany

Australia/New Zealand Import:

Directed Electronics Australia PTY LTD • 115-119 Link Road • Melbourne Airport VIC • 3045 • Australia

All rights reserved. This document may not in whole or in part be reproduced, stored in a retrieval system, transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, or reduced to any electronic medium or machine-readable form without prior consent, in writing, from snakebyte distribution GmbH. snakebyte is a registered trademark of snakebyte distribution GmbH. snakebyte, the snakebyte logo are trademarks or registered trademarks of snakebyte GROUP.

© 2025 snakebyte.

Nintendo Switch™, Nintendo Switch™ 2 and Joy-Con™ are registered trademarks of Nintendo Inc.
This product is not designed, manufactured, approved, sponsored or endorsed by Nintendo.
All other trademarks are the property of their respective owners.

Made in China • Fabriqué en Chine

© 2025 snakebyte • SB923906 • SB924163 • Version 10/2025
Email: support@snakebyte.com | Website: www.snakebyte.com

FCC warning statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.