

COLORFIRE

CF100

DESKTOP SPEAKER

使用说明书

基本参数

· 喇叭规格：2 英寸 *2

· 频率响应：60Hz-16KHz

· 输出功率：3W*2

· 输入电源：USB 直插供电

· 信噪比：≥75dB

包装清单

· 音箱 *1

· 使用说明书 *1

操作说明

3.5mm 无光版

· 开关机：

把音箱 USB 接头与设备连接，音箱通电开机。

· 连接音源，播放音乐。

把 3.5mm 接头连接至播放设备，播放音乐。

· 转动旋钮，控制音量。

3.5mm 有光版

· 开关机：

①把音箱 USB 接头与设备连接，音箱通电。

②旋钮可控制开关机。

· 连接音源，播放音乐。

把 3.5mm 接头连接至播放设备，播放音乐。

· 转动旋钮，控制音量。

· 触摸手势图标，控制灯光开关。

USB 版本

· 开关机：

①把音箱 USB 接头与设备连接，音箱通电。

②旋钮可控制开关机。

· 转动旋钮，控制音量。

· 手势图标：

①短触切换灯光。

②长按切换模式（有线 / 蓝牙）。

· 蓝牙连接：

切换至蓝牙模式后，用手机或其他设备搜索蓝牙设备名“COLORFIRE CF100”进行配对连接。

产品手册声明

(1) 本手册上所有图片仅供参考，请以实物为准。产品信息会依不同国家及地区而有所变动，我们诚挚的建议您与当地的经销商或零售商确认目前销售产品的规格。

(2) 产品颜色可能会因拍照角度而与实际产品有所差异。我们会尽力提供正确与完整的数据到网页上, 并保留随时更正、修改页面信息的权利, 恕不另行通知。

(3) 为保证用户的安全及合法权益，请按照本使用手册操作。如不遵照本手册规范操作，对此所造成的后果我们不承担任何形式的责任。

(4) 以上所有产品所涉及的其它名称及商标，我公司拥有最终解释权。

本手册的版本会随着产品及驱动程序的升级而变动。

版权所有，不得翻印。

保修卡

型号：_____

姓名：_____

电话：_____

购买日期：_____

经销商盖章：_____

售后服务承诺：

1、本产品的保修严格按照国家“三包”规定执行。

2、自购买之日起，因产品本身质量问题引起的故障，实行七天内包退，十五天内包换，一年内免费维修。

3、连接线、电池等附件不属于保修范畴。

4、以下情况不属于保修范围，我公司可提供有偿服务：

①已超出保修期限；

②意外因素和人为因素引起的产品故障；

③因不可抗力力如地震、火灾等导致的产品故障或损坏。

5、购买日期以盖章的保修卡所填写之日期为准，如保修卡无效，以购买发票日期为准。

6、如您购买的产品出现问题，请将产品送至指定服务点，或者通过电话与我公司联系，需要保修时, 请将产品与本保修卡一同送往所购买之销售商处进行保修。运费由用户承担。

合格证

QUALIFIED CERTIFICATE

DEALER: 芯格瑞

DATE: _____

COLORFIRE

CF100

DESKTOP SPEAKER

INSTRUCTIONS

BASIC PARAMETER

·Horn size: 2 inches *2

·Output power: 3W*2

·Signal to noise ratio: ≥75dB

·Frequency response: 60Hz-16KHz

·Input power: USB power supply

PACKING LIST

·Speaker *1

·Instruction manual *1

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

OPERATION INSTRUCTION

3.5mm no light version

·Switch on and off:

Connect the speaker USB connector to the device, and power up the speaker.

·Connect the audio source and play music.

Connect the 3.5mm connector to the playback device and play music.

·Turn the knob to control the volume.

3.5mm light version

·Switch on and off:

① Connect the audio USB connector to the device and power the speaker.

② knob can control the switch machine.

·Connect the audio source and play music.

Connect the 3.5mm connector to the playback device and play music.

·Turn the knob to control the volume.

·Touch the gesture icon to control the light switch.

USB version

·Switch on and off:

① Connect the audio USB connector to the device and power the speaker.

② knob can control the switch machine.

·Turn the knob to control the volume.

·Gesture icon:

① Short touch switch lights.

② Press and hold to switch mode (Wired/Bluetooth).

·Bluetooth connection:

After switching to Bluetooth mode, use your phone or other device to search for the Bluetooth device name "COLORFIRE CF100" to pair the connection.

PRODUCT MANUAL STATEMENT

(1) All images in this manual are for reference only. Please refer to the actual product. Product information may vary by country and region. We sincerely recommend that you verify the specifications of the currently available products with local distributors or retailers.

(2) Product colors may vary from the actual product due to photography angles. We strive to provide accurate and complete data on the website and reserve the right to correct and modify page information at any time without prior notice.

(3) To ensure user safety and legal rights, please follow the instructions in this user manual. We do not assume any form of responsibility for consequences resulting from failure to follow the guidelines in this manual.

(4) The names and trademarks mentioned in relation to the products are subject to the final interpretation of our company. The version of this manual may change with product and driver upgrades.

All rights reserved. No reproduction allowed.

Warranty Card

Model: _____

Name: _____

Phone: _____

Purchase date: _____

Dealer stamp: _____

AFTER-SALES SERVICE COMMITMENT

1.The warranty for this product is strictly executed according to international regulations.

2. Accessories such as cables, batteries or others are not covered by the warranty.

3. The following situations are not covered by the warranty, and our company can provide paid service:

A. Beyond the warranty period;

B. Product malfunctions caused by accidents or human factors;

C. Product malfunctions or damage caused by irresistible forces such as earthquakes, fires, etc.

4. The purchase date is based on the date filled in on the stamped warranty card. If the warranty card is invalid, the purchase invoice date will be used.

5. If your purchased product encounters issues, please send the product to the designated service point or contact our company by phone. If repairs are needed, please send the product along with this warranty card to the seller from whom you purchased it. Shipping costs are the responsibility of the user.

合格证

QUALIFIED CERTIFICATE

DEALER: 芯格瑞

DATE: _____