 


Children's Video Intercom

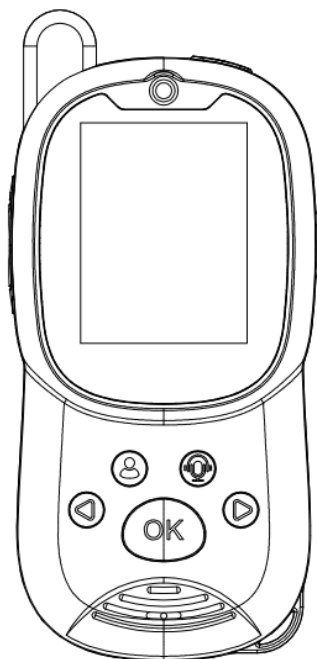 


User Manual

Please read this user manual carefully before using the product.

The manual is for reference only; actual operation should be conducted in accordance with the physical product.


I. Product Structure

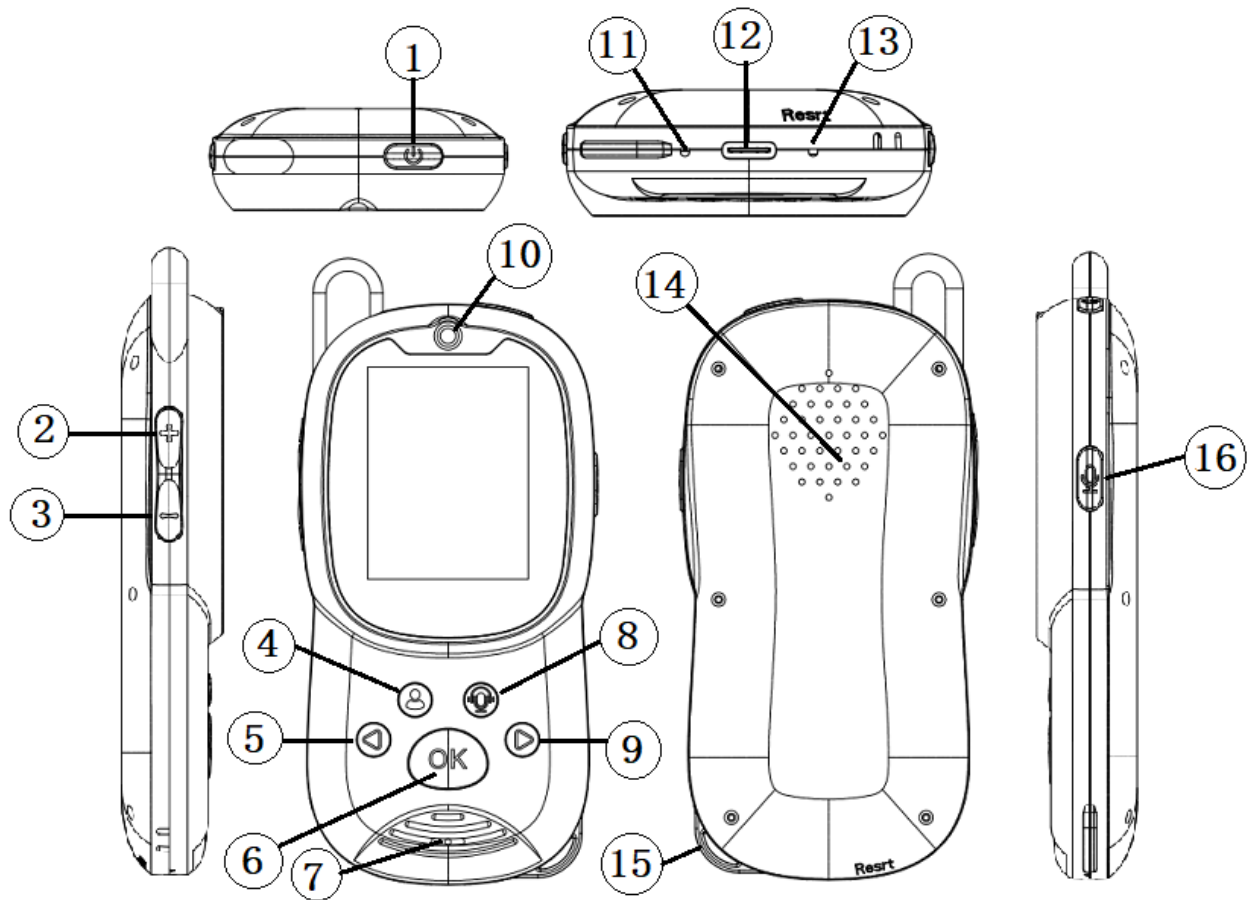

Product Description

1. Power On/Off Button	2. Volume Up Button (Up)	3. Volume Down Button (Down)	4. Sticker Button
5. Left Button	6. OK Button	7. Microphone Hole	8. Voice Changer Button
9. Right Button	10. Camera	11. Charging Indicator Light	12. Type-C Charging Port
13. Reset Hole	14. Speaker	15. Lanyard Hole	16. PUSH Button

 Power On/Off Instructions

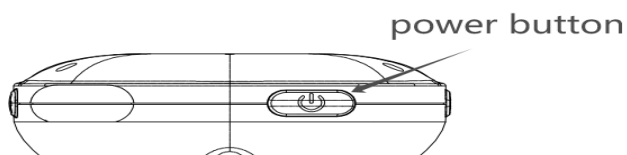

1. Press and hold the power button  for 3-5 seconds until the screen lights up and the device powers on.

II. Introduction to Button and Interface Functions

1. Power On/Off Button

- ① Press and hold the power button  for about 5 seconds to turn on the device, then press and hold  for about 5 seconds again to turn it off.
- ② When the device is on, you can access functions such as calls, camera, photo album, and settings. Tap the back button  to return.

2. Volume Up Button

- ① On the main screen, tap the volume up button  to increase the volume.
- ② In the chat interface, tap the volume up button  to scroll up through the chat history.

3. Volume Down Button

- ① On the main screen, tap the volume down button  to decrease the volume.
- ② After scrolling up through the chat history in the chat interface, tap the volume down button  to scroll down.

4. Sticker Button

- ① When taking photos, tap the sticker button  to display fun effects on the screen; tap again to switch to the next effect.
- ② In the chat interface, when sending a selfie, tap the sticker button  to display fun effects on the screen.

5. Left Button

- ① On the main interface, tap the left button  to go to the previous menu.
- ② In Micro Chat, Album, and Settings, it functions as the previous option selection.

6. OK Button

- ① On the main interface, tap  to confirm and enter the menu.
- ② In the application screen, tap  to select and confirm, then enter the app operation.
- ③ In Album, tap  to view photos; press and hold  to access the delete option.

7. Microphone Hole

- ① During voice calls, try to speak close to this area for clearer voice transmission. Speaking from a distance may cause voice interruptions.

8. Voice Changer Button

- ① In call applications, tap the Voice Changer Button  to change your voice into various effects; there are a total

of five types of voice options.

- ② Deep male voice , robot , child , alien , and clumsy character .

9. Right Button

- ① On the main interface, tap the right button  to go to the next menu.
② In Micro Chat, Album, and Settings, tapping the right button  functions as the next option selection.

10. Camera (30MP)

- ① When using video calls, you can see the other party.
② In the photo app, you can take selfies.

11. Charging Indicator Light (Red and Blue Lights)

- ① When the battery is low and connected to a TYPE-C charger, both red and blue lights turn on.
② When fully charged, the red light turns off and only the blue light remains on.

12. TYPE-C Charging Port (5V-2A)

- ① Used to connect an external power source to charge the battery or provide power for operation.

13. Reset Hole

- ① When the device freezes or crashes, insert a 1.0mm pin into the reset hole and press the internal button once to reset and power off the device. Then press the power button again to turn it back on.

14. Speaker Port

- ① The speaker that outputs the voice.

15. Lanyard Hole

- ① For attaching a lanyard.

16. PUSH Button

- ① In intercom mode, press and hold  to start talking; release to end the conversation.
② In chat mode, **select album gallery** , then tap the button  to send. Press and hold the push button to record a voice message; release to send.

III. Basic Operation Instructions

1. Power On and Power Off

- ① Press and hold the power button  for about 5 seconds to turn on the device, then press and hold  for

about 5 seconds again to turn it off.

2. Micro Chat

(1) Tap the button  to enter Micro Chat.

① For the first icon , tap the OK button to call another video mini phone. Wait for the other party to confirm the connection. Once the other party taps the OK button, the video call is connected, and both mini phones can see each other. Press and hold the PUSH button  (do not release) for 1 second, speak into the microphone, then release the button 1 second after finishing speaking to send the voice message to the other mini phone.

② Tap the button  to switch between enlarging or shrinking the avatars (or visible objects) of both parties.

③ Tap the button  to display fun shapes on the screen; tap again to switch to the next shape.

④ Tap the Voice Changer Button  to change the transmitted voice into various effects; there are a total of five types of voice options.

(2) Tap  once to horizontally select voice chat 

① Press and hold the PUSH button  to speak; the voice chat icon  will turn green. Release the button after speaking to send the voice message.

② Tap   to browse chat history.

(3) Tap  once to horizontally select emoji sending 

① Press the OK button to enter the emoji library, tap the left and right buttons   to select an emoji pack, and then tap the PUSH button  to send.

② Tap   to browse chat history.

③ Tap the power button  to exit the chat interface.

(4) Tap  once to horizontally select and send photos from the album gallery 

① Tap the OK button to enter the album gallery, tap the left and right buttons   to select a photo, then tap the PUSH button  to send it. (If you tap OK after selecting a photo, it will enlarge for viewing; to exit, tap the power button )

② After sending, tap the power button  to exit.

(5) Tap  once to horizontally select and send a selfie 

① Tap the OK button to enter selfie mode, which activates the camera. Aim the lens at yourself, adjust the angle, then tap OK to take and send the photo.

- ② After sending, it will automatically return to the chat screen.

3 Camera

- ① Tap OK to enter the camera function. Aim the lens at yourself, adjust the angle, then tap OK to complete the selfie. The photo will be saved to the album. (You can take up to 10 photos in total.)
- ② Tap the power button  to exit the camera function.

4 Album

- ① Tap OK to enter the album. Once inside, you can view the photos you have taken. Tap OK to enlarge a photo for viewing. Tap the power button  to exit the enlarged view. Press and hold OK to enter the delete interface, then choose YES or NO to confirm whether to delete the photo.
- ② Tap the power button  to exit the album.

5 Settings

- ① Tap OK to enter Settings. Tap the left and right buttons   to navigate through the options, and then tap OK to confirm your selection.
- ② Tap the left and right buttons   to choose settings such as Language, Brightness, Sleep Mode, Sound, Version, FACTORY RESET, etc.
- ③ After making your selection, tap OK to confirm. Tap the power button  to exit Settings.

IV. Product Usage Precautions

1. Upon receiving the product, first charge it using a 5V 2A adapter and a TYPE-C charging cable. Connect the cable to the device and charge for 1-2 hours. When the red light turns off, the battery is fully charged and the device is ready for use.
2. We recommend chargers with the output voltage of 5V/2A to avoid damage to the lithium battery or the device.
3. When your product has not been used for a long time and can not be powered on normally, please charge it with (5V2A) charger for 15 minutes, and then press the Reset button to power it on again.
4. When your product completely powers off, please charge it in time for 1-2 hours to keep the battery in a high level state, to avoid being in a protective state of low power over-discharge and unable to power on

V. Troubleshooting

Won't Power On	The device may be out of power. Charge it fully before turning it on again.
Cannot use the intercom function	Please check if the devices are paired. While both devices are powered on, press and hold the OK button on each device to enter the pairing interface. There will be a 30-second countdown for pairing. If pairing is successful, the device will return to the main screen.

Cannot pair	Check the color of the dots in the upper left corner of both devices. Two green dots or two red dots mean pairing is not possible. Press and hold the Voice Changer Button  on either device until it powers off, then turn it back on. The color of the dot in the upper left corner will change, allowing pairing. Then, press and hold the OK button on both devices to enter the pairing interface and pair within 30 seconds.
Cannot transmit voice	Please refer to the manual. You need to press and hold the PUSH button  (do not release) for 1 second, speak into the microphone, then release the button 1 second after finishing speaking to send the voice message to the other mini phone.

Overview

1. Before using the device, please read the manual carefully to ensure safe and correct use.

Random assembly of components

Main unit, manual, Type-C USB cable, and color box.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction