

PRODUCT USER MANUAL

DP104

Ticktype[®]


Wireless Bluetooth Keyboard




Keyboard Connection	1-3
Basic Keyboard Keys	4
FN Combination Function Keys	5
FN Combination Lighting Control Keys	6
Keyboard Indicator Lights	7
Custom Keys	8
Custom Dot-Matrix Screen	9
Keyboard Disassembly	10
FCC Warning	11

USB Connection

USB Name: TICKTYPE DP-104

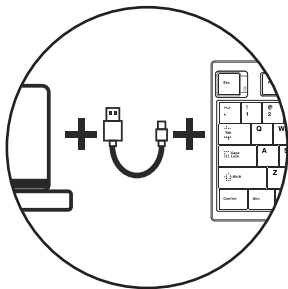


1. Insert the USB-C cable into the keyboard port, and connect the other end to the computer.

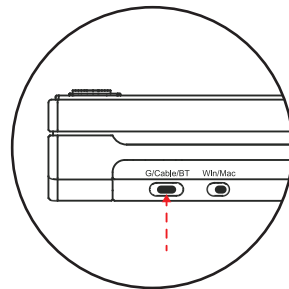


2. Switch the toggle to the position shown in the diagram to enable USB connection mode.

Bluetooth Connection


Bluetooth name: TICKTYPE DP-104 BT1/BT2/BT3

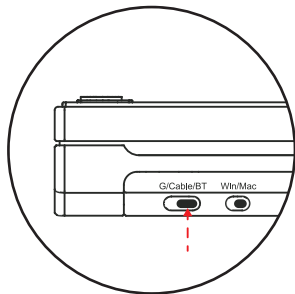

1. Switch the toggle to the position shown in the diagram to enable bluetooth connection mode.

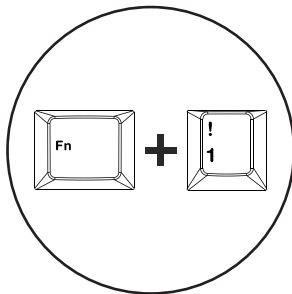

2. Press and hold FN + 1 for three seconds until the indicator light under the key flashes to start pairing.

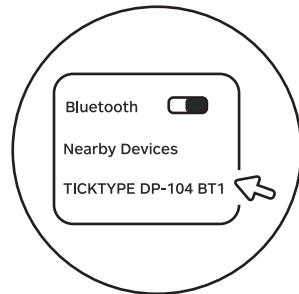

3. Turn on the device's Bluetooth and search. The device name is TICKTYPE DP-104 BT1. Click to pair.


Note 1: Bluetooth can pair with a maximum of 3 devices. Press and hold FN+2 or FN+3 to pair with the other two devices.

Note 2: Briefly press FN+1!, FN+2@, or FN+3# to switch between the three devices that have already been paired.


Note 3: If the keyboard is unresponsive after connection, turn off the "N-Key Rollover" in the driver to resume normal operation.

2.4G Connection

2.4G Name: TICKTYPE DP-104 2.4G

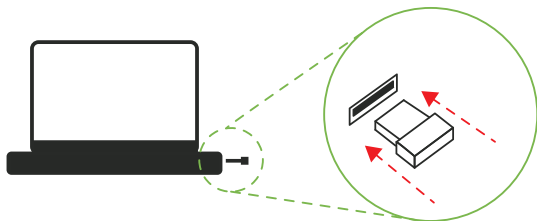

1. Connect the 2.4GHz receiver to the USB port.

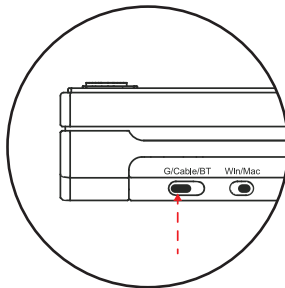


2. Switch the toggle to the position shown in the diagram to enable the 2.4GHz mode.

Note : If the keyboard is unresponsive after connection, turn off the "N-Key Rollover" in the driver to resume normal operation.

Keycap Replacement

If you are a Mac user, please find the corresponding keycaps from the included Mac keycap set and replace them according to the diagram below.

You may also freely swap the ESC and Enter keys with the included novelty keycaps.

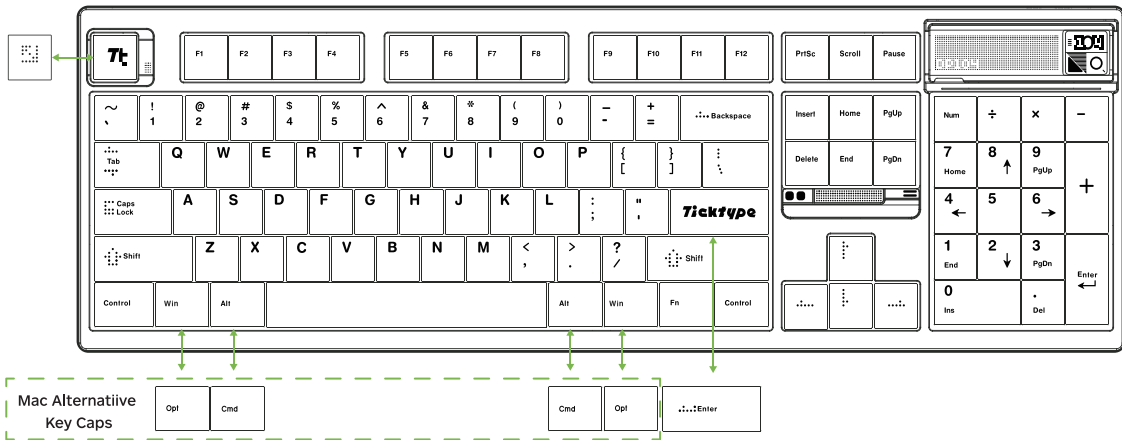

Note: Do not use inferior or non-standard cables. It is recommended to use the original cable or a high-quality, verified brand cable to avoid issues caused by poor contact or unstable current/power.



Windows FN Key Combinations

FN +	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12	Delete	Win
Function	Screen Brightness -	Screen Brightness +	Home page	Mail	Calculator	Play/ Pause	Previous Track	Stop	Next Track	Mute	Volume -	Volume +	Press and Hold for 3s: Restore Factory Settings	Press and hold WIN for 3 seconds to lock

MAC Function Keys

	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
Function	Brightness-	Brightness+	Control Centre	Focus Search	Voice Input	Screenshot	Previous Track	Play/ Pause	Next Track	Mute	Volume -	Volume +

MAC FN Key Combinations

FN +	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
Function	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12

FN + D Combination to Check Battery Level

FN +	D
Function	Check Battery Level

Esc key indicator light

Red light (0-20%), orange light (21-50%), yellow light (51-80%), green light (81%-100%).

Red light flashing at 10% of the battery or below (unless the lights are physically turned off).

Note: To use FN key combinations, you must press and hold the FN key and then press the corresponding key.

FN Combination Backlight Control

FN +	Z	X	C	V	B	N	M	<	>	↑	↓
Function	Backlight On/Off	Switch to Next Backlight Effect	Switch to Previous Backlight Effect	Backlight Hue +	Backlight Hue -	Backlight Saturation +	Backlight Saturation -	Backlight Brightness +	Backlight Brightness -	Backlight Speed +	Backlight Speed -

FN Combination Ambient Light Control

FN +	Q	W	E	R	T	Y	U	I	O
Function	Ambient Light On/Off	Switch to Next Ambient Light Effect	Switch to Previous Ambient Light Effect	Ambient Light Hue +	Ambient Light Hue -	Ambient Light Saturation +	Ambient Light Saturation -	Ambient Light Brightness +	Ambient Light Brightness -



Backlight

Ambient Light

Note: To use the above shortcuts, you must first press and hold the FN key, and then press the corresponding key.

2.4G Connection Indicator Light

Scroll Lock Status Indicator Light

Battery Indicator Light


USB Connection Indicator Light

Bluetooth 1 Connection Indicator Light

Bluetooth 2 Connection Indicator Light

Bluetooth 3 Connection Indicator Light

WIN Lock Indicator Light

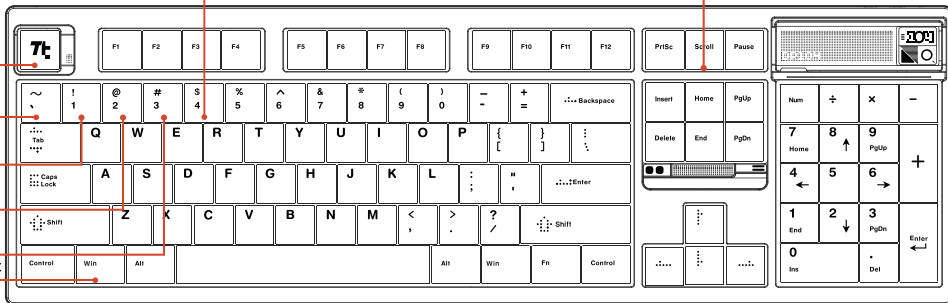


1. When connected online, log in to the web driver at <https://cfg.ticktype.com>.
2. After successfully connecting, first click on the key you want to change (at the top), then click on the target key (at the bottom) to complete the custom key setting.




Custom Animation

1. When connected online, log in to the web driver at <https://cfg.ticktype.com>.
2. After successfully connecting, go to the lighting page and use the tools on the right to design the animation effect.
3. Once the design is complete, click save to finish uploading the animation.
4. Press the lighting key to switch to DIY mode to view your custom animation.


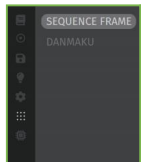


Custom Pop-up / Scroll Text


1. When connected online, log in to the web driver at <https://cfg.ticktype.com>.
2. After successfully connecting, enter characters into the input box on the right side.
3. Once you have saved and completed the custom pop-up/scroll text upload.
4. Press the lighting key to switch to scroll mode to view your custom pop-up/scroll text.

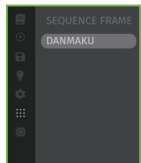

1. The keyboard has a quick-release design. Use both hands to hold the seam between the upper and lower covers. Press the keys with your palms, then use your fingers to push against your palms and separate the upper and lower covers.

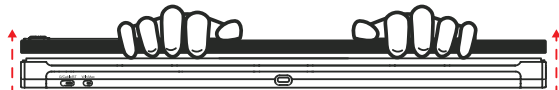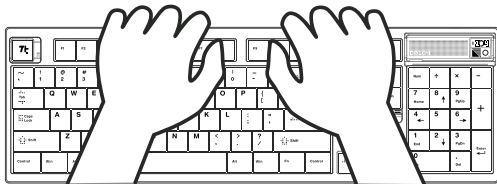

2. Use one hand to lift the top cover, and use the other hand to press the direction keys to avoid scraping the keycaps while removing the top cover.

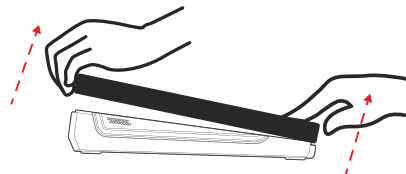

Note: When disassembling the upper cover, lay the keyboard flat and disconnect it from the device.

FCC Warning

This product complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note 1: This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the device and receiver.
- Connect the device to an outlet on a different circuit from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note 2: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device. The device has been evaluated to meet general RF exposure requirements and is safe for portable use without restrictions.

RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction



Ticktype