 
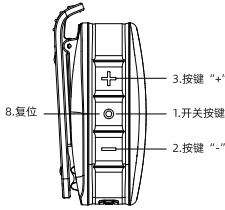 
 
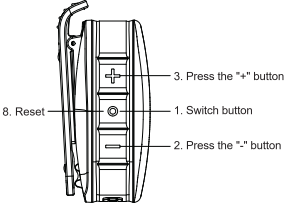 


70 mm

M1 便携式无线音响  说明书	技术规格: 蓝牙版本: 5.4 电池: 3.7V-500mAh 扬声器: 33mm*1 40SW 输出功率: 5W 充电方式: Type-C 5V/500mA 频率响应: 70Hz-20Khz 支持: IPX7 TWS 特点: 1.无线连接 2.记忆功能 3.内置锂离子电池 4.支持MP3音乐格式解码 5.使用高保真扬声器, 声音更自然细腻 6.7级防水 7.1+1 设备串连功能	Wireless speaker - M1  M1 按键指示剖面图	按键说明: 1.开关按键 长按开关机 约2秒/次。 单击: 播放/暂停。 双击: TWS对联模式 再次双击取消TWS对联模式。 三击: 断开以链接的蓝牙设备。 通话: 来电点击接听, 在次单击挂断, 长按1.5秒相接。 2.按键 "+" 单击: 音量减 长按: 上一曲。 3.按键 "-" 单击: 音量加 长按: 下一曲。 4.指示灯状态 开机蓝灯常亮2秒左右, 蓝牙配对状态: 红蓝交替闪, 约0.5秒/次 连接上状态: 蓝灯慢闪 约5秒/次。 低电状态 红灯慢闪。约5秒闪烁一次。关机状态红灯闪烁3下。 5.充电指示灯 充电时红灯亮 充满电 红灯灭。 6.语音提示 6.1.开/关机有语音提示音。 6.2.音量加到最大音量有语音提示, 最小音量无语音提示。 6.3.低电3.3V低音提示3次 关机; 指示灯红灯慢闪。 7.音量要求 开机默认音量50%。 8.复位 当机器出现异常情况时, 长按开关机8秒自动复位。 9.Type-C 插孔 充电线接口, 插入Type-C充电线时, 默认为设备充电。 10.省电功能 无工作状态 5分钟自动关机, 指示灯红灯闪烁3下。	Wireless speaker - M1 使用说明: 1.无线配对 1.1.在使用无线配对之前, 请先打开音频电源, 这已经是默认的无线模式。 1.2.打开无线设备, 搜索M1 连接和配对, 连接成功后, 开始播放音乐体验。 2.适用于各种手机配件无线技术、无线适配器、无线播放器。 3.语音提示 3.1. 开机/关机时有语音提示; 3.2.当音量增加到最大音量时, 将有语音提示, 最小音量将没有语音提示。 3.3.检测到3.4V低电量提示3次后停机; 4.指示灯状态 开机蓝灯常亮2秒左右, 蓝牙配对状态: 红蓝交替闪, 约0.5秒/次 连接上状态: 蓝灯慢闪 约5秒/次。 低电状态 红灯慢闪。约5秒闪烁一次。关机状态红灯闪烁3下。 5.TWS操作说明 同时打开任意两个扬声器, 单击一个TWS串行键, 当TWS连接成功时, 听到“嘟嘟”声, 进入TWS搜索。 当连接提示音响起时, 主机指示灯闪烁, 副驾驶亮起, 6.充电指示灯 充电时红灯亮 充满电 红灯灭 7.音量 开机默认音量50%音量。	故障排除: 1.自动关机: 电池电量不足时会自动开启电池保护, 请充电二小时后使用。 2.按键无反应或功能错乱: 关机后重试。 3.当机器出现异常情况时, 可长按开机按键8秒复位。 8.充电使用 本机内置过充保护电路, 可长时间连接电脑或充电器, 约二小时即可完成充电。每个电池的播放时间会因使用不同大小的音量而有所不同。 9.无工作状态, 5分钟后自动关机。
M1 Portable Wireless Speaker  Instruction Manual	Technical Specifications: Bluetooth version:5.4 Battery:3.7V-500mAh Speaker:33mm*1 4Ω 5W Output power: 5 W Charging:Type-C 5V/500mA Frequency response:70Hz-20Khz Support:IPX7 TWS Features: 1. Wireless connection 2. Memory function 3. Built in lithium-ion battery 4. Supports decoding MP3 music format 5. Use high fidelity speakers for a more natural and delicate sound 6.7 waterproof level 7.1+1 Device Connection Function	Wireless speaker - M1  M1 button indication section view	Button instruction: 1. Switch button Press and hold the power button for approximately 2 seconds per operation. Click: Play/Pause. Double-click: TWS Pairing Mode Double-click again to cancel TWS Pairing Mode. Triple tap: Disconnect the linked Bluetooth device. Call: Click to answer incoming calls, click again to hang up, or press and hold for 1.5 seconds to reject. 2. Press the "-" button Click: Volume down Long press: Previous track. 3. Press the "+" button Click: Increase volume Long press: Next track. 4. Indicator Light Status The blue light remains on for about 2 seconds when powering on. Bluetooth pairing status: red and blue lights alternate flashing, approximately 0.5 seconds per cycle Connection status: Blue light flashes slowly at approximately 5 seconds per cycle. Low battery status The red light flashes slowly, approximately once every 5 seconds. In shutdown mode, the red light flashes three times. 5. Charging Indicator light The red light turns on during charging and turns off when fully charged. 6. Voice prompt 6.1. There is a voice prompt when turning the device on/off. 6.2. There is a voice prompt when the volume is increased to the maximum, but no voice prompt when it is decreased to the minimum. 6.3. Low battery (3.3V): Three low-bass prompts followed by shutdown; red indicator light flashes slowly.	Wireless speaker - M1 Directions for use: 1.Wireless pairing 1.1. Before using wireless pairing, first turn on the audio power. It is already the default wireless model. 1.2.Turn on the wireless device, search for M1 connect and pair, connect After success, start playing music experience. 2.Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player, 3.Voice prompt 3.1. There is a voice prompt when turning on/off; 3.2.When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt. 3.3.Shut down after detecting 3.4V low power prompt 3 times; 4. Indicator light status The blue light stays on for about 2 seconds when turned on. Bluetooth pairing status: red and blue flashing alternately, approximately 0.5 seconds/connection status: The blue light flashes slowly for about 5 seconds/time. Low battery stateThe red light flashes slowly. Flashing approximately every 5 seconds. The red light flashes three times in the shutdown state. 5.TWS Operating Instructions Open any two speakers at the same time, click one TWS serial key,When you hear the "beep" to enter the TWS search, when the TWS connection is successful,When the connection prompt tone sounds, the host indicator flashes and the copilot lights up, 6.Charging indicator The charging red light is always on and the charging red light is off 7.Volume The default speaker volume is 50%. 8.Charging use: The machine has built-in overcharge protection circuit, which can be connected to the computer or charger for a long time, about 2 hoursThe charging is complete, The playback time of each battery will vary depending on the volumeIt is different. 9.No working state, automatic shutdown after 5 minutes.	Troubleshooting: 1,Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge it for 2 hours before use, 2. No response or malfunction of buttons: retry after shutting down. 3.When the machine encounters abnormal conditions, press and hold the power button for 8 seconds to reset.

42.5mm

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.