

 
Instruction Manual

Wi-Fi camera Manual

Operating Frequency Band: 2400-2500MHz
Maximum Radio-Frequency Power: 20dBm
Please read the Manual carefully before using the product and keep it properly.

Connection Instructions

Connect the power interface and the power socket with the power cord.

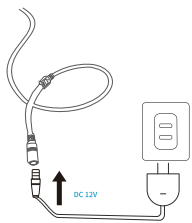


01

Installation guide

1 Choose a location

 Please install the camera in a location where the field of view is not blocked, and make sure that the location of the camera has a good wifi signal.

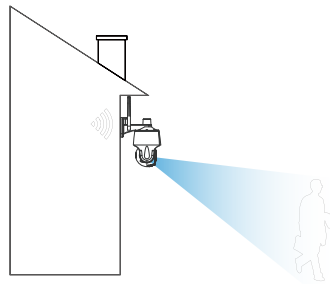

02

Voice broadcast instructions

Device status	Voice broadcast
Normal start	Network connection is successful, please open the APP to add a device
Normal reset	The reset is complete, the device is about to restart
Abnormal reset	Reset failed, please reset after connecting to the Internet or delete the device on the APP
QR code network configuration	Identify broadcast ding~
Alarm broadcast	Alarm sound

Camera reset

- When the camera is powered on, press and hold the reset button for 3-5 seconds until you hear a voice prompt and a prompt sound of "reset is complete, the device will be restarted soon", that is, the reset is successful.

03

Device connection

1 Download the APP

Scan the QR code below to download and install the APP.



 
2 Register and log in to the APP

- Please register an APP account and log in.
- If you have already registered, please log in directly.


04

Connection method--Bluetooth

- Find the device Bluetooth, and click "Connect."
- Click "+Add," the page jumps to figure 2.

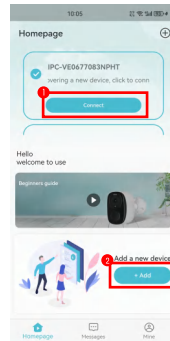

 - Find the device Bluetooth, and click "Connect."

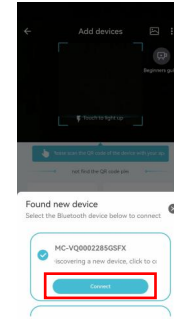


05

- Select WiFi, enter the correct password, and click "Next."



 
- Waiting for connection.

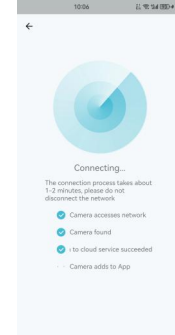


06

Connection method--Scan the QR code

 - Click "+" to add device.

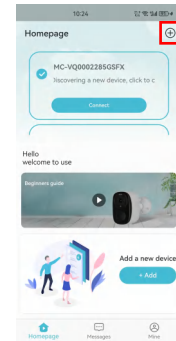

- Scan the QR code on the camera label.

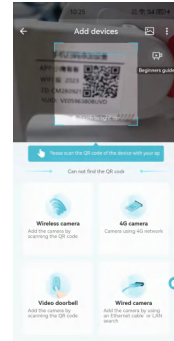 


07

- Upon hearing a sound or seeing the indicator light flashing, check and click "Next."



 - Select WiFi, enter the correct password, and click "Next."

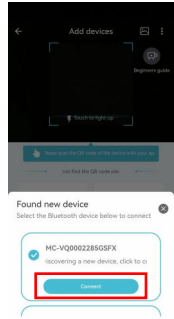


08

- Align the QR code with the camera.




 - Click on the input box, customize the device name, and click "Get started."

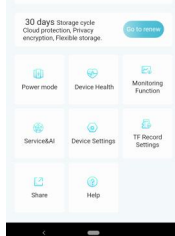

09

 
Device sharing

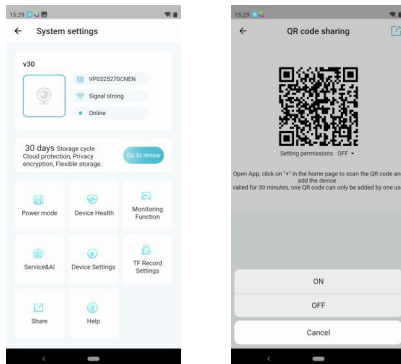

Open permission of Device sharing, the person being shared can set the function of the device. If the permission is turned off, you can only watch the video, and cannot set the function.


10

 Linkage correction

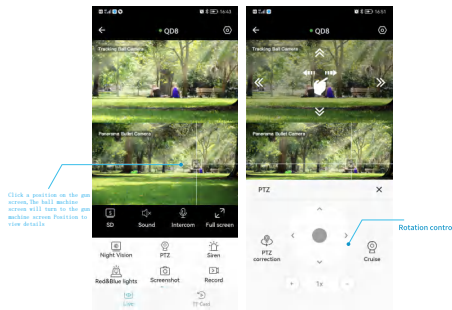

11

 
Function settings

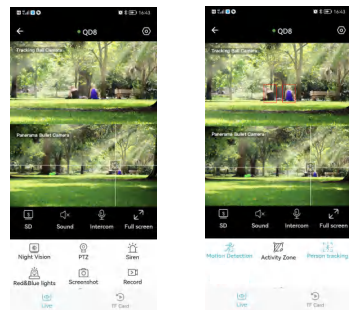

12

Camera linkage

 When you click a position on the gun screen, the ball screen will turn to the gun screen. When there is an error in the corresponding position of the screen, using the camera linkage function Correction position

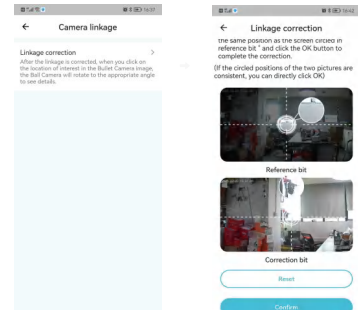

Camera linkage

Linkage correction

13

FAQ

1. How do I invite family and friends to use my camera together?

A: Open the APP and select your camera in the home page. Click "Share" in the camera settings to enter the sharing page, and a QR code will be automatically generated. Your friends can open the app and gain some access by scanning the QR code in their phone.

2. Why doesn't the Wi-Fi name appear when I connect to Wi-Fi?

A: On Apple devices with iOS 13 and above, you need to turn on the "Location Permission" of the app in the system settings and change it to "Allow while in use".

3. Will the camera display a red light after turning on the night vision function?

A: The built-in IR LED lights, when the night vision is turned on, the camera only displays some faint red lights, but the picture quality is still clear in the dark environment.

4. What are the requirements for Wi-Fi?

A: Please use 2.4GHz wireless network. The device does not support 5GHz wireless networks. At the same time, please set the Wi-Fi authentication method to WPA2-PSK or other lower-level security methods, and need to set a password.

13

5. How far should the camera be from the router?

A: After testing, the Wi-Fi connection distance can normally reach 150 meters in an open area. But the actual situation depends on the strength of the Wi-Fi and its surroundings (thick walls, electromagnetic devices, large metal objects can all cause interference to the Wi-Fi signal). If the camera connection is weak or unstable, place the camera as close to the router as possible.

6. What should I do if the equipment fails?

A: Long press the power button to restart the camera. If there is no response, you can open the USB silicone cover at the bottom of the camera, long press the reset button to reset, and then long press the power button to restart the camera.

7. Can't add a camera for the first time?

A: When adding a camera for the first time, make sure the camera is powered on and the working status light is Blue flashes slowly. Or hear "Please use the App for WiFi configuration" from the camera.
1). Make sure the WiFi account and password are correct.
2). The camera only supports 2.4GHz WiFi and does not support 5G frequency band. Please do not use 5G WiFi to configure the network.
3). When adding a camera, ensure that the network is smooth, and it is recommended to operate close to the router.
4). If the QR code network configuration is unsuccessful, try to use the AP network configuration (the mobile phone can be

14

automatically added after connecting to the WiFi hotspot issued by the camera and returning to the App); the password should not be set as complicated as possible, and it does not contain special characters such as \.
5). If the two methods are still unable to connect to the Internet, it is recommended to restart the router and try again.
6). Provide the nameplate label of the router.

8. TF card not recognized?

A: After inserting the TF card into the TF card slot of the camera, check whether the capacity of the TF card is displayed in the "System Settings" - "TF Card Recording Settings" of the device in the APP. If it prompts "No TF card detected", it means that the TF card recognition failed.
1). Please use brand TF card.
2). The TF card can be recognized by the computer normally.
3). Only FAT32 format is supported.
4). The recommended TF card capacity is between 2-128G.
5). It is recommended to use a high-speed TF card of Class 4 and above.
6). Try to insert and unplug the TF card several times.
7). It is recommended to try another TF card.
8). It may take some time for the camera to recognize the TF card. After inserting the card, wait for about 30S before observing.

15

Warranty Card

User name: _____
Address: _____
Telephone: _____
Fax: _____

Post code: _____
E-mail: _____
Product model (Model): _____
Product Number (S/N): _____
Production Date: _____
Purchase Date: _____
If you have other requirements, please fill in below: _____

Dealer: _____ Telephone: _____
Distribution unit: (seal)

