 


USE AND CARE GUIDE

8 IN CEILING LIGHT WITH REMOTE

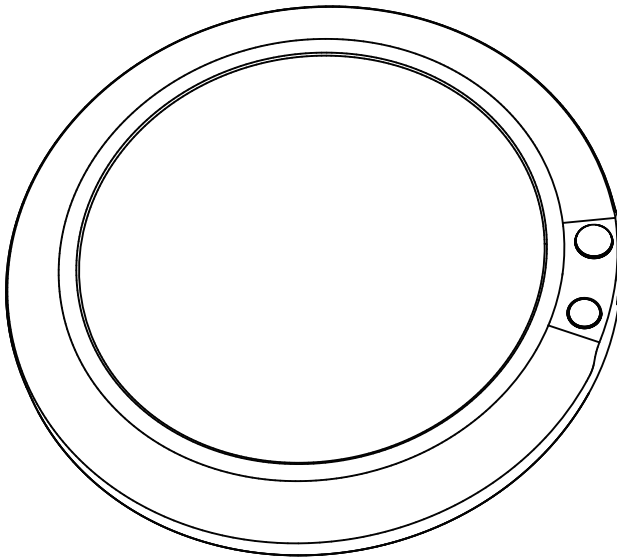

Questions, problems, missing parts?

Before returning to the store, call Ecosmart Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-910-7164

HOMEDEPOT.COM/ECOSMART

THANK YOU

We appreciate the trust and confidence you have placed in Ecosmart through the purchase of this 8 in ceiling light with remote. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Ecosmart !

Table of Contents

Safety Information	2	Installation-Metal Pads with Magnets	5
Warranty.....	3	Installation -Metal Pad with Mounting Screws	5
Pre-Installation	4	Operation.....	6
Planning Installation.....	4	Maintenance	7
Tools Required	4	Care and Cleaning	7
Package Contents	4	Troubleshooting.....	7

Safety Information

Carefully read and understand the information in this manual before you operate this ceiling light. Failure to do so could lead to a malfunction of the product or personal injury.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: Do not stare directly into the ceiling light when it is turned on as it is designed to have a high brightness mode. Do not puncture, damage or dismantle the ceiling light, nor replace the battery.



- Keep the ceiling light away from fire, erosive materials, corrosive and/or explosive gas, dust, sparks and chemical, medical and electronic devices, including magnetized data devices, and hot steaming areas, as damage can occur.
- Use the USB-C charging cable provided in the package with an appropriate DC5V.
- Avoid dropping the ceiling light as damage to the plastic cover or other electronic components can occur.
- Handle the casing with care.
- Be careful of personal injury from metal pad.
- Do not apply the adhesive strips and metal pads in humid, dusty, rough or unclean locations, or the metal pads may fall down.
- Use the ceiling light indoor and dry location only.
- Non-rechargeable batteries are not to be recharged.
- Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries.
- Do not mix old and new batteries.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

NOTE: FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including the interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Responsible Party:

The Home Depot
2455 Paces Ferry Road Atlanta, GA 30339 USA
1-800-910-7164



NOTE: Always follow the good practice of charging the ceiling light which contains lithium ion battery to its full capacity before operation or prolonged storage. To maintain the proper ceiling light, functionality of the it is recommended to charge it once every three months.

Warranty

LIMITED WARRANTY

WHAT IS COVERED

Ecosmart products are manufactured with Superior quality standards and workmanship and are backed by our limited lifetime warranty. Ecosmart products are warranted to the original consumer purchaser to be free of defects in materials or workmanship. We will replace FREE OF CHARGE any product or parts that proves defective. Simply, return the product /part to any of The Home Depot retail locations or call 1-800-910-7164 to receive the replacement item. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available for all Ecosmart warranty claims.

WHAT IS NOT COVERED


This warranty excludes incidental/consequential damages and failures due to misuse, abuse or normal wear and tear. This warranty excludes all industrial, commercial and business usage, whose purchasers are hereby extended a one(1) year limited warranty from the date of purchase, with all other terms of this warranty applying except the duration of warranty. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state and province to province. Contact the Customer Service Team at 1-800-910-7164 or visit HOMEDEPOT.COM/ECOSMART.

Pre-Installation

PLANNING INSTALLATION

- Estimate installation time: 5 minutes.
- Before beginning installation or operation of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents.
- If any part is missing or damaged, do not attempt to install or operate the product, contact customer service for replacement parts.
- If you are unfamiliar with electrical installations, we recommend you contact a qualified electrician to do the installation.


TOOLS REQUIRED

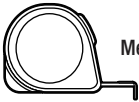

Measuring Tape



Phillips

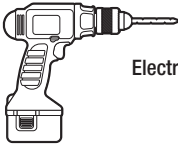

Electric Drill



Hammer


HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



EE

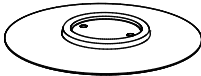


FF



GG

Part	Description	Quantity
EE	Anchors	2
FF	Metal pad	1
GG	Mounting screws	2

PACKAGE CONTENTS

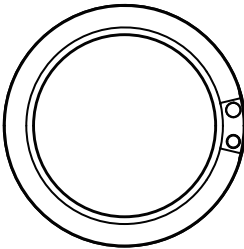

A



B



D




C

Part	Description	Quantity
A	8in rechargeable ceiling light	1
B	Remote(2 x AAA battery included)	1
C	USB-C charging cable	1
D	Adhesive strip	1

Installation - Metal Pad with Magnets


1 Positioning the adhesive strips and metal pad

- Remove the metal pad (FF) from the back of the ceiling light.
- Use a clean, dry cloth to wipe the surface of the mounting location.
- Measure and mark the locations for the adhesive strip (D) and metal pad (FF) in relation to the magnets on the back of the ceiling light (A).
- Once the mounting locations are determined, peel off one film of adhesive strip (D) and paste them on the locations.
- Peel off the other film of adhesive strip (D) and put metal pad (FF) on them.

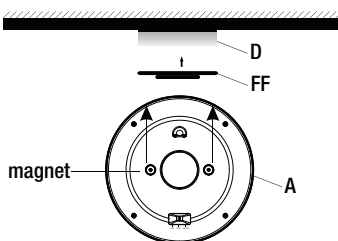

2 Installing the ceiling light


- Position the magnets on the back of the ceiling light (A) over the metal pad (FF) to secure the ceiling light in place.

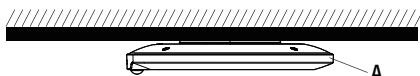

Installation - Metal Pad with Mounting Screws


1 Positioning the mounting screws

- Measure and mark the locations for the mounting screws (GG) in relation to the screw holes on the ceiling light(A).
- Drill two pilot holes at the marked points slightly smaller than the anchors (EE).
- Insert the anchors (EE) into the holes, align the metal pad (FF) with the holes.
- Secure the metal pad firmly using the mounting screws (GG).

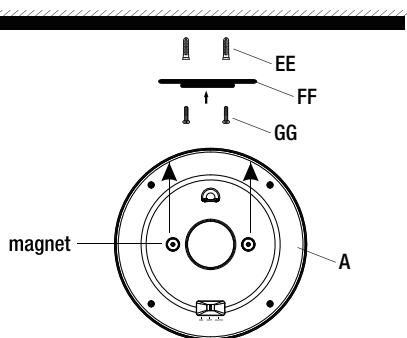

2 Installing the ceiling light


- Position the magnets on the back of the ceiling light (A) over the metal pad (FF) to secure the ceiling light in place.

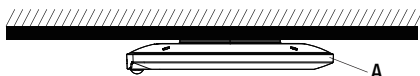

Operation

1 Turning the light on/off

- Push to "ON" to turn on the light.
- Push to "OFF" to turn off the light.

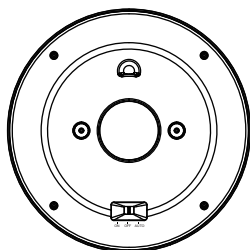

2 Setting the motion detection


Push to "AUTO":

- The light will turn on for 10 seconds to detect ambient light and turn off.
- The light will automatically turn on when it detects human presence within its sensor range if there is lack of ambient light, it will stay on continuously as long as presence continues. And will automatically turn off after 15 seconds of no human presence is detected or when there is sufficient ambient light.

3 Adjusting brightness and colors

Button Press Functions (Apply to both ON and AUTO modes):

- Short Press: Cycles through 5 color temperatures: 2700K- 3000K - 4000K- 5000K-5700K.
- Long Press: Activates smooth dimming. Brightness changes from 10% to 100%. At 100%, the light stops dimming. Release the button and long press again: brightness decreases from 100% to 10%. At 10%, the light stops dimming. Release the button to keep the selected brightness level.

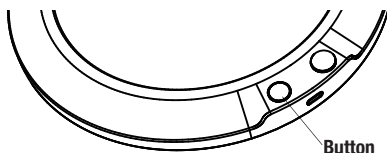

4 Remote control functions


- Press ON/OFF: Turns the light On or Off.
- Press AUTO: Setting the motion detection.
- Press (A) : Set the detection range to near.
- Press (M) : Set the detection range to mid.
- Press (F) : Set the detection range to Far.
- Press (+/-) : Adjusts brightness cycles through 5 levels: 100% -70% - 50% - 30% - 10%.
- Press (+/-) : Select 5 color temperatures: 2700K- 3000K - 4000K- 5000K-5700K.
- Press (15/30/60/120) : Sets the auto-off timer: 15 min / 30 min / 60 min / 120 min . The light will turn off after the selected time period.

NOTE: If any other button is pressed while the timer is active, the timer function will be cancelled.

5 Charging the light

- Use the included USB-C charging cable to connect the light to a 5V, 2A charger (charger not included) until the indicator changes from red to green. A fully charged takes about 6 hours.

Note: For optimal performance and a faster charging experience, please turn off the light during charging.

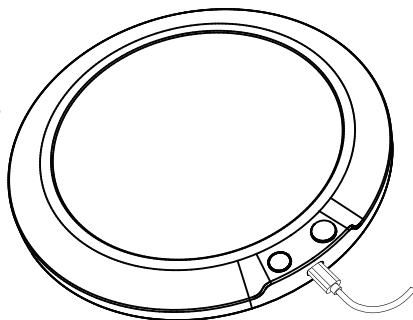

Maintenance

- Turn off the ceiling light if not needed.
- It is recommended to charge it once every three months.

Care and Cleaning

- Before cleaning the ceiling light, make sure it is not connected to a power source.
- Wipe the ceiling light with a piece of white tissue or soft cloth when dirty.
- Avoid spraying water or any liquid on the light, especially at the charging port.
- Do not use solvents or cleaners containing abrasive agents when cleaning the **ceiling light**.
- Ensure the surface of metal pad is clean, dry, dust-free and smooth before attaching the **ceiling light**. It is recommended to press them strongly to the surface with your fingers.
- After installation, ensure the light is securely attached and stable.

Troubleshooting

Problem	Possible Cause	Solution
The Ceiling light will not turn on.	The light needs recharging.	□ Charge the light.
	The light is turn off.	□ Ensure the switch is on "ON" or "AUTO" modes.
	Light is damaged.	□ Return the light for a replacement if it's still within the warranty period.
The Ceiling light cannot be charged.	USB connection is poor.	□ Properly reconnect the USB-C charging cable.
	The Li-battery is damaged.	□ Charge the light every three months. Not charging it for a long time will damage the Li-battery.
The press button is not working.	The press button is damaged.	□ Use Remote to control the light or return the light for a replacement if it's still within the warranty period.
The motion sensor turns on the light too easily.	The detection range is set too far.	□ Use the remote control to adjust the sensor range. Press "Near" or "Mid" to reduce the detection range and prevent false triggers.
The light remains on continuously after being triggered in "AUTO" mode.	Moving objects such as oscillating fan blades, robotic vacuums, or baby cribs within the detection area.	□ Keep oscillating electrical appliances away from the light's detection range.
	Curtains, tree branches, flowers, or other dynamic objects swaying violently due to strong winds in the detection area.	□ Secure curtains, tree branches, flowers, etc., to reduce violent swaying, or move them away from the light's detection range.
	Detection distance is set too high.	□ Reduce the detection distance by setting the remote control to "Mid" or "Near" to minimize detection of slight movements.
	Pets moving within the detection area.	□ Adjust the installation height of the light (recommended ≥ 2.5 meters) to reduce detection of small ground objects.
	Ambient light interference (e.g., flickering strong light).	□ Use the product indoors and avoid direct exposure of strong light to the light's detector.
	Equipment malfunction or false triggering.	□ Turn off the light's power, restart it, and observe if it returns to normal. If not, contact the brand's after-sales technical support.



Questions, problems, missing parts? Before returning to the store,
call Ecosmart Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-910-7164

HOMEDEPOT.COM/ECOSMART

Retain this manual for future use.