

Karaoke Machine



User Manual

Specifications

- Output Power: 10W
- Drive Unit: 6.5Inch Subwoofer Four piezoelectric tweeters
- Wireless Version: V5.1
- Wireless Name : Q08
- Battery Capacity: 3000mAh(3.7V)
- Power Input: DC 5V $\pm$ 2A
- Battery Charging Time: about 5-6 Hours
- Play Time: about 4-5 Hours
- Wireless Range: 20m
- TF Card/ USB Reader Supported
- Product Dimension: L232mm * W147mm * H339mm
- Product Weight: 2000g

Above is the Lab test data, the actual use time may differ by environment and use habits, for reference only.



- (1) **Microphone Input:** 6.5mm jack/instrument input.
- (2) **AUX:** 3.5mm port, used to connect and play music with an audio cable.
- (3) **TF Card Slot:** Insert a TF card to play music stored on the TF card.
- (4) **USB Port:** Insert a USB card to play music stored on the USB card.
- (5) **Microphone Reverb Adjustment:** Adjust the microphone echo volume.
- (6) **Mic Volume:** You can adjust the microphone volume according to your own needs.
- (7) **TYPE-C Charging Port:** When the speaker's battery is low, please remember to charge it in time with the provided charging cable.
- (8) **Power Switch/Main Volume:** The main volume knob controls the power on/off of the device. When the knob is turned to the lowest setting and then twisted further to the left, a 'click' sound indicates that the machine has been turned off (the display screen will no longer show anything). Conversely, twisting it to the right turns the machine on. After the machine is powered on, the volume can be controlled by rotating the knob left or right - turning it to the left ("←") decreases the volume, and turning it to the right ("→") increases the volume.

- (9) **MIC Priority:** Short press to turn the microphone's priority function on or off, and long press to turn the music accompaniment on or off.
- (10) **Mode/LED:** Press quickly to switch different modes: Bluetooth Mode/ FM Mode/USB Mode/TF Card Mode/AUX Mode. Long Press to switch the lighting modes.
- (11) **REC/REPLAY:** Long press to start recording. During the recording process, short press can stop the recording and play the current recording file; Short press to play the recorded files on the device (Note: The recording function requires a USB drive or TF card to be inserted. For recording, a wired microphone must be connected or).
- (12) **Previous Track:** Press to switch to the previous song.
- (13) **Pause/Play:** Short press to pause/continue playback (Note: In FM mode, press to adjust the channel.)
- (14) **Next Track:** Press to switch to the next song.
- (15) The audio system features a dedicated ambient sound effect button for your arbitrary selection.
- (16) **Display Screen:** power on status display.
- (17) **Charging Indicator Light:** The red light is on during charging, and the light goes off when fully charged.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment

does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2BTHV-Q08

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.