

正面

lamicall

SPEAKER

User Guide



CHAB01

Thank you for choosing Lamicall

We sincerely hope that you are happy with your purchase. We are committed to both your satisfaction and our products, therefore if you have any question, please feel free to contact us. It will always be a pleasure to serve you.

✉ support@lamicall.com

🌐 www.lamicallshop.com

📱 @lamicall

📺 @lamicall_official

🐦 @LamicallDirect

Warranty

Lamicall offers a 12-month warranty for this product. If you encounter any problem, please contact Lamicall Support at support@lamicall.com for a solution. You will receive a reply within 24 hours.

To ensure the problem can be solved promptly, please include following necessary information in your email.

Order Number

Customer Name

Phone Number

Product Name

Date of Purchase


Address

1. Please read this manual carefully before using this product.

2. We are not liable for any injury, damage, loss, accident, or other undesirable consequences caused by improper use of this product.

Specifications

Model No.	CHAB01
Pairing Name	lamicall-CHAB01
Effective Range	≥10m
Battery	3.7V / 400mAh
Battery Life	50% volume / approximately 7h, 70% volume / approximately 4h, 100% volume / approximately 3h.
Charging Time	1.5-2 hours
Charging Method	USB-C
Input power	5V=1A
Output power	3W

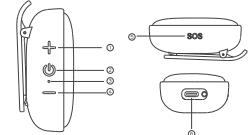

No.	Button/Port Name	Function Description
1	Next Track / Volume Up	Short Press: Increase volume. Long Press: Switch to next track.
2	Power Button	Double-click: Enter/exit TWS pairing mode (to connect two speakers for stereo sound). Shows device status (e.g., battery, connection mode).
3	Indicator Light	Shows device status (e.g., battery, connection mode).
4	Previous Track/ Volume Down	Short Press: Decrease volume, vious track. Long Press: Switch to pre previous track.
5	SOS Button	Emergency SOS function. Press and hold for 2 seconds to turn on/off.
6	USB-C Charging Port	Connect the charging cable to charge the device battery.

LED Indicator / Prompt Tone Guide

Category	Description	Prompt Tone	Status
Indicator	White light blinks	Startup tone	Power on
	White light off	Shutdown tone	Power off
	White light blinks	—	Not connected
Low Battery	White light steady on	Bluetooth connected tone	Connected
	White light blinks	Low battery tone	Not connected
Speaker Charging	Red light blinks	Low battery tone	Connected
	Charging Red light steady on	—	—
	Fully charged Red light off	—	—

Power & Charging Instructions

For a better experience, please fully charge the speaker before first use. The package includes a USB-C charging cable (for charging only, no data transfer). Requires a 5V/1A or higher rated adapter (adapter not included).

Important Notes

► Using other incompatible charging cables may damage the device.

► Do not charge if the charging cable or device is damp or damaged.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Power On/Off

► While powered off, press and hold the "Power Button" for 2 seconds until you hear the startup tone.

► While powered on, press and hold the "Power Button" for 2 seconds again until you hear the shutdown tone.

► Note: The speaker will automatically power off after approximately 15 minutes if not connected.

Pairing

► On first use after powering on, the speaker automatically enters pairing mode.

► Already connected to a device, press and hold the "+" and "-" keys simultaneously to disconnect the current connection for pairing with another device.

► If not connected to any device, the speaker will also automatically enter pairing mode.

► Enable Bluetooth on your phone, search for "lamicall-CHAB01" and connect. A connection success tone will sound, and the white indicator will stay steady on.

Music Control

► Short press the "Play/Pause Button" to play or pause music.

► Long press the "+" key to play the previous track.

► Long press the "-" key to play the next track.

Call Control

► Answer a call: Short press the "Call Button".

► Reject a call: Double-click the "Call Button".

► End a call: Short press the "Call Button".

Volume Control

► Short press the "+" key to increase volume.

► Short press the "-" key to decrease volume.

Connecting Two Speakers for Stereo Mode (Only for the same model)

1. Turn on both Lamicall-CHAB01 speakers. Ensure they are powered on and not connected to any device (e.g., phone).

2. Double-click the "Power Button" on one speaker. A prompt tone will sound, and the two speakers will automatically pair successfully. After connection, the main speaker's white indicator blinks, and the secondary speaker's white indicator stays steady on.

3. Enable Bluetooth on your phone, search for "lamicall-CHAB01" and connect. After a successful connection tone, the main speaker's white indicator and the secondary speaker's white indicator will both stay steady on.

4. To exit TWS pairing mode, double-click the "Power Button" again. The indicator will blink.

SOS

While powered on, press and hold the "SOS" button for 2 seconds to activate/deactivate the SOS function.

Clear Paired Device List

Press and hold the "+" and "-" keys simultaneously to clear all pairing records and enter pairing mode.

Power Saving Setting

After powering on, if the speaker is not connected to any Bluetooth device, it will automatically power off after approximately 15 minutes.

Reset to Factory Settings

While powered on, press the "Reset Button" 5 times consecutively to restore factory settings.

Note

Unauthorized battery replacement is not recommended. The battery (battery pack or battery assembly) must not be exposed to excessive heat such as sunshine, fire or similar overheating environments.

Safety Instructions & Maintenance Guide

Cleaning & Maintenance

Clean the body with a soft, dry cloth. Avoid using any abrasive materials, chemical solvents, or strong detergents to prevent damage to the aluminum alloy surface and components.

Usage Environment

Do not place the speaker in high-temperature environments or near heat sources (e.g., stoves, heaters) and avoid prolonged direct sunlight to prevent casing discoloration or internal component damage.

Electrical & Water Safety

This product is not waterproof. Do not use it in rainy conditions, bathrooms, or other damp environments. Ensure the ports are dry during charging or storage.

Prohibition of Modification & Disposal

Do not disassemble, modify, or attempt to repair this product by yourself, as this will void the warranty. When disposing, please follow local regulations for electronic waste. Do not incinerate to avoid danger.

Long-term Storage

If not used for an extended period, store the speaker in a dry, cool place and recharge it to approximately 50% battery level at least every six months to maintain battery health.

Manufactured by/ Hergestellt von/ Fabriqué par/ Prodotto da/ Fabricado por/ Gemaakt door/ Shenzhen Lamicall Technology Co., Ltd. 707.7th Floor, Building 4, Tian'an Yungu Industrial Park Phase II, Gangtuo Community, Bantian Street, Shenzhen, Guangdong, 518100, China

EU REP

Apex CE Specialists GmbH
Grabenberger Allee 277, 40237, Düsseldorf, DE
Wells.Yan_Info@apex-ce.com
+49 211 8639 201

UK REP

APEX CE SPECIALISTS LIMITED
No 360 125 Deansgate
Manchester, M3 2LN, United Kingdom
Owen_Info@apex-ce.com
+44 07472634415

FC

RECYCLE

NO FLAME

NO WATERS

NO DISPOSE

MADE IN CHINA

背面

品牌	lamicall	材质	80g晨鸣云镜书纸	修改记录
		成型尺寸	70*60mm	
产品型号名称	CHAB01	展开尺寸	350*60mm	
物料编码	CHAB01_MAN	印刷工艺	风琴折/双面印刷	
物料名称	说明书	印刷颜色	单黑	修改日期 2026.07.17
文件版本	V1.0	是否为最新: 是	模切线 — 压痕线 — 齿刀线 —	
备注说明				