

PRONUS

PREFACE

Thank you for purchasing PRONUS J-999 Retro Bluetooth speaker/MP3 player / FM radio. In order to get the best from the radio speaker, please read this manual carefully before using it and take special notice of the section on precautions.

I PRECAUTIONS


1. Please fully charge the speaker to activate it before the first use or after a long period of non-use.
2. Keep it away from sources of heat, sharp objects and direct sunlight.
3. Keep it away from open fire.
4. Do not insert any metal objects to avoid a short circuit.
5. Don't get the speaker wet or use it in a moist environment. E.g. Keep it out of rain and use carefully in bathrooms and kitchens.
6. Keep it away from any solvents, such as white spirit, paraffin and petrol.
7. If the product is overheated, damaged or fallen into the liquid, stop using it.
8. Being placed at an extremely hot or cold place can damage the product's service life.

II PRODUCT INTRODUCTION

1. Product Specifications

- 1) Model: J-999
- 2) Band: FM: 87-108MHz
- 3) MP3 Playing: Bluetooth / TF Card / USB Drive / AUX
- 4) Battery: 3.7V / 400mAh
- 5) Charging Standard: DC5V/1A
- 6) Bluetooth Version: 5.0
- 7) Bluetooth Name: J-999
- 8) Bluetooth Transmission Distance: >=10m
- 9) Speaker: 3W
- 10) Dimension: 105 x 65 x 72mm
- 11) Weight: 200g
- 12) Package Included: Bluetooth Speaker x 1, Charging Cable x 1, AUX Cable x 1, User Manual x 1

2. Functional Components

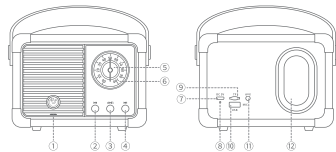

- | | |
|--|----------------------|
| ① Power Indicator | ⑦ USB Charging Port |
| ② Previous | ⑧ Charging Indicator |
| ③ ON/OFF/Play/Pause/Mode Switch/Answer Calls | ⑨ TF Card Slot |
| ④ Next | ⑩ USB Drive Port |
| ⑤ Volume Knob | ⑪ AUX Input |
| ⑥ Volume Dial | ⑫ Passive Diaphragm |

III CHARGING

Use the supplied charging cable to charge the speaker. When charging, <⑧ Charging Indicator> becomes a red light and it goes off once fully charged. It takes 2-3 hours to fully charge.

Note:

1. Please use a standard DC 5V/1A charger for charging, otherwise the product may be damaged
2. Please try to avoid using it while charging.
3. Do not continue to charge a fully charged battery, as overcharge can shorten the battery life.

IV HOW TO USE

1. ON/OFF

Long press <③ ON/OFF/Play/Pause/Mode Switch/Answer Calls> to turn on, long press it again to turn off.



2. FM Mode

1. Insert one end of the supplied AUX cable into <⑪ AUX Input>, and use this AUX cable as the antenna.
2. Double press <③ ON/OFF/Play/Pause/Mode Switch/Answer Calls> to switch to FM Mode. An "FM mode" sound will indicate that the speaker is in FM mode.
3. Short press <③ ON/OFF/Play/Pause/Mode Switch/Answer Calls> once to enter automatic station scan mode. The scanning process may take 2-3 minutes. When the signal stops changing on its own, the scan is complete.
4. Press <② Previous> or <④ Next> to select the stations you like.

Notes: 1) Before selecting FM mode, please plug in the included audio cable and keep it as straight as possible. Without the audio cable, the signal cannot be searched.

2) After entering FM mode, the blue signal light will blink continuously.

3) In FM mode, be cautious when pressing the power button. Each press will restart the station scan.

4) Choose an area with a strong signal and keep the device away from mobile phones, computers, and other electronic products.

5) This feature is an auxiliary function and is not intended for primary use.

3. PLAY VIA AUX

1. Insert the AUX cable and the speaker will enter "AUX Mode" automatically.
2. Open the music app/software to play music.
3. Press <③ ON/OFF/Play/Pause/Mode Switch/Answer Calls> to mute the speaker, press again to resume the sound.

Note: Switching and pausing tracks with this speaker is not supported in "AUX mode".

4. PLAYED BY TF CARD/USB DRIVE

1. Insert the TF Card/USB Drive loaded with audio files into <⑨ TF Card Slot> or <⑩ USB Drive Port>. Then the speaker will give a sound "played by TF card" or "played by USB drive". The speaker will play music automatically once the audio files are detected.
2. Press <② Previous> or <④ Next> to choose the previous or the next song.
3. Press <③ ON/OFF/Play/Pause/Mode Switch/Answer Calls> to pause/resume the playback.

Note: Please make sure the USB drive and TF card are in FAT or FAT32 format, as the radio can't read the USB drive or TF card in NTFS format.



5. BLUETOOTH CONNECTION

1. Turn on the speaker and a "Bluetooth Mode" sound indicates that the speaker is ready to pair.
2. Turn on the Bluetooth on your device, such as your mobile phone, to search and connect the device named "J-999". A "ding-dong" sound indicates a successful connection.
3. Open the music app/software on your device and play music.
4. Press <② Previous> or <④ Next> to choose the previous or the next song.
5. Press <③ ON/OFF/Play/Pause/Mode Switch/Answer Calls> to pause/resume the playback.
6. Turn the <⑤ Volume Knob> to adjust the volume.

Note:

1. If a password is needed during the connection, you can enter the initial password "0000".
2. If there is a call, press <③ ON/OFF/Play/Pause/Mode Switch/Answer Calls> to answer calls, and press it again to hang up.

V FAQ

 
Q: Can't pair with your Bluetooth-enabled device?

- A:**
1. The speaker is already paired with another device, please disconnect it from that device and reconnect.
 2. The number of connection records in your device exceeds the limit, please delete some records and then reconnect.
 3. The power of the speaker is too low, please charge it.
 4. Your device's system is not upgraded, please upgrade it to the latest version.
 5. This speaker doesn't support connection with Bluetooth headsets.

VI AFTER-SALE SERVICE

If you encounter any issues with the radio, need assistance with its use, or have any other ideas or suggestions, please feel free to contact us:

pronus-technik@hotmail.com



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction