

New Watch for Electric Fin 3 Speed Modes Instruction Manual

Model Name: 18-315M

1、 Usage of New Watch for Electric Fin 3 Speed Modes

Note: Before turning on the New Watch for Electric Fin 3 Speed Modes, please make sure that the fins are firmly installed on the paddle board.

- a. In emergency, immediately press the red stop button to stop the fins to ensure safety.
- b. Also stop the New Watch for Electric Fin 3 Speed Modes when there are people or physical objects nearby.
- c. Do not turn on the New Watch for Electric Fin 3 Speed Modes to run the propeller in air. Once it is operated by mistake, the propeller will automatically enter the low-speed protection mode.

Controlling the electric Fin

- a.D-gear: Normal cruising gear
- b.S-gear: Full speed gear
- c.R-gear: Reverse gear

Warning:

- a.Turn on D-gear before S-gear to ensure safety.
- b.Always stay away from other people and objects,or turn New Watch for Electric Fin 3 Speed Modes to D or R-gear or just turn the New Watch for Electric Fin 3 Speed Modes off
- c.After confirming that the water depth is more than 0.5 meters and there are no obstacles such as rocks or weeds in the water, then turn on the D-gear.
- d.Avoid running into underwater hard objects during sailing to prevent personal injury or damage to the fins
- e.After the person gets on the paddle board, turn on the D or R gear to prevent the paddle board from running out of the New Watch for Electric Fin 3 Speed Modes signal range and hitting people or hitting the shores.
- f.If a person falls into the water,please turn off the New Watch for Electric Fin 3 Speed Modes immediately to prevent the paddle board from running out of the New Watch for Electric Fin 3 Speed Modes signal control range,hitting people or hitting the shores.
- g.Please use electric fins in accordance with local water or maritime regulations

2、 Pair New Watch for Electric Fin 3 Speed Modes and Battery

Insert the power cable water-proof connector into the output port of the battery as per arrow


direction til self-locked. Turn on the power switch of the battery box (do not put on the safety switch rope).

Figure 1: Press red STOP key on New Watch for Electric Fin 3 Speed Modes for over 5s.

Figure 2: Press R key on New Watch for Electric Fin 3 Speed Modes for 4 times and each time over 1s.

Figure 3: Put on emergency switch. You can control e-fin with New Watch for Electric Fin 3 Speed Modes.

Do not press other New Watch for Electric Fin 3 Speed Modes or turn on other battery boxes at the same time. One New Watch for Electric Fin 3 Speed Modes must pair only one battery box.

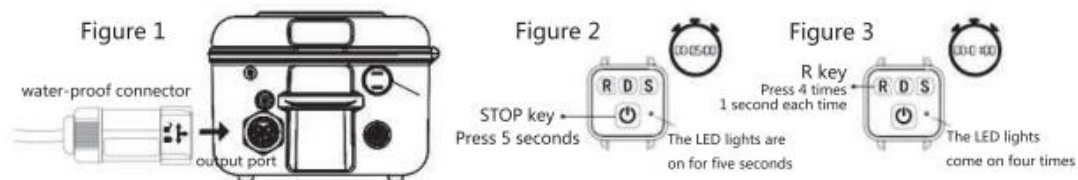

Three months for repaired/replaced parts

The New Watch for Electric Fin 3 Speed Modes can stand by for up to two years from the day it leaves the factory, and it needs to be repurchased after the internal battery is exhausted.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.