

Aroma Diffuser

Product Manual

Hey ,
Scent Space 。



Android&ios



Google Play

Please download the app by scanning the QR code above, if the QR code cannot be scanned, please search "Scent Space" in App Store (IOS user) or Google Play (Android user) directly.

Product Feature



Voltage: 12V
Power: 8W
Capacity: 400ml
Weight: 1kg
Coverage: 800-1000m²
Size: φ110*200mm

① Desktop Use



1. Plug it in
2. Enjoy the fragrance

② Wall-Mounted Use



1. Stick the backplate to the wall
2. Hang the machine on the back plate
3. Enjoy the fragrance

③ Ceiling-Suspended Use



1. Secure the fitting with 4 screws



2. Install the machine and plug it in



3. Enjoy the fragrance.

How to use the equipment



01. Open the machine.



02. Take off the oil bottle.



03. Pour in your favorite essential oils.



04. Put the oil bottle back and close the machine.

 


05. Plug the power cord and connect the machine to the power supply.



06. Operate the machine manually or with smart app. Enjoy the fragrance.

LCD screen settings

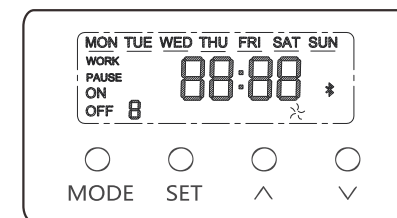

1. Turn On: Auto-start on after power on.

2. UI interface display when standby: Current weeks, time, work information, battery power display, Bluetooth connection status display.

3. Local time setting:

Long press the "SET" button for five seconds to start the time setting; Press the "↑" button to set the hour, press the "SET" button to confirm, Then enter the minute setting, press the "↑↓" button to set the minute, press the "SET" button to confirm, then enter the week setting, press the "↑↓" button to select, press the "SET" button to confirm and end, the system automatically saves the current setting and finish the setting.

4. Work time and Scent intensity setting

Six Working Programs:

- (1) Press the "MODE" button for the first time to enter the first program work time setting (on - 1 -), press the "↑↓" button to set the hour, press the "SET" button to confirm; Enter the minute setting, press the "↑↓" button to set the minute, and press the "SET" button to confirm; Enter the day setting, press the "↑" button to select the work day, press the "↓" button to cancel the work day setting, Automatically save and finish the first program working time setting.
- (2) Press the "MODE" button for the second time to enter the first program pause time setting (Off - 1 -), press the "↑↓" button to set the hour, press "SET" to confirm, enter the minute setting, press "↑↓" to set the minute, Automatically save and finish the first program working time setting.
- (3) Press the "MODE" button for the third time to enter the first program scent intensity adjustment (Work), press the "↑↓" button to adjust the working seconds; the working seconds range is 10 to 300 seconds. the working seconds Setup is complete.
- (4) Press the "MODE" button for the fourth time to enter the first program scent intensity pause adjustment (Pause), the pause seconds range is 10 to 900 seconds, press the "↑↓" button to adjust the pause seconds, the pause seconds Setup is complete.
- (5) For the remaining 5 program work time and scent intensity settings, repeat the above steps.

5. System reset:

Press and hold the "MODE" button for 5 seconds to restore the device to the factory settings. The first program factory setting is 8.00am to 22.00pm, the scent frequency is 60-120 seconds.

6. Other:

Press and hold for 5 seconds [Λ] : Fan on or off. (This function is not valid for fanless models)
Press and hold for 5 seconds [v] : Locks or unlocks the LCD.

Bluetooth settings

 
 
- 01** Download "Scent Space" App.
Please enter the App store or Google Play store and then input "Scent Space" to download the app, or you can scan the QR code to download the "Scent Space" app.




Android & iOS Google Play

Bluetooth App Connection

- 02**
1. Turn on the Bluetooth function on your phone.
 2. Run our "Scent Space" app and choose the Bluetooth mode.
 3. Click the device and enter the password 000000 (default password is 000000), the machine will be connected successfully.

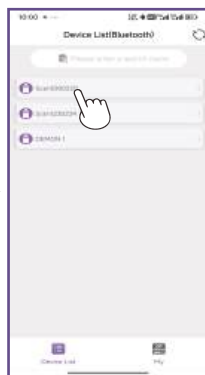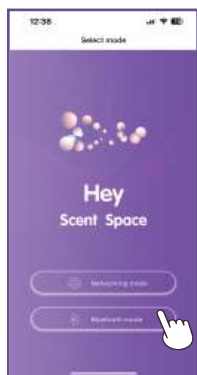

 - 03** Device Management
1. Rename the device
 2. Turn on/off the device remotely
 3. Turn on/off the fan remotely
 4. Add mode
 5. Click on Edit Mode

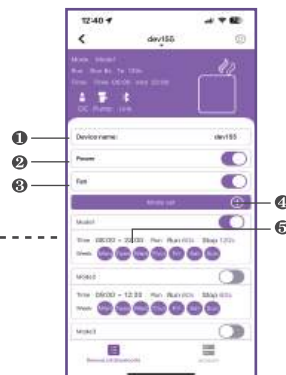

- 04** Click add mode set on the main interface to set working period, you can set the working day, start and end time, run and stop time. It support up to six working periods. After setting, please click confirm to save the settings



- 05**
1. Device time
 2. Gear mode switching
 3. Test mode
 4. Reset the amount of essential oils
 5. Factory reset
 6. Modify Bluetooth password
 7. Modify device name



Trouble Removal

Before you are ready to repair the machine, please first try to solve the following problems by following the method below

Ask questions and get in the way	solution
No Atomization	1. Check whether the power supply is on. 2. Check whether the pump is working or not, replace a new pump if it is damaged. 3. Check whether the nozzle is blocked or not, clean the nozzle with alcohol if it is blocked. 4. Check whether the essential oil is ran out or not, and whether the pipe falls off or not.
Low Atomization	1. The nozzle or pipe is blocked, clean it with alcohol or replace with a new one. 2. The sealing pad on the atomizing head is damaged, replace it with a new one. 3. Air line on the atomizing head has fallen, reattach it.
Liquid Rejection	The machine is tilt, please place it on a flat surface
Oil Leakage	1. Please check whether the bottle is tightened or not. 2. Broken or missing packing pads in the atomizer head, please replace it.
Abnormal Noise	1. Check whether the air pump falls out, re-install the air pump. 2. Check whether the mist outlet is blocked by obstacle. 3. The pump is damaged, replace it with a new one.

Cleaning Machine

Machine Maintenance

We suggest the machine to be cleaned with alcohol in the following situations:

1. We suggest the machine to be cleaned 2-3 months in 1 circle, so that it can work under the best condition;
2. When you are ready to use another essential oil;
3. The amount of the fog is getting thinner and weaker.

Warranty and after-sale service

1. We provide free technical solutions and installation process guidance.
2. We provide free online FAQ consultation and scent-marketing suggestion.
3. All devices enjoy 12 months free maintenance from the day of purchase.
4. The fault caused by human error or other wrong operation not belong to the warranty service, it will not be accepted to provide free maintenance.
5. Please keep the machine and user manual well, if you have any question, please feel free to contact us.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.