

70x105mm

ZNP

Wireless Earphones N03

Quick Start Guide

ZNP N03

Product Specifications

Model: ZNP N03

Range: ≈ 10 m
Version: 6.0

Speaker

Diameter: 12 mm
Impedance: 32 Ω

Earphone power

Input: 5 V≈35 mA
Battery capacity: 35 mAh
Battery life: ≈ 4.5 hrs
Charging time: ≈ 1.5 hrs

Charging case power

Input: 5 V=400 mA
Output: 5 V≈70 mA
Battery capacity: 400 mAh
Charging time: ≈ 2 hrs
Earphone recharges: 3 charges (when case is fully charged)

What's in the box

Charging case

2 Earphones

Quick Start Guide

USB-C cable

Lanyard

Components

Earphone LED

Touchpad

Earphone speaker

Charging contacts

Charging case display

Multifunction button

USB Type-C port

Take out and pair the earphones

If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white and cyan alternately, indicating that they are in pairing mode.

Note:

- If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful.
- If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.

How to put on the earphones

1

2

3

Power on and off

Power on

Opening the charging case will automatically turn on the earphones.
To manually turn on each earphone, press and hold the touchpad for three seconds.

Power off

Placing the earphones in the charging case and closing the case will automatically turn them off.
unconnected state To manually turn off each earphone, press and hold the touchpad for five seconds.

Note:

If the earphones are not paired with a device within three minutes after powering on, they will automatically power off.
They will also power off after three minutes if the paired device moves out of the effective connection range and has not reconnected.

Connect to Bluetooth device

On the device, turn on wireless and choose to connect to "ZNP N03".

Basic operations

Power on/off

Phone mode

Music mode

Reset earphones

Key functions

- Play/Pause: Tap either earphone once.
- Volume up: Tap both earphones five times simultaneously.
- Volume down: Tap the left earphone twice.
- Play previous track: Tap the left earphone three times.
- Play next track: Tap the right earphone three times.
- Answer/End call: Tap either earphone once.
- Reject call: Press and hold either earphone for two seconds.
- Activate voice assistant: Press and hold the left earphone for two seconds.

Note: When using a single earphone only, press and hold the active earphone for two seconds.

- Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.)

Note: Mode switching is disabled when you're using a single earphone only.

- Headphone Controls(Douyin Interface: P17)

Indicator LEDs

Earphone LED	Status
Blinking white and cyan	Both earphones: Powered on Single earphone: Unpaired
Off	Paired or fully charged

How to reset the earphones

If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously.
Note: Resetting the earphones will clear the Device pairing history.

Case display: Basic operations

Turn on display

- Open the charging case lid.
- Double-tap the earbud display.

Turn off display

- Press the multifunction button once.

Press the multifunction button twice to turn off the display. The display automatically turns off after 30 seconds of inactivity.

Note: Initial activation required for first-time use.
Do any of the following:

- Charge the charging case via the USB Type-C port.
- Press and hold the multifunction button for three seconds.

Multifunction button operations

Multifunction button

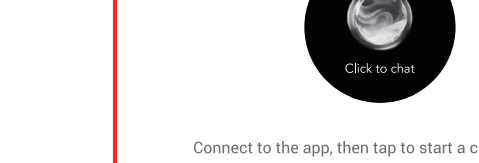 
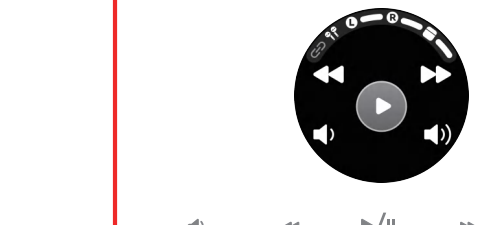 
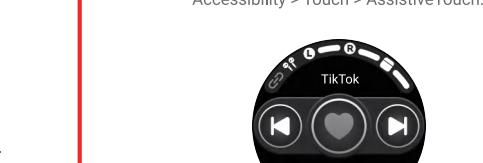 
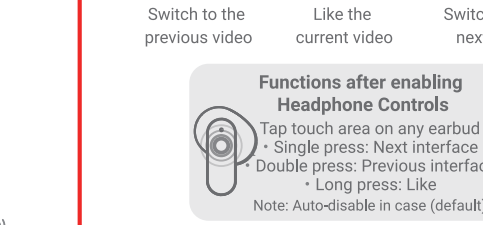 
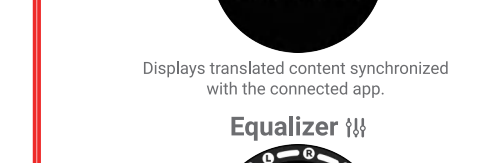 
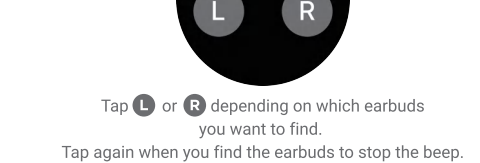 
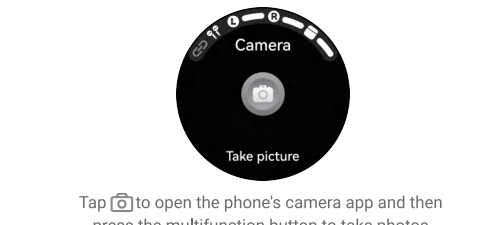 
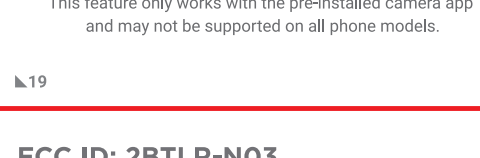 
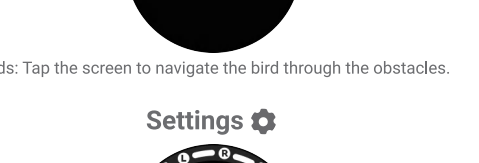 
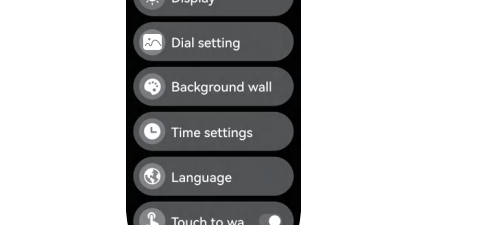 
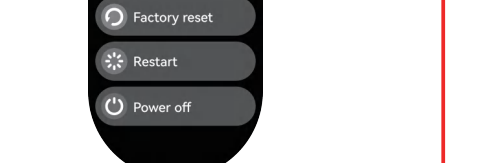 
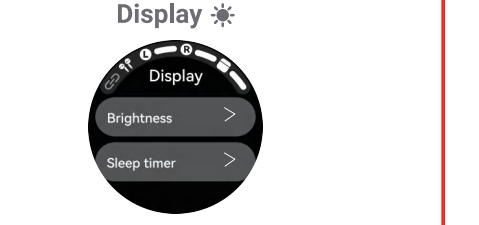 
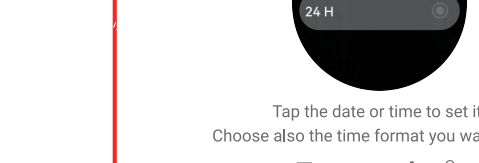 
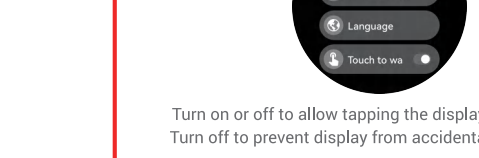 
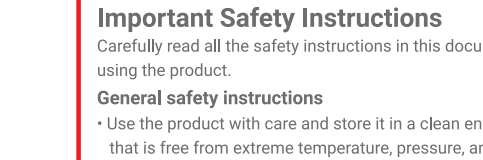 
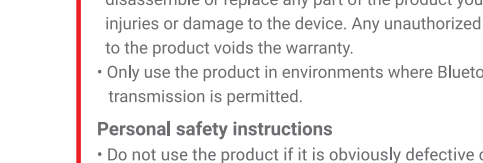 
Status Icons Guide

	Status
Solid red	APP Not Connected
Solid green	APP Connected
	Status
Solid red	Case not connected to earphones
Solid white	Case connected to earphones, earphones not connected to phone.
Solid blue	Case connected to earphones, earphones paired to phone.
	Status
Green lightning icon	Earphone Charging
Solid white	Earphone in case (Case Closed)
	Status
Solid green	Charging case is being charged

Multifunction button operations

Status	Operation	Function
Screen-off	Single press	/
Screen-saver	Double press	/
Screen-on	Single press	Confirm/Enter
	Double press	Return
	Rotate clockwise	Slide down
	Rotate CCW	Slide up
Music interface	Rotate clockwise	Previous track
	Rotate CCW	Next track
	Single press	Play/Pause
	Rotate clockwise	Previous video
TikTok interface	Rotate CCW	Next video
	Single press	Like

Press once: Turn the screen on.
Press twice: Turn the screen off.
Press three times: Link earphones to charging case.
Press and hold for two seconds: Open the system menu (About, Factory reset, Restart and Power off).
Press and hold for ten seconds: Power on when frozen (to reset).

Case display: Feature overview Lock screen  Swipe left to enter the main interface. Swipe right to enter the AI chat interface. Menu  Tap an item to access its options. 15	AI Conversation  Click to chat Connect to the app, then tap to start a conversation. Music  Volume down Previous Track Play/Pause Next Track Volume up 16	TikTok Make sure your earphones are connected to your phone and the TikTok app is open. For iOS devices, AssistiveTouch must be turned on in Settings > Accessibility > Touch > AssistiveTouch.  Switch to the previous video Like the current video Switch to the next video Functions after enabling Headphone Controls Tap touch area on any earbud • Single press: Next interface • Double press: Previous interface • Long press: Like Note: Auto-disable in case (default) This feature only works with the TikTok app and may not be compatible with all phone models. 17	AI Translation  Displays translated content synchronized with the connected app. Equalizer  Switch between the preset equalizer settings. Voice Assistant  Tap to activate your phone's voice assistant. 18	Find My Earbuds  Tap L or R depending on which earbuds you want to find. Tap again when you find the earbuds to stop the beep. Camera  Tap to open the phone's camera app and then press the multifunction button to take photos. This feature only works with the pre-installed camera app and may not be supported on all phone models. 19	Game  Birds: Tap the screen to navigate the bird through the obstacles. Settings  Tap an item to access its options. 20	System menu  Check device details, perform a factory reset, restart, or power it off. Display  Brightness: Swipe up or down. Sleep timer: Swipe left to select a time for the screen to turn off when left idle. 21
Dial setting  Choose the wallpaper to use for the lock screen. Background Wallpaper  Choose the image to use for the menu. Language  Tap the language to use for the case display. 22	Time settings  Tap the date or time to set it. Choose also the time format you want to use. Tap to wake  Turn on or off to allow tapping the display to turn it on. Turn off to prevent display from accidentally turning on. 23	Important Safety Instructions Carefully read all the safety instructions in this document before using the product. General safety instructions • Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed. • Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty. • Only use the product in environments where Bluetooth transmission is permitted. Personal safety instructions • Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating. • Do not use the product when performing high-risk tasks that require your full attention. • For your hearing protection, do not listen at high volume for long periods. • Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking. 24	Battery safety instructions The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal. • Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight. • Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F). • Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments. • Keep the product dry and away from liquids or moisture. • Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC. • Do not use the product while charging. • Do not leave the product charging for longer than eight hours. • Dispose of the product responsibly according to your local waste management guidelines. 25	FCC ID: 2BTLR-N03 FCC Caution: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 26	~Consult the dealer or an experienced radio/TV technician for help. *RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. ZNP 27	