



操作指南



步骤 1.安装APP

手机扫描以下二维码进行下载安装使用, 安装后注册账号登录.
(IOS系统在 AppStore 内下载安装) 软件名: Z-IOT CAM



开机说明
开机: 设备电源连接, 照明灯常亮3秒左右会有提示音, 设备云台开始自检一圈为开机成功
关机: 设备电源断电为关机
复位: 按住"RESET"键6秒左右设备会有提示音, 设备云台开始自检一圈为复位成功

注册账号方法 1: 注册账号登录



注册账号方法 2: 设备号登录



切换设备号

搜索设备




添加 Z-IOT 账号, 密码默认 123456

注册账号方法 3: 游客登录



步骤 2. 连接设备: 手机直连设备

1.连接机器自带热点, Z-IOT开头的热点, 点击连接, 连接成功后返回App, 点击画面即可观看

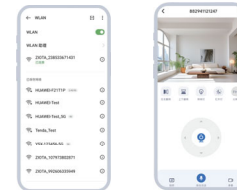


连接 Z-IOT 开头名称的 WIFI

点击画面观看视频

步骤3.连接设备: WIFI配网连接

1.连接机器自带热点, Z-IOT 开头的热点, 点击连接, 连接成功后返回 App, 下面图示.

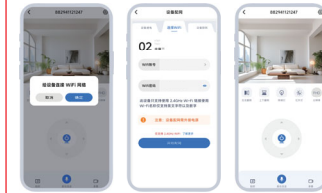

给设备连接 WIFI

输入WIFI账号密码

连接成功, 即可观看

注意:

1. 只要 WIFI 密码正确, 一定可以连接上, 如果连不上, 先把路由器密码遗忘掉, 修改好密码, 然后再重新输入.
2. 如纸质说明书未能解决你的连接配网问题, 请扫描操作指南下端二维码, 观看操作视频, 请详细耐心重复观看操作视频!



Operation Guide



Step1. Install the App


Scan the QR code with your phone to download and install the app. After installation, register an account and log in
For IOS: Download and install from the App Store.
App Name: Z-OT CAM




Power instructions

- Power On: The device is connected to the power supply, the light stays on for about 3 seconds, a prompt sound will sound, and the device gimbal will start a self-check to indicate a successful startup.
- Reset: Press and hold the "RESET" button for about 6 seconds, and the device will sound a prompt sound. The device's gimbal will start self checking once, indicating a successful reset.

Method 1: Register an account

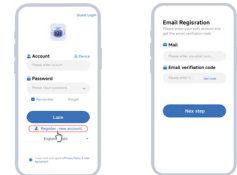


Method 2: Log in using the device ID

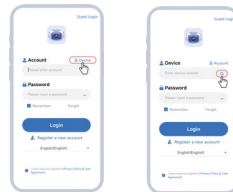


Switch device ID

Search Device

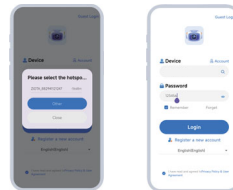


Add Z-IOT account password default 123456

Method 3: Log in as a guest

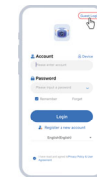

Step 2. Connect the Device: Mobile phone direct connection device


1. Connect the hotspot at the beginning of the machine Z-IOT, click on the connection, and after successful connection, return to the app. Click on the screen to watch it

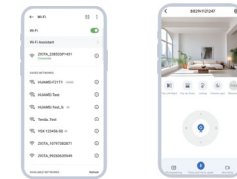

Connect Z-IOT_Wifi

Click to watch the Video

Step 3. Connect the Device: WIFI distribution network connection

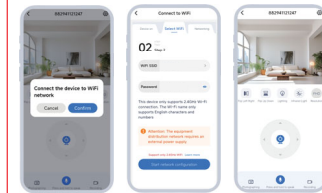

Connect to WIFI

Input password

Connection successful

Attention

1. As long as the WIFI password is correct, you can definitely connect. If you can't connect, forget the router password first, verify it, and then re-enter it
2. If the paper manual fails to solve your operation and connection network problem, please scan the QR code at the bottom of the operation guide, watch the operation video, and patiently repeat the operation video in detail!

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.