

Interactive Smart LCD Touch Panel

User's Manual

Software Operation Instructions

Table of contents

1. Neting nain interface	2
2. Writing Whiteboard Introduction	3
3. Introduction to multi -screen interactive settings	13
4. Wireless Screen Sharing Introduction	16
5. Introduction to PC Hardware Screen Transmissian	18
6. File Managestent Function Introductio	20
7. Side menu introduction	21
8. Setings Menu Introduction	25
9. VIP reception function introduction	37
10.0 ther system APP introduction	38

【This document may not fully reflect all the latest changes to the product . The actual product shall prevail】

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

1.Meeting main interface

After booting up,enter the system main interfaceThe default boot theme of the public version is as follows:



Interface shortcut keys:



:Click to open and start writing the meeting

6

:Click to cast the phone screen



:Click the icon to operate the browser



:After clicking Open,you will enter the Android internal file management by default.After entering,you can select an external memory device



:Click to enter the Android application interface and

menu

settings




:Click to open the settings menu



:Click to open the shutdown option

2.riting Thitboard Introdnction

After elickinx the whitubrcurd icn on tha happegu xil mnmter the follcafng interfnee

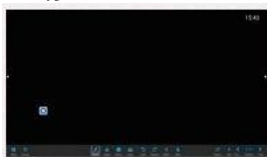

The default éiteboard background is gray and the single shite point hss no pen tip.fou can write directly after opening it.




Click and the above interfwece sillpsp 部



Select the pen stroke.Click it to rite with the pen stroke.The pen stroke chenge rate can be set..



Mural writing

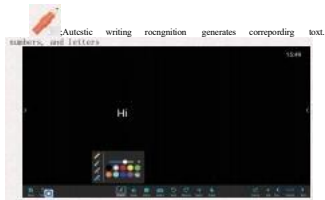

Automttie witisg roecgnison.Driw a circle carrally and a standard circle ull be utcatleally lrated.



Brsh color aelactic,in ardition tn 9 fizad cnloe sptians, you can also adjust the color pourself.



Brach thicknaax adjustamnt.

2.Eraser function stig (mult-finger touch recognition as erase function).

【This document sj not fully reflect all the latest changes to the product(The actual product shall prevail)】



Click the erase icon and touch it to activate the erase function. If you do not click this icon, touching it with your fingers together will also be recognized as the erase function.



Clear screen function: Specify right to clear the screen



Select the erase function, circle the area you want to erase, and it will automatically erase.




Undo function, click to undo the last operation.



Undo function restore the done operation.

3. Artboard content selection function, after selection, you can delete, copy, drag, and other operations.

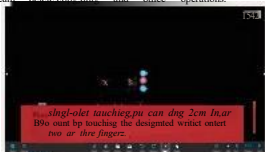

After clicking this icon, you can select the written

content to delete, copy, search, etc.

Click the icon in the right side of the selected text to search and select the image. The web page to paste it into the drawing board




Single-point writing/multi-point writing switch.



Click this icon to clear all written content with one click.

4. Artboard page adding function:

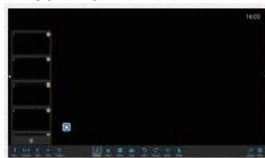

Click the symbol in the lower right corner of the artboard to increase the artboard size.

Clicking this icon will open a page preview, which can be seen on the right side of the above picture.

【This document may not fully reflect all the latest changes to the product. The actual product shall prevail.】

5. Sketcarad vriting Drory processing functicoi



Click the icon in the small left corner and the pop-up silhouette as shown above. You can load files to the drawing board, save the writing content on the drawing board, share the writing content with a code, and send the writing content by email, change the drawing board background, and switch the whiteboard function.

①. The drawing board loads the file function, as shown below:



After clicking this icon in the small left corner of the drawing board, you can load the image (the image format is JPG/PNG, and the

file format is BZD)

②. The function of saving the content written on the drawing board is shown below;



Click this icon in the lower left corner of the drawing board to save the written content. The saving formats are: picture (JPG/PNG), document (PTE), file (BZD).



:After the machine is connected to the Internet, click this icon in the lower left corner and the above picture will pop up. When sending an email, you can modify the subject and body, and you can set multiple recipients/ccs, separated by "";"";



⑧.The QR code sharing function of the written content is as shown below;



After clicking this icon in the lower left corner,a pop-up window will pop up as shown above. After turning on the switch, you need to scan the code and enter the password in the picture to view it. If it is not turned on, it is not necessary. If you receive a password change, you need to turn off the switch and then turn on the password to take effect (this function is only available when connected to the Internet).

④Write content and send it by email as shown below:



⑤.The background replacement function of the drawing board is as shown below:



Click this icon in the lower left corner of the artboard and a pop-up window will appear as shown in the picture above. You can select the background color and style of the artboard.

@.Whiteboard function switch,as shown below(text function and dual-color pen mode cannot be turned on at the same time);



 :Click this icon in the lower left corner of the drawing board and the above picture will pop up



:After clicking this icon,you can choose to draw various graphics(flat,three-dimensional,and you can also add tables).After turning on automatic recognition,it can automatically recognize the graphics you draw and generate standard graphics



The two-color pen mode is turned on as shown below



Control switch:

Some small tools can be used: ruler, compass, protractor, triangle ruler, file transfer, rotating machine, calculator, timer





After turning on the dual-color pen mode, it is fixed to multi-point writing and cannot be scaled. Click the brush to set the color, pen tip, and line thickness of the thick and thin pens respectively; when using thick and thin pens, you need to set the threshold of thick and thin pens. Click this icon and the

following interface will pop up:




You can set the orator threshold, thin pen threshold and thick pen threshold. First click on the right side of the detection, it will show the detection, then touch the threshold detection area on the left, it will record the threshold size, after setting, click Save. **Note: It is better to have a larger difference between the thick and thin pen thresholds for easy identification**

Triangle ruler: measure length, width and height, can be dragged, rotated and stretched



Ruler: A tool for drawing straight lines. It can be dragged, rotated, and lengthened or shortened.

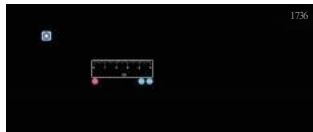


Compass: too for drawing circles or arcs. It can be dragged and the radius can be enlarged or reduced at will.



Protractor: measure the degree of an angle



⑦ Split-screen writing function: You can set the number of split screens and the background color. Click OK to start split-screen writing. Split-screen writing can only be done with one finger.

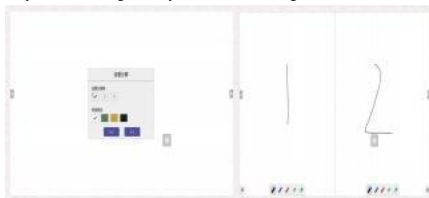

③



Click this icon to quickly transfer files. If your phone and machine are in the same LAN, you can upload pictures, videos, and files by scanning the QR code with WeChat on your phone.



Click this icon to quickly enter and create an

algorithm



After clicking this icon, the voting machine function: the mobile phone scans the voting machine QR code, creates the voting content, and the machine generates the voting channel QR code.




Click this icon to insert the window function; after inserting the signal, there will be a channel screen.



Click this icon to open the countdown function in the app:

【This document may not fully reflect all the latest changes to the product. The actual product shall prevail】

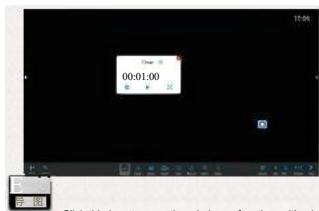

Click this icon to open the mind map function: writing in the table will automatically recognize the text!



After clicking this icon, table function: you can select 7 rows

and 10 columns to write a table.

 




Click this icon and then the four-line grid function: You can write in the table and automatically recognize pinyin and text:



Click this icon to select spotlight function: circle, square, triangle, five-

pointed star pattern,the background is black,you can choose any color

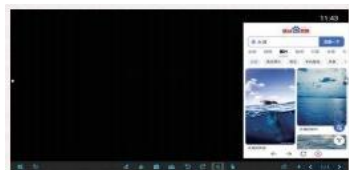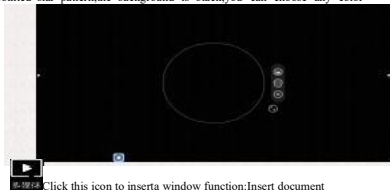

3.Introduction to multi-screen interactive function settings

After clicking the main interface icon,the following interface pops up(you need to turn on the hotspot function first:




Use your Android phone to scan the QR code in the lower left corner to download the screen projection software for screen projection.Click the 80things icon in the upper right corner to set up the screen projection function.

2.After switching to the Instructions for Use item,as shown below:



Android phones,Apple phones,and coaputers can all perform screen projection operations according to the steps shown on the interface.

2.The screen projection function setting interface is as shown below:

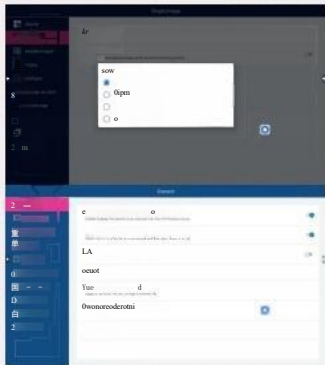

Screen casting welcome switch: When turned on, a welcome message will pop up when the screen casting device is connected, and a goodbye message will appear when the connection is disconnected. Screen casting connection password setting: The default screen casting password is 12345678, and this item can be used to change the screen casting password. Connection password change switch: You can set the connection password to change periodically.



2Introduction to single screen projection;

When casting a single screen, you can manually rotate the cast screen to an exclusive node; after turning on exclusive node, when one device is casting, other devices cannot squeeze it out.

3Multi-screen projection settings (Pro version);



1.Only available in the Pro version;Multi-screen layout;When

projecting multiple screens by default, the displayed screens are

proportional; if adjusted to the master and slave screens, the display ratio of one of the projected screen signals will be larger than that of the other projected screen signals, and the main screen can be switched.

2. Full screen: In a multi-screen window, double-click one of the projected screens to enlarge the projected screen.

3. Only available in the Pro version: Two-screen projection setting:

When projecting to mobile phones, the two sides will not be displayed due to the display ratio. After turning on this option, the display ratio will be stretched and displayed in full screen.

4. Only available in the Pro version: Free layout of multiple mobile phones, free layout of screens of more than 5 devices

5. Only available in the Pro version: When projecting the screens,

stretch to fill the height: When projecting two screens, the projected screen will be stretched to fill the

4. Open the management program to set the host mode:



Set host mode: After turning on this option, a floating menu will be added to facilitate the host to manage the screen, as shown below:



7. Screen mirroring device;



Windows After reverse mirroring is successful, the Android phone screen will display the large screen image, and the phone can control the large screen by touching it; if the touch control of the reverse mirroring device is turned off, the large screen cannot be controlled. The request annotation authorization type function can set the permission to perform annotation operations when reverse mirroring. The maximum number of customers who can annotate at the same time can set the number of customers who can annotate at the same time, but only one person can write before the other person can write. For Windows, just click reverse mirroring after connecting.

2.8. Screen casting code settings (Pro version);



1. Clients can discover services: If you need to use the screen casting code function, you need to turn on this option, and clients in the same LAN can discover the server.
2. Screen casting code function: Turn on this option to use the screen casting code function. Each screen transmission client can directly connect to the receiving end through the screen casting code, solving the problem of not being able to find the receiving end across network segments and too many devices to find.
3. Enable Pin code to move at the top of the screen: After turning it on, press and hold the left mouse button to drag the screen casting code.
4. Screen projection code type: Serverless type, suitable for scenarios with fewer devices in the LAN and a simple network structure, and does not require connection to the public network; Server type, suitable for scenarios with more devices in the LAN and a complex network structure and requires connection to the public network.
5. Display the casting code: Hide, do not display the casting code at the top of the screen; Always display the casting code at the top of the screen; When no device is casting, it is displayed at the top of the screen, and hidden when a device is casting. The casting code is only displayed when a device is casting.
6. Only available in the Pro version; Update screen code frequency: four

can choose the update frequency of the screen code.

9.Registration procedure(Internet connection required)

After connecting to the network, it will automatically register, and a pop-up window will pop up to prompt that the registration is successful.

4. Wireless Screen Sharing Introduction

1.Screen mirroring on Apple devices;

Connect the Apple device to the conference machine's hotspot AndroidAP-XXX, and then turn on AirPlay mirroring on the phone to achieve screen transmission.

1.Android device screen mirroring;

Scan the QR code displayed in the lower left corner of the machine with your mobile phone or enter it in the mobile web page (<http://120.26.86.122/res>) to download the client, then connect the conference machine hotspot AndroidAF-xxxx with your mobile phone, open the client, click the search in the lower right corner, and connect to the corresponding machine; or scan the code to cast the screen.



安卓Android端

IOS端

When the phone is connected, on the connection page you can select screen projection, virtual mouse, remote control, screenshot, reverse mirroring, video, music, picture, document for operation,

Click on the document to push PPT, Word, Excel, or PDF to the whole device for playback. After pushing the document, the phone will jump to the virtual mouse page. Touch the blank area of the virtual mouse to control the large screen, and touch the right and bottom to slide the document.



3. Wireless screen transmission and annotation function:



女 2 皇

Mobile terminal

Large screen display

4. In the absence of a screen transmitter, the green software can be used to realize PC mirroring, which has similar functions and effects as a screen transmitter. Connect the screen transmitter laptop to the Internet, open the web browser and enter the address <http://www.usbdisplay.cn/>, and a download page will pop up, as shown below:



【This document may not fully reflect all the latest changes to the product. The actual product shall prevail】



Click to download the Windows client, then double-click to run as shown in the figure; the machine list will now list the smart conferences that can be discovered in the local area network where the current notebook is located. Double-click the specified machine or IP address to automatically connect to the device. The process of using the screen after the screen is transferred is similar to USB screen transfer.



Connect the registered screen sharer to the computer's USB port. When the display prompts "Available for sharing", press the screen sharer to see the corresponding shared screen on the conference tablet.

5.Introduction to PC Hardware Screen Mirroring



1.First turn on the Android board's ViFi hotspot,then connect the screen transmitter to the Android board's USB port for pairing and registration.After successful registration,the following interface will pop up



Note:Before pairing,turn on the hotspot first and then connect the screen projector for pairing..

1.When the screen sharing device is successfully connected to the whole machine,a round green button will appear in the upper left corner,and the number displayed represents the number of screen sharing devices

connected to the whole machine.Click to expand to display the host mode, repeatedly click the lower screen of the device being cast or click the connected device to start screen sharing,as shown in the figure below:

Pd投影中 192.168. 4. 138	CNEPLISA5D00(已连接 192168. 1. 122
W(已连接 192. 168. 1. 167	
30	

During the screen transfer process,if you check the lack option,other users' computer screens will not be able to occupy the screen of the user who is transferring the screen.

4.Touch feedback dual screens controlled by one hand:



Use the screen projector to project the screen, the large screen can operate the PC, and the PC can operate the large screen. When the whole machine is connected to the Internet, the whole machine will automatically update according to the background update situation. If

it is found that the firrsare version of the USB button does not natch the firware version of the whole nachine,a pop-up proapt will appear on the coaputer screen transmission end saying that the version does not natch,please upgrade,At this time,you need to insert the IUSB button into the USB port of the whole machine to re-upgrade and pair to synchronize the version.

5.(USBDisplay)When the user表#39;8 computer uses the screen transmitter for the first time,Bone computers vill automatically install the driver and the screen transmitter will autctically install and run;if the computer cannot autoratically install the driver,clickCoaputer)→Removable Storage Devices and double-click the drive letter CD Drive (USBDisplay)。

The drive letter is as shosn below;




Winskws 108systes need to turn off the fireall before installing the drirer.

After the driver is installed,a prompt will appear in the lower right corner af the computer:Press to transfer the seroen。


Note:In some ccnputer systems,due to the blocking of anti-virus softwarethe screen transnitter nay not be able to run autcmatically eren if it is not the first time.At this tim,you nood to execute the main program in USBDisplay..

6.File Management Function Introduction

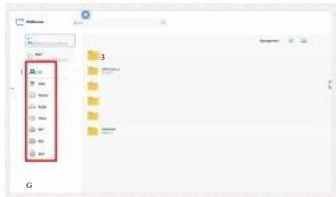

The files are displayed in a list(upper right corper)

Click "Operation" in the upper right corner to pop up the following picture:

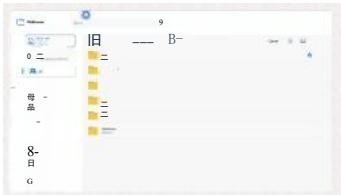

You can cut,copy,delete,open,renane and share files

The files are displayed in a tiled format (upper right corner)

The red box on the left can filter the file type

7.Side menu introduction



Click the arrow icons on the left and right sides to pop up the following interface:



:Return touch key,available in any Android nenu.

Honckquot;touch key Press this key in any interface to return directly to the Android hone interface.



:Task key,click to apen as shown below:



You can prierer the apps running in the background.Drag up and down to

browse all apps.Click the app window to open it directly.Drag left and right to stop the app.fou can also click the Clear All button below to clear all app8.



: Annotation shorcut key,click as shosn belnw:



:Release the annotation mode and perform other operations on the



Brush color and thickness selection.



:Blackboard eraser size selection.



:Annotation Lndo Key.



Insert material shorcut keys,

B

below:

The annotation content can be saved locally,Click it as sbon



章

;Anotation ten-point switch.

亡

Click this icon to clear all written content with one click.

跟

跟:Click to generate a QR code,and scan it with your phone to see the annotation content(internet connection required)



Long press to open the oraser threshold adaptation,corer your
palm on the touch aree to identify the value,and then click Save
(the threshold under the channel needs to be re-adapted)



Reduce the annotation operation window



:Annotation Exit Key.



Signal source sharteut keys,touch to switch signal channels as shukn below:



Toolbar call-out buttonclick as shown below(you can also swipe right from the leftmost side of the screen or swipe left from the rightmost side of the screen to call out);



;Split screen,the screen can start two apos at the sane tine;for

exapleapen the whiteboard firstthen click the split screen function, and then open the welcxme nessnge



:Child lock,click it to lock the screen and no operation can be performed.The default password for child lncck is:2580

:Energy saving shortcut key.When you click it,the screen b ght will go out.When you touch the display sgain,it will turn on autorarily..

2

Screen capture shortcut key.Click it to take a screenshot of the screen display and autorarily save it to the local nerory.There is alsn this function button on the remote control.



1 Screen recording funetioo button,click it as shom below:



After clicking Start,sone operations under Andraid will be recorded in MP4 forat and saved in the BSDScreen folder on the local disk.

:Magnifying glass function,enlarge the fonts and pictures on Android,as shown below;



There are options for 2x/4x magnification.



There are options for 2x/4x magnification:



Photo function,the machine is connected to a camera.



:Customize and set the shortcut key to open the application, as shown below:



If you want to cancel the shortcut key function after setting,Long press this icon.



Power off button



:One-click jump to the built-in computer channel



:Menu setting function,click to open the setting menu

8.Settings Menu Introduction



1. Network: wireless WiFi, screen projection hotspot, wired connection, Bluetooth function (only one of the wired and wireless can be turned on, and they cannot be used at the same time).



Screen projection hotspot: It needs to be turned on when projecting the screen. When mobile phones, computers and other devices are projecting the screen wirelessly, they must connect to this hotspot before they can

perform the screen projection operation..

Hotspot opened, default connection password: 12345678, if you want to modify hotspot name or password, you need to close the hotspot first. After the hotspot is turned on, the default connection password is: 1234567B. If you want to change the hotspot name or password, you need to close the hotspot before you can modify it.

2. General:

c1 theme:



Conference Topic 1:



Conference Topic 2:



Conference Topic 3:



Conference Topic 41



Conference Topic 5:



Conference Topic 6:



Conference Topic7:The subject can be rotated to 90 degrees,180 degrees, 270 degrees



Conference TopicB:



<2.Change wallpaper function.After clicking on the wallpaper



Static wallpaper can be customized and replaced,1920*1080 pictures are enough.

(3.Energy saving mode,click it and it will be as shown below:



The sleep mode is a standby mode without any operation.It is off by default.After turning it on,you can set the sleep time:how long does it take for the whole machine to automatically enter the sleep standby mode

without any operation.Sleep operation:can be divided into turning off the screen,turning on the screen saver and shutting down.After the sleep function is turned on,if you choose to turn off the screen in the sleep operation,the screen will be black when in sleep standby;if you choose to shut down it will automatically shut down after a period of inactivity;if you choose to turn on the screen saver you can change the screen saver, as shown below:



There are static screen savers and dynamic screen savers.You can also customize pictures and videos.You can use pictures in jpg,png and other formats,as well as short videos such as MP4.

<4,Adjust the brightness and sound.Click as shown below:



5. More settings



:Floating aenu switch:Hone page floating aenu switch.

System prompt sound switch:When turned off,there will be no proopt sound when touching and clicking to open the applicationand there will he a prorp sound when turned on..

Sidebar switch:There are triangular arroKs on both sides of the nachine when it is turned on,and no arrows on both sides when it is turned off. If you want to call out the sidebar,you can touch and pull from the edge to the insideand the sidebar nenu will pop up..

Texperature display:Terperature display on the hone page interfscce (displays the terperature of the entire machine)..

Five-finger screen off:Arter turning it on,pres8 and hold the nachine with five fingers for about three seconds,the machine will autosatically turn off the backlight,and press again with five fingers to turn it on. Three-finger follow:After opening.pre88 and hold three fingers for about three socondsand the floating nenu vill autcnatically nove to the touch paint.

Eye protection function:When turned on,the nachine will automatically reduce the brightness when it recognizes sonsone is operating it.

L.ight-sensing function:When turned on,the screen brightness will change

with the brightness of the anbiert light.The darker the onvironnent,the darker the screen brightnessand vice versa(the light-sensing nodule rust be connected to display

、Photosensitive energy-Saving function:When turned on,when the surrounding environent is dark,the screen will autonatically turn off and enter energy-saving node,and autonatically turn on when it boomes brighter(it will only he displayed when the phoatosensitive nodule is connected)

6.The startup iten settings are as shown below;



After clicking on the selection,these applications can he opened by default after booting up(it is recormended not to use this function unles8 there is a special situation,a8 it will affect the boot speed,and after setting it,the settings in the boot channel will be atoratically cancelled)).

<7 Whiteboard threshold setting, open as shn below;



Whiteboard threshold: The touch contact area under the whiteboard is recognized as the eraser function. The threshold value can be manually adjusted by digital input, or you can put your hand in the blank area in the above picture for automatic recognition.

<8 application



Click this interface to uninstall and authorize the downloaded software. The software and APK that come with the machine cannot be uninstalled. Long press the application to pop up the authorization interface.

<9 Five-finger gestures: You can set the five-finger left swiperight swipe, up swipe and down swipe response functions respectively



<10 Blue Light Setting5:



After turning it on, the screen will have a blue light effect (this function is invalid in the whiteboard and will be automatically turned off when switching themes)

3. Audio-visual settings (image and screen option 8 will only be displayed in the channel)

1 Image Setting



Image mode:You can switch between different image modes,or switch to user mode to manually adjust the desired effect

Color temperature:different color temperature modes can be switched

Zoom mode:The default is full screen display,you can also manually switch to the desired mode

Image noise reduction:reduce the noise of the image to make it clearer

MEMC:The picture will be clearer after turning it on, but it will increase the delay MEMC:

The picture will be clearer after turning it on, but it will increase the delay

up to 4K30Hz. When EDID is set to 2.0, the resolution of this channel can support up to 4K60Hz (EDID can only be set in HDNI or OPS channel, and cannot be adjusted in other channels).

Color range:adjustable to 0-255 or 16-235

No signal background:You can set the background to black or blue when the channel has no signal



Listen alone: Click to turn off the backlight, only the sound can be heard, click the screen to wake up the backlight


2 Screen Setting



EDID:When EDID is set to 1.4, the resolution of this channel can support



4.Smart Settings (1,Intelligent Recognition;

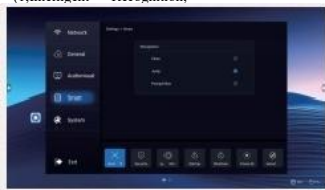

Select Close and do nothing.After selecting Jump,if the machine is connected to a signal, it will automatically jump to the signal channel.If the current channel signal is

unplugged, it will automatically jump back to the built-in computer channel (when the built-in computer is turned on). Select the prompt box, and a selection box will pop up before jumping to the signal channel, asking whether to switch to the channel. If the current channel signal is unplugged, a selection box will pop up, asking whether to

switch to the built-in computer (when the built-in computer is turned on).

(2.Security

Settings:



You need to set an unlock password before opening any lock. If you forget the password when unlocking, you can click 'Forgot Password', enter the key 0000, and then enter the new password. Click 'Confirm' and enter the new password to unlock.



① Password unlock: After opening, the screen will be locked and you need to enter the password to unlock it before you can use it.

② Gesture unlock: After turning it on, the screen will be locked and you need to enter a gesture to unlock it before you can use it.

③ USB password lock: After opening the USB lock, the USB flash drive is

connected to the USB interface, and the LSB flash drive cannot be recognized when clicking on the file manager.

④ APP lock: click to select the application you want to lock. After selecting the application you want to lock, you need to enter the password to open the application.



⑤ PC touch lock: After turning on this function, all channels are locked.

(3. No signal standby setting!



After setting the standby time, you can select the standby mode: No signal standby and no signal shutdown, that is, the machine will enter the standby mode or shutdown after a certain period of time in the no signal channel.

<4. Timer power on/off (automatically turns the machine off or on after setting the time);



Set the power on/off time, select the effective date, and then click Save Settings (you can set it only after turning on the switch (5. Power button:



Select the 2-irl button:When shutting down, options will pop up: Shut down computer and shut down all-ir-rane. Select the 3-in-1 button: When shutting down, the options of energy saving, shutting down computer and shutting down all-ir-one will pop up. If you select Shut down, it will shut down directly..



Energy Saving: only the backlight is turned off; the OPS and Android Dotherboard are still running

Shut down the computer: only shut down the built-in OPS cupater, and the whole machine will be in the Android interface

shut down the machine: shut down the whole machine

(6. Power-on channel selection;



After selecting, the device will enter this channel by default when it is turned on. If not selected, the device will enter the Android home page by default when it is turned on. (After setting the boot channel, the settings in the boot startup will be cancelled)

<1.Input:



<2.language selection:



reset:



(4.System Information View;



(5.Local upgrade;



(8.System functions;



<6.SmartPen Instructionsi



<7.time setting:



9. VIP reception function introduction



Select the corresponding style page and double-click to enlarge it, then click on it to enter the welcome words..



Click the brush to sign, or click the QR code to scan and take away (this function requires an internet connection)



After clicking on Display, click on the lower right corner and the following figure will pop up

(1) System Speedup:

[illegible]

Used to stop application running and uninstall norsesn applications

The screenshot shows the Windows 10 Settings application, specifically the 'System' section. The 'About' tab is selected, displaying various system information categories:

- System information:** Shows Windows version 19H2, OS build 18355.1000, and system type (64-bit Windows).
- Device information:** Displays the device name 'DESKTOP-XXXXXX', a Windows Hello sign-in option, and the operating system version 'Windows 10, version 19H2 (OS build 18355.1000)'.
- Device statistics:** Shows the device name 'DESKTOP-XXXXXX', a Windows Hello sign-in option, and the operating system version 'Windows 10, version 19H2 (OS build 18355.1000)'.
- System information:** Displays the device name 'DESKTOP-XXXXXX', a Windows Hello sign-in option, and the operating system version 'Windows 10, version 19H2 (OS build 18355.1000)'.

At the bottom of the window, there are four links: 'System information', 'Device information', 'System information', and 'System information'.

Viewsystem information

Check whether each function is normal

1. Fast file transfer (must be within the same LAN to transfer);



2. Voting machine (need to be connected to the Internet);



FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

