 
 
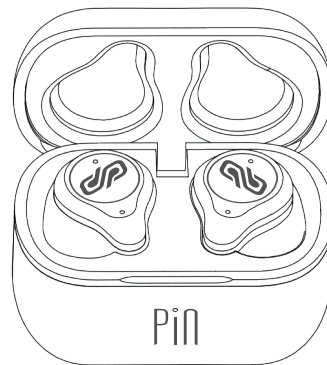 


75MM

Pin AI User Manual

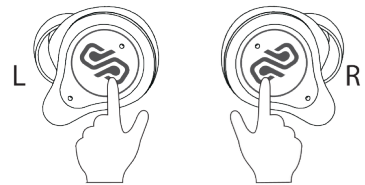

 
Please scan the QR Code to do wnload the PIN Companion App - “Earjy Intelligent” to enjy the translation function.

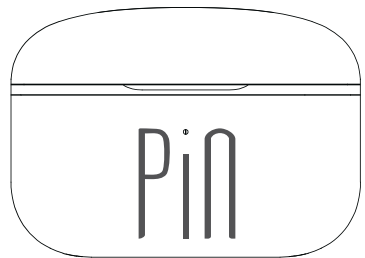

Function Key: touch control various functions of the earphone.

Product descriptions

Product name: Pin AI
Software version: BT 6.0
Speaker: Brass 10mm
Working distance: 10m
Music time: 8 Hours
Earphone Battery capacity: 2*40mAh
Charging case Battery capacity: 240mAh
Charge time for earphone: 2 hour
Charge time for Charging case: 1 hour
Re-charging frequency for earphone: 2 times
Input(earbuds battery): DC5V 25mA
Input(charging case battery): DC5V 300mA

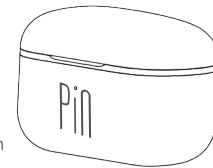

Power on and pairing

Automatically power on:
The earphones automatically turn on after being taken out of the charging case.
Automatically power off:
1. Put the earphones into the charging case , the earphones will

automatically power off and starts charging.
2. When the earphones are turned on and there is no connected to any Bluetooth device, it will automatically power off after 5 minutes.

Bluetooth connection:

1. When the earphones are taken out of the charging case, the left and right earphones are turned on and automatically paired to enter Bluetooth connection mode.
2. Open the Bluetooth settings on your phone and search. Click on the searched device " Pin AI " to connect.

Note:

If the left and right earphones fail to pair, put the left and right earphones back into the charging case, close the charging case, and then take the earphones out of the charging case to pair again.

Manually power on and power off:

Manually turn off: When the earphone is working, press and hold the function key for 5 seconds to turn off the earphone.
Manually power on: When the earphone is off, press and hold the function key for 3 seconds to turn on the earphone.

Press and hold the function key for 2 seconds to power on.
Press and hold the function key for 5 seconds to power off.
Automatic power off after 5 minutes of no Bluetooth connection.

Answer a call:

Single tap the function key.

Hang up a call:

Single tap the function key.

Reject a call:

Press and hold the function key for 2 seconds.

Play/Pause:

Single tap the function key.

Previous track:

Double tap the left earbud function key.

Next track:

Double tap the right earbud function key.

Voice assistant:

Triple tap either function key.

Charging case light color:

The charging case is charging: the red light is flashing
The charging case is fully charged: the red light is always on
The charging case is charging the earphones: the light is always on
The earphones are fully charged: the red light goes out

Accessories

Type C Charging cable 1pcs, silicone earbuds (2pcs each for large, medium and small), User Manual 1pcs.

Use Safety Instructions

1. To avoid hearing damage, keep the volume at a moderate level. Avoid listening to music at high volume for long time, which can cause permanent damage or hearing loss to your hearing.
2. Please do not use the earphones in situations that require your attention, such as driving, cycling, crossing the road, etc.
3. Do not disassemble or modify the earphone by any reason, otherwise it may cause earphone to malfunction and burn. These are not covered by the warranty.

4. Do not let earphone get wet with the liquid, otherwise it will cause serious damage to the device. Warranty is not covered for the damage caused by the water in the device.
5. Do not place earphone in a location exposed to the sun or high temperatures (Above 45°C). High temperatures can shorten the life of electronic components, damage batteries, and deform some plastic parts.
6. Do not place earphone in a cold place (Below 0°C) to avoid damaging the internal circuit board.
7. Please avoid using earphone indicator light near the eyes of children or animals.
8. Do not use earphone during thunderstorms. Thunderstorms can cause the device to malfunction and increase the risk of electric shock.
9. Do not drop, strongly vibrate, hit the product with a hard object, do not use harsh chemicals or detergents to clean earphone, so as not to damage the internal circuit.

Battery Safety Instructions

1. Improper battery replacement can be an explosion hazard and can only be replaced with a battery of the same type or equivalent.
2. For products with removable batteries, the batteries must be recycled or disposed of properly. For products that are not removable, disassembly is prohibited.

3. Battery is not allowed to be disassembled, impacted squeezed or put into fire. Do not expose the battery to conductive materials, liquids, fire or high temperatures.
4. Not allow metal objects to touch the two poles of the battery. Do not continue to use the battery if it is inflated, leaking, odorous, or any other abnormality.
5. Not use the battery after it has been immersed in water.
6. If the battery is used improperly, it may explode or leak, resulting in burns and other personal injury; if the battery leaks, be careful and dispose of the battery immediately according to local battery management laws and regulations.

Note:

Any attempt to remove or replace the battery will damage the product and void the product warranty.

Warning:

Rechargeable batteries that supply power to this product must be disposed of properly for recycling.
Do not put the battery in a fire to avoid an explosion.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

60MM