 


Forklift Instruction Manual

Please read the instruction manual carefully before use and keep it properly for future reference.

1. Warning:

- This product is suitable for users aged 6 and above.
- The car's battery is non-replaceable but rechargeable.
- The remote control uses replaceable button batteries (Model: CR2032). Battery replacement must be done under adult supervision, as swallowing batteries is dangerous!
- Adult supervision is required during the charging process to prevent accidents, and the charging plug should be unplugged after charging. If the product is not in use for a long time, it still needs to be charged for maintenance once every 2 weeks.
- The product should be kept away from water and chemicals to avoid damage. Do not use it on soft surfaces such as blankets or sand, as this will affect its speed and service life.

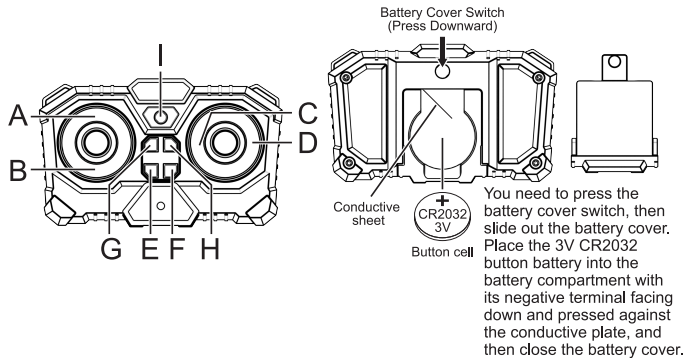


2. Description of Remote Control Functions (Remote Control Distance $\geq 15\text{M}$)

1. Before operating the forklift, push the forklift's power toggle switch to NO. Then, press and hold the "I Key" on the remote control to turn on the forklift. Only after the forklift is activated and emits an idle sound can you take control of it. A short press on the "I Key" turns the music on or off, while a long press shuts off the remote control's power.
Note: When the forklift is not in use, push the power switch on it to "OFF"; otherwise, the forklift will keep consuming power, which may cause certain damage to the built-in battery.
2. Push the left control lever to position A to make the forklift move forward, and to position B to make it move backward. Push the right control lever to position C to make the forklift turn left, and to position D to make it turn right. Press the E key to lift the front fork plate, and the F key to lower the front fork plate. A short press on the H key turns the lights on or off; a long press on the H key activates the one-key demonstration mode, and pressing any key will stop the demonstration.
3. A short press on the G key switches among three speed levels: 30%, 60%, and 100%.
4. Press and hold the G key until the remote control's indicator light flashes. Then press the forward or backward button to activate the cruise control function, and press and hold the G key again to deactivate it. (Kind Reminder: Do not use this function when operating on a desktop; please use it in an open area.)

5. When the brightness of the remote control indicator light decreases and the remote control distance becomes shorter, please replace the remote control battery CR2032. Press the battery cover switch with a tool, open the battery compartment, replace the battery of the same model and direction, and then close the battery cover.

 Illustration of the functions under the vehicle

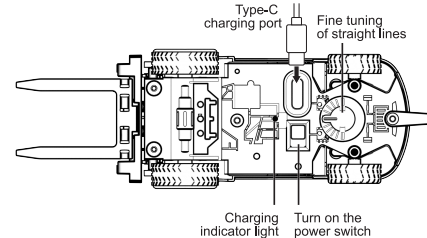

Mobile APP



 
Scan the QR code
Download and install

Note: When using the mobile phone APP to control the car, please turn off the power of the remote control first to avoid the remote control interfering with the operation of the APP

3. Model function description

1. When the battery is low, the entire vehicle will flash sharply and decelerate. After 50 seconds, the power will be turned off. (When entering low battery, please charge it in time.)
2. When the vehicle is not in sync with the frequency, it will flash slowly. During driving, if the frequency is lost beyond the distance of the remote control, it will also flash slowly.
3. After the forklift is tuned up, if there is no operation for about 3 minutes, it will enter sleep mode and needs to be restarted by pressing the power switch again.
4. During the charging process of the car, the red light is on. When the charging is completed, the red light dims. The charging process needs to be supervised by an adult throughout. After the power is fully charged, the charging plug should be unplugged to prevent accidents.
5. The charging port is Type-C, which can be used with mobile phone chargers but does not support fast charging.
6. The rear lights flash when reversing.

4. Schematic diagram of accessory assembly

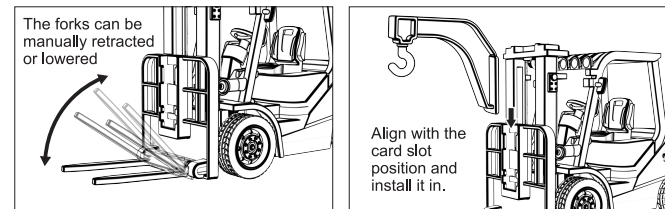

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.