


Installation & Operation Guide

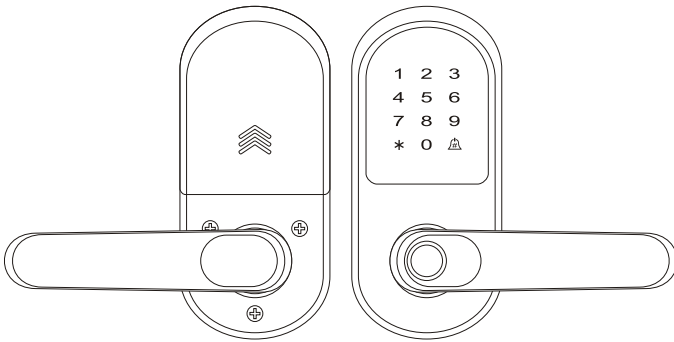

This guide contains important information about your lock.
Please keep this guide

Overall

1 Exterior Assembly

2 Key

3 Thread sleeve

4 Square pole

5 Latch

6 Screw

7 Striking Plate

8 Mounting Plate

9 Screw

10 Battery Cover

11 Interior Assembly

12 Pin

Tips: Specifications are subject to change without prior notice

Parts List

Key 	Exterior Assembly 	Latch 	
Screws for Latch/Striking Plate 	Striking Plate 	Mounting Plate 	
Screws for Mounting Plate and Exterior Assembly 	Interior Assembly 	Battery Cover 	
Screws for Interior Assembly 	Square pole 	Hole-Aligning Device (can use or not)	Pin

Ajustable Deadbolt Latch Set

1.TO CONVERT BACKSET FROM 2-3/8" (60mm) TO 2-3/4" (70mm)

2-3/8" 60(mm) → Pull → 2-3/4" 70(mm)



2.TO CONVERT BACKSET FROM 2-3/4" (70mm) TO 2-3/8" (60mm)

2-3/4" 70(mm) → Push → 2-3/8" 60(mm)


Installation Guide

1 PREPARE THE DOOR AND CHECK DIMENSIONS (with the TEMPLATE card)


- A** Measure to confirm the size of hole in the door frame. The wide is 1"(25mm), the length is 1-3/8" (35mm), the depth is 1"(25mm).
- B** Measure to confirm the thickness of door is 1-3/8" to 2" (35mm-50mm), the hole in the side of door is 1"(25mm).

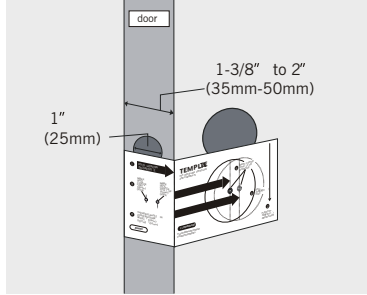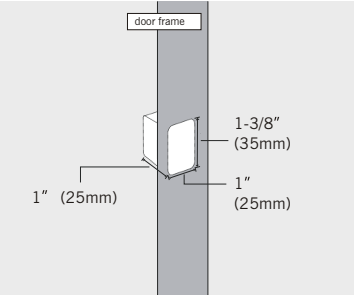

- C** Measure to confirm the backset is 2-3/8" or 2-3/4" (60mm or 70mm). And adjust the length of the latch accordingly.

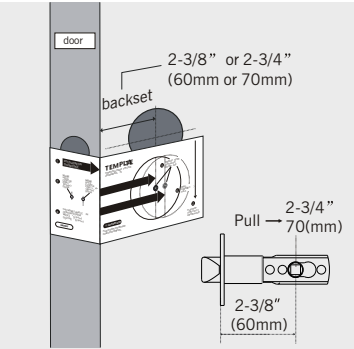


- D** Measure to confirm the size of hole in the door is 2-1/8" (54mm).

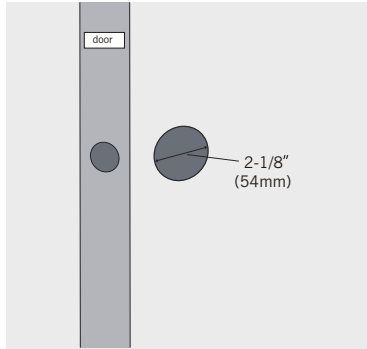

Installation Guide


2 INSTALL THE LATCH AND STRIKING PLATE

- A** Install striking plate and hole-aligning device in the door frame with two screws (D) provided.
- B** Insert latch into hole in side of door with the word " UP" up, and screw latch into door with two screws (D) provided.

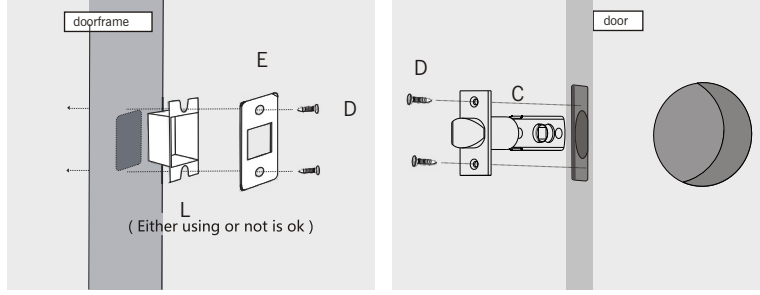


3 CHANGE HANDLE ORIENTATION

- 1.Please confirm the door opening direction before installing.

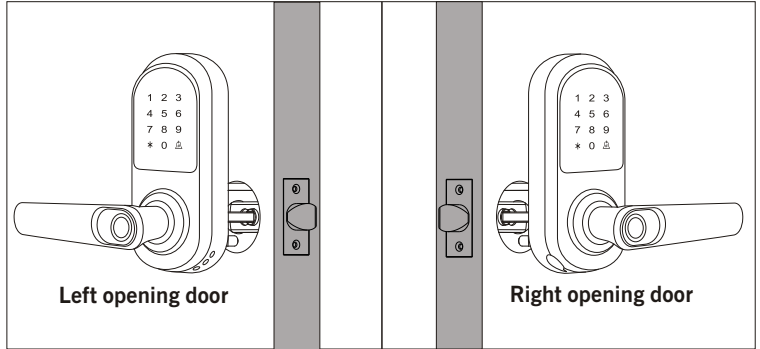

Installation Guide


- 2.Turn the handle to the desired direction, then tighten the reversing screw.

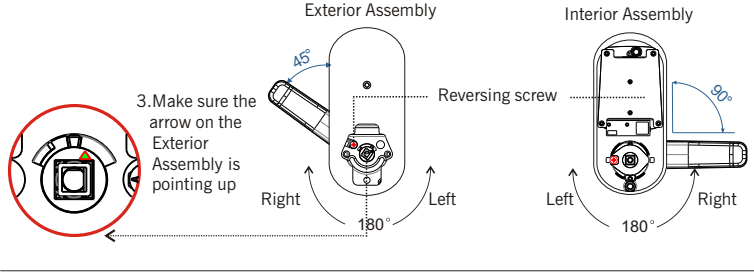

4 INSTALL THE SCREW SLEEVE AND EXTERIOR ASSEMBLY

- ⚠ IMPORTANT: Please make sure the arrow on the Exterior Assembly is pointing up.


- A** Insert the screw sleeve into the stud and tighten it.
- B** Install the Exterior Assembly

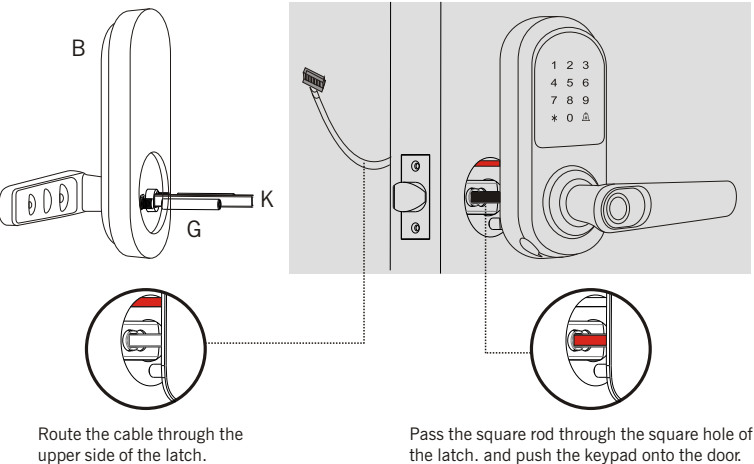

Installation Guide



5 INSTALL THE INTERIOR ASSEMBLY AND BATTERY COVER

- A** Route cable through the mounting plate, and Tighten screws evenly.
- B** Connect cables to the interior.

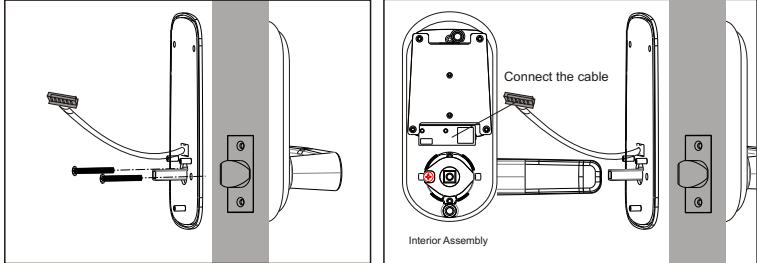

- C** Snap the interior assembly to the mounting plate and tighten the screws

- D** Insert 4 AA batteries and close the cover

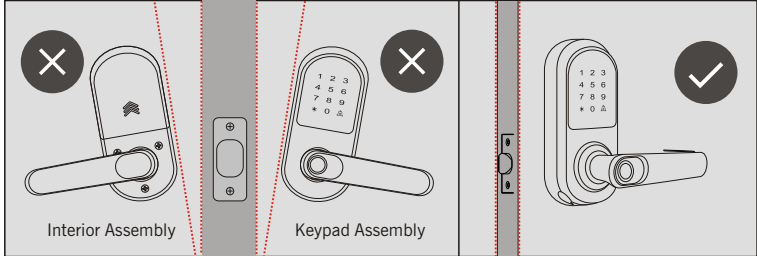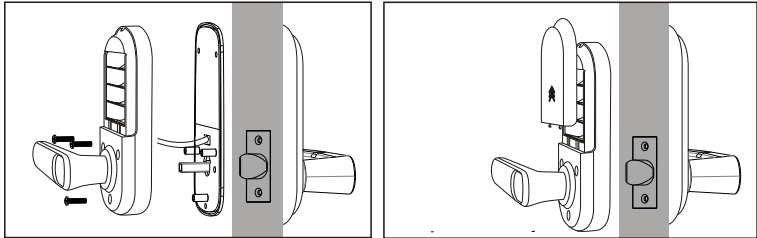


Factory Default Settings

Settings	Factory Default
Master Code	123456
Auto Lock	Enabled
Silent Mode	Disabled
Wrong Code Entry Limit	5 times
Shutdown Time	10 seconds
Passage Mode	Disabled

Programming Instructions

- 1.MASTER CODE (4 to 8digits)**
The default Master Code is 123456. It is required that you change it to a code of your own before programming.
- 2.USER CODE (4 to 8 digits)**
If the password is unlocked unsuccessfully, please reset the password according to [Quick Set Up-5.Add User info] carefully.

Exterior Assembly

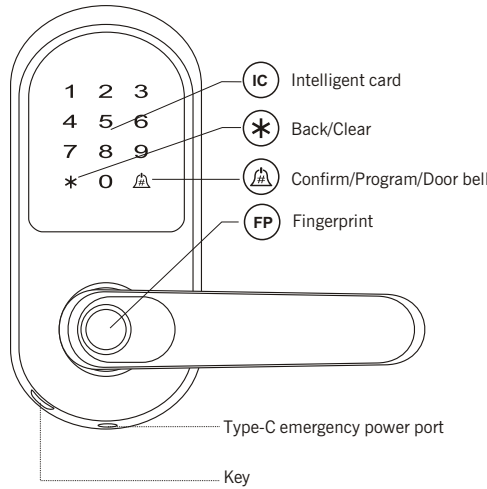


Interior Assembly

Restore To Factory Default Settings

The default Master Code is 123456.It is required that you change it to a code of your own before programming.

- 1.Open and unlock the door.
- 2.Find a paper clip, put it into the hole at the bottom, long press for 5 seconds until the lock voice prompts "initialized successfully"

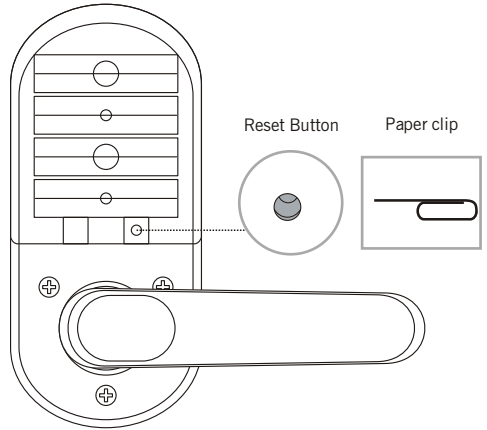

⚠ The default Master Code is 123456. It is required that you change it to a code of your own before programming.

Definitions

- 1.MASTER INFO**
The administrator's fingerprint, password, or IC card. Required for programming and feature settings. It can also be used to unlock.
- 2.USERS INFO**
Fingerprints, passwords, and IC cards of non administrators. Can only be used for unlocking.
- 3.WRONG ENTRY LIMIT**
If you enter incorrect unlock information for more than five consecutive times, the system displays the lock status. After the system is locked, operating the keyboard or swiping the card or entering the fingerprint again, even if the registered record is entered, the system will be prompted to lock and the lock time will be updated. The system is automatically unlocked 90 seconds after being locked.
- 4.THE “*” KEY**
To clear the key/backkey, when entering the password, click to clear the previous input and press 3 consecutive times to clear the input Enter.
- 5.THE “#”KEY**
Confirm key or enter menu function key, press it as the door bell when there is no input when waking up before configuration networking, and press it after configuration networking to voice prompt "Requesting remote unlocking".
- 6.ANTI-PEEPING FUNCTION**
User can prevent pin code exposure to strangers by entering random digits before and after the pin code.

291 316874 673
Random digits password Random digits

Quick Set Up

⚠ The default Master Code is 123456. It is required that you change it to a code of your own before programming.

- 1.When you enter the wrong button, you can press * clear it.
- 2.If you do not enter any buttons within 10 seconds, the system will exit the programming mode, and you can attempt programming procedure again.



⚠ When the passage mode is turned on, it will remain unlocked until the correctunlocking information is input again.

Advanced setting options

Powered By




Smart Home Platform

The lock supports TUYA Wi-Fi protocol,you can manage your lock byconnecting TUYA APP. Search “TUYA” in the app market or scan the code to get the APP.



How to connect the app

Download and install the TUYA APP, register and log in

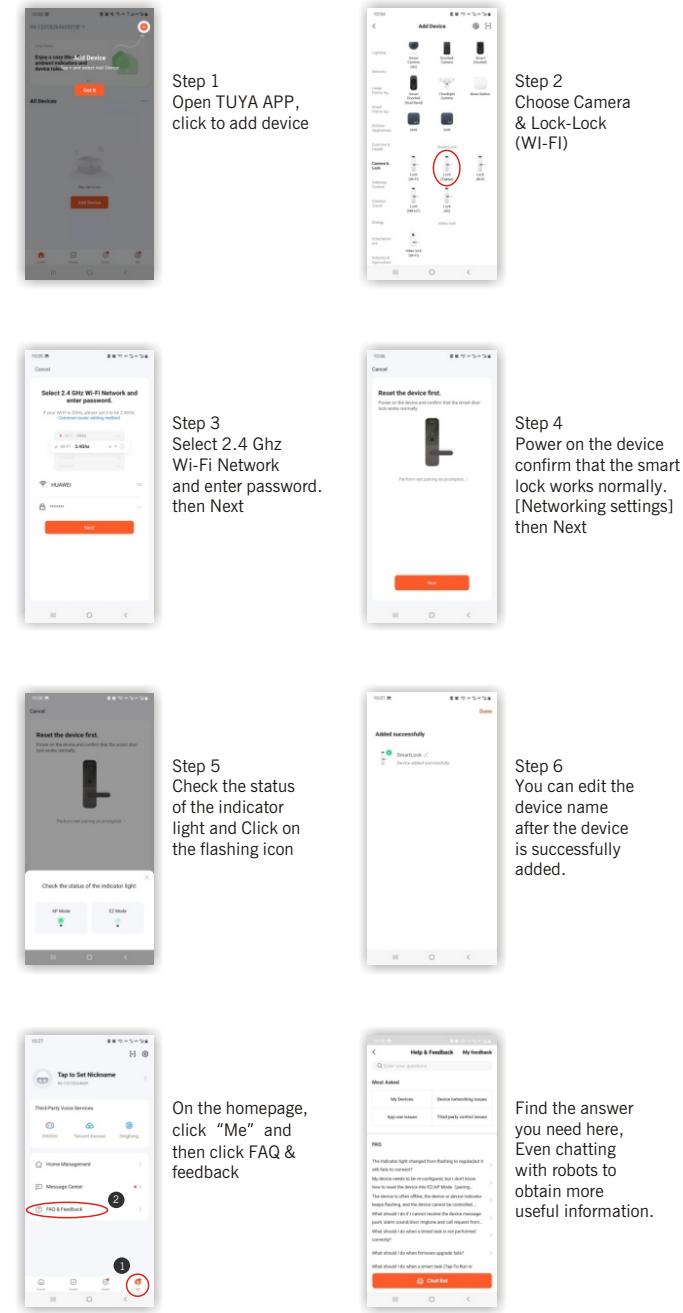


The basic functions of the application

Powered By



Introduction to some functions


You can manage almost the full functionality of your lockon your phone.

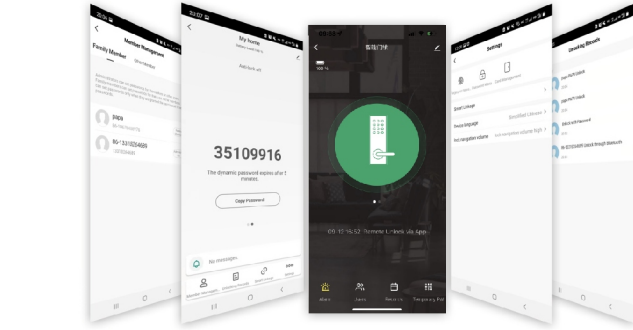


For more functions, please refer to the APP.

Remotely unlock

 You can remotely unlock the door for visitors through thenetwork.



 When your visitor presses the # key (doorbell key) on the door lock, you will receive a system push message.




If you confirm, the door lock will be remotely opened.


Remote dynamic password

You can generate a remote dynamic password on TUYA APP and send it to visitors.

 Visitors can enter the password on the keyboard to unlock the lock without connecting to the network.




 Click to generate remote dynamic password



Copy password and send it to visitors.

⚠ The remote dynamic password will work in 5 minutes. If necessary, please try again.

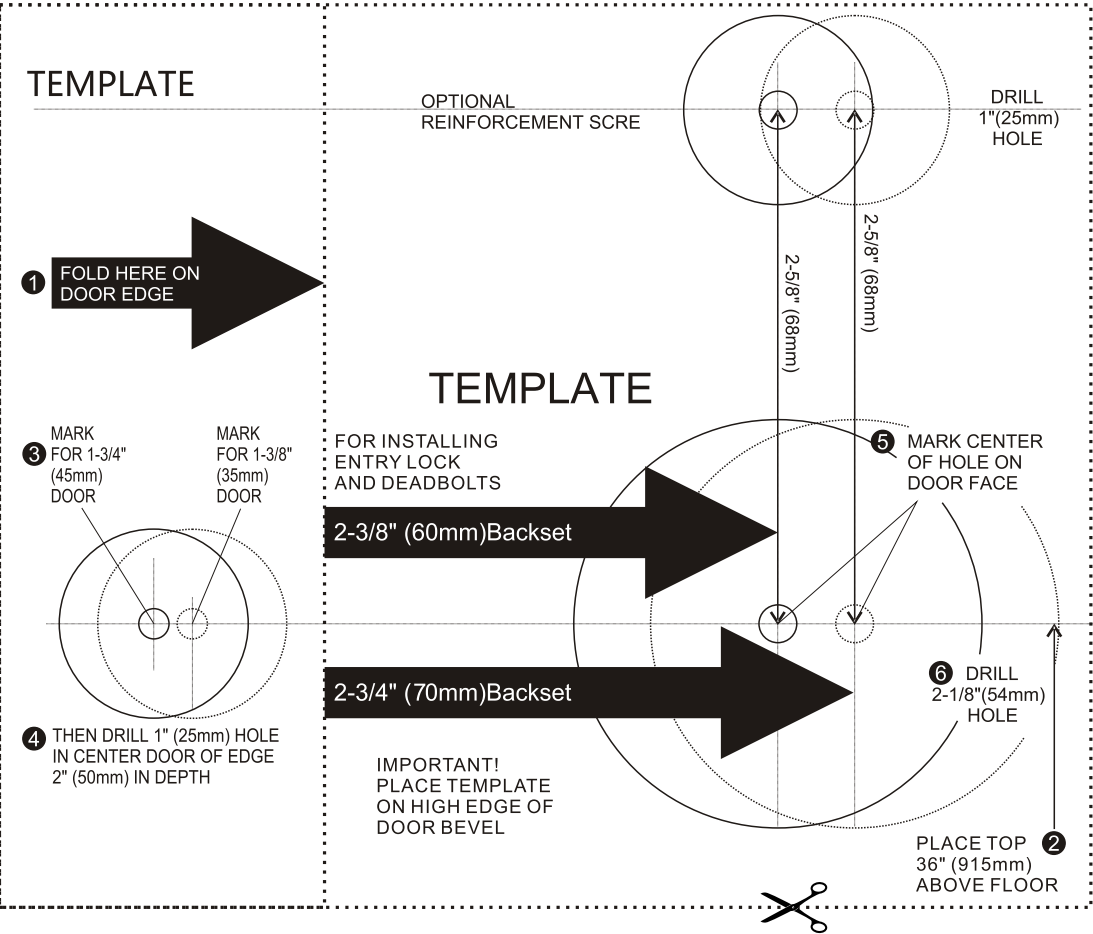

FCC warning statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.